

# Bluetooth glasses

## an instruction manual

### Product features

Fashion design, suitable for all kinds of people, semi open stereo waterproof speaker, comfortable to wear, Bluetooth 5.0 low power version, compatible model, removable lens.

### Sketch Map



1. Switching on / off answering and dialing language switching
2. Volume up / down Previous / next
3. Microphone pickup hole
4. USB interface

## product specification

Product name	Bluetooth glasses
Bluetooth version	V5.0
frequency; rate	2.402-2.480GHz
transmission power	Class2
Bluetooth mode	HSP/HFP/A2DP/AVRCP
Transmission distance	About 15 meters
Play duration	3-4hours
Talk time	4-5hours
Charging time	2-3hours
Battery	Lithium polymer 110mah
Acceptance sensitivity	-40dbm
Audio range	20Hz-20KHz

degree of distortion	$\leq 0.2\%$ 95dB
Weight of single machine	Flat glasses 41g / Sunglasses 43g
Full set weight	Flat glasses 141g / Sunglasses 143g
working temperature	-15° -55°
Storage temperature	-20° -65°

#### instruction for use

Power on: in the off state, press and hold the switch on key for 2 seconds, the blue light will flash, and the prompt tone will prompt "start up".

Shutdown: in the startup state, press and hold the on / off button for about 2 seconds, the red light flashes, and the prompt tone indicates "shut down".

#### Pairing and connecting

Pairing: in the power on state, until the red and blue indicator lights of the machine flash alternately, the machine is already in the pairing mode. Open Bluetooth of the device to be connected, search and connect to km Fran, and the machine will prompt "connection succeeded".

If Bluetooth is turned off, the machine will prompt "disconnected".

When the machine is turned on, there is no paired connected device, and the machine will shut down automatically after 2 minutes. "

Automatic connection: if the machine has been connected to Bluetooth once, the next time you turn on the machine, it will automatically connect with the Bluetooth device, and the prompt tone "connection succeeded".

#### Automatic loopback:

1. Within the range of connection, the paired bluetooth device will be automatically connected after starting up, and the prompt tone will prompt "pairing succeeded";

2 call, power off, call, standby, listening to music, away, the device (within 3 minutes) back to the range of connection, the prompt tone prompt "pairing success".

## Language switching

After the machine is turned on, when there is no Bluetooth connection, press the on / off key twice to switch between Chinese and English.

Answer call / call number / hang up / reject / replay

Answer the phone: when calling, press the machine on / off button for a short time to answer the call.

Call number: when calling, the machine will automatically report the call number.

Hang up the phone: in a call or call, short press the machine on key once.

Refuse to answer a call: when calling, press and hold the machine on / off key for about 2 seconds.

Last call replay: double click on / off button in standby mode and listening mode.

## volume control

Volume increase: press the "+" button to increase the volume. When the volume is adjusted to the maximum level, the machine will prompt "maximum volume"

Press the volume down button.

Playing music / changing music adjust

When the machine is playing music: short press the on / off key once to pause the play, and then press the on / off key once again to continue playing.

Previous song: press and hold the "+" button to go up

Next song: long press the "-" button to next song

Power query: when the machine is on, enter the Bluetooth of the device, and the current power can be displayed in the paired device.

Low power alarm: in various startup States, when the battery voltage is lower than 3.3V, the prompt tone will prompt "please charge".

Low power shutdown: in various startup States, when the battery voltage is lower than 3V, the machine will automatically shut down.

Charging: insert USB into the charging mode, the red light will be on for a long time, and the blue light will be on after full charge

## **matters needing attention**

Please use this product correctly according to local laws and regulations, and keep enough attention to ensure safety.

In order to ensure your safety, please don't turn down the loud volume to listen to music in some environment which affects the safety.

The product must be used or played by children. Small parts may cause scratch or suffocation.

Please pay attention to use this product according to regulations in some special areas with warning instructions (such as hospitals, gas stations and environment with potential explosion danger)

Do not disassemble or damage the internal battery. Dispose of the waste battery according to local regulations.

## Maintenance and maintenance

Please turn off the power when the machine is not in use.

Do not place the machine in liquid or wet places

Do not put the machine close to the fire source to avoid explosion

Do not hit the machine with sharp objects to avoid scratch or damage.

Please keep the machine in a dry place.

**FCC Caution:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

