 


Y6/Y6S

无线K歌麦克风&音箱 Wireless karaoke microphone&speaker

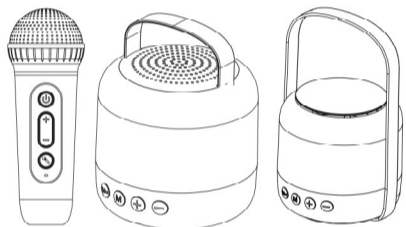

快速入门指南

 
前言

感谢您购买本公司产品。使用本产品前，请仔细阅读本说明书请您务必保留好此说明书方便下次查阅。所有内容经过本公司精心编写如有印刷与遗漏问题或错误请谅解。

注意事项

- 不要在强磁场、多尘和潮湿的环境中使用本机。
- 使用初期请保持通风，否则容易引起机内温度升高，最终损坏线路。
- 当移动本机装置时，先关机，断开与其它设备相应的连接线。
- 音箱表面和扬声器应避免接触腐蚀性液体和气体，不宜长期放置于阳光直射处。如有灰尘可用定期用干净的软布清理，如有污渍，可用中性强化剂的清洁剂擦拭。
- 切勿用力挤压开关和其他器件。
- 如机器突然发生冒烟或者其他异常现象、请迅速关机、拔出充电插头，避免引起火灾事故。并联系当地经销商进行处理。
- 因产品的性能和功能而发生的变化，恕不另行通知。
- 本产品无防尘、防潮和防水功能。
- 请勿擅自拆卸本机，以免发生危险。
- 请读者仔细阅读CCC认证标准，及时了解CCC认证标准所要求的电话认证标准。
- 为减少不必要的电源损耗，本产品在无信号输入10分钟后会自动关机。

功能示意图

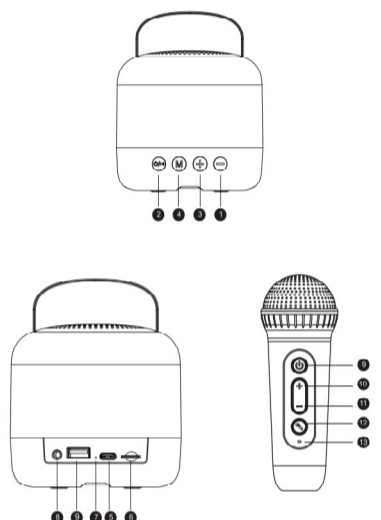

音箱按键操作

- 音量减键:短按音量减小;长按一下;
- 音量加键:短按音量增加;长按上一曲;
- 模式键:短按切换蓝牙、TF卡、U盘、AUX模式;要有相应设备插入;才可能切换灯光音乐灯;双击开音乐灯;切换选择音乐灯;
- TYPE-C充电口
- TF卡接口
- 充电指示灯:充电式灯常亮,充满电灯灭
- AUX接口
- U盘接口

话筒按键操作

- 开机键:长按开机;短按切换:选前页、混响调节、伴奏音量;双击控制音箱播放前;
- 寻键:短按调节话筒音量,伴奏音量,混响倍数;长按控制音箱上一曲;
- 寻键:短按调节话筒音量,伴奏音量,混响倍数;长按控制音箱下一曲;
- 话筒键:短按切换KTV模式,女变男,男变女,娃娃音,魔音;双击话筒元音自行/关闭;长按嘴盖关闭/打开;
- 开机指示灯:无线话筒连接成功灯常亮,无线话筒充电时灯常亮,充满电灯灭,低电量时灯打,每5秒闪烁下;

使用说明

蓝牙模式

- 蓝牙连接:手机默认蓝牙,进入蓝牙模式或按“MODE”按键切换蓝牙模式,打开手机蓝牙扫描,搜索到“Y6/Y6S”后点击配对,连接成功后有提示音。
- 播放音乐:打开手机或其他设备蓝牙设备,下载播放自己喜欢的歌曲播放。
- 机盖与手机连接一次后,蓝牙具有记忆功能,开机后可以自动连接或手动连接,如要断开,可以通过手机蓝牙设备断开或者双击开机键强制断开蓝牙。

U盘模式

(1)插入U盘,机器会自动进行扫描优先播放,并且有提示音,当U盘都插入时,可以通过短按“MODE”按键切换。

(2)插入TF卡,机器会自动进行扫描优先播放,并且有提示音,当TF卡都插入时,可以通过短按“MODE”按键切换。

AUX(外接音源输入)模式

(1)插入AUX外接音源线,音源会自动进行扫描优先播放,并且有提示音

(2)当AUX、TF卡同时插入,可以通过短按“MODE”按键切换。

本产品有5种音灯,分别呈彩色旋转,交替变换,全彩呼吸,单色呼吸,渐变效果灯,并配有七彩变色灯,双击MODE键一次切换一种灯效,长按MODE键关闭灯效,无任务者关反用

音源源同时同时开,2.4G无线信号自动配对,此时用户可以开始唱歌,此时用户可以调整自己的喜好操作按调节到自己喜欢的风格,注意:伴奏音量只能在话筒切换时调整

产品基本参数

- 产品名称: Y6/Y6S
- 箱体材料: ABS材质
- 蓝牙版本: 蓝牙5.3
- TF卡: 最大支持32GB
- 蓝牙接收距离: >10M
- 扬声器阻抗: 4Ω
- 扬声器功率: 2W
- 信噪比: >25dB
- 失真率: < 5%
- 额定功率: 50W*2 180W*2
- 外部接口: Type-C, AUX, U盘, TF卡接口
- 充电电压: 5V/1A
- 控制方式: 按键调节
- 箱体尺寸: 105x105x100.5mm
- 工作温度: 0~45℃
- 执行标准: GB/T13837 2012; GB17625.1-2012; GB8898-2011
- *根据公安部发布法规,产品的功能参数及图片内容等可能随时调整,不能保证相关包装及说明书对更新,顾客以实际使用时的功能及内容为准。

保修条款

一、根据国家有关法规,全国实行三包。

产品的用户,将根据国家有关部门在2002年7月23日发布的《家用视听商品修理更换退货责任规定》享受全国三包服务。

二、保修原则

- 在正常使用情况下,出现故障,未经修理,自购买之日起产品主机七天包换,一年内保修,终身维护。
- 该机等电子产品,如经有资质的维修人员可以“前期维修”,不在保修范围内,属下列情况之一者不实行三包,但是可以实行收费修理:
 - 人为因素造成的损坏,包括非正常工作环境使用,不按说明使用所引起的损坏等;
 - 用户私自拆机,自行修理,改装或经非本公司授权单位维修;
 - 因不可抗力(如水灾、火灾、地震、雷击等)造成的损坏;
 - 无产品保修卡和有效购买凭证的;
 - 在产品保修卡购买凭证与产品型号不符或者私自涂改的。

三、保修方法

- 三包时,必须保留保修卡和有效购买凭证,如有遗失,请与本公司客服服务部联系,查询用户信息档案。
- 符合包换的产品,您可与代理商直接办理换货手续,换货时,主机有故障,则免费更换本公司新机,同等型号,无故障配件有故障,可免费更换原厂配件。
- 对需要维修的产品,您可与本公司指定的代理商或售后服务中心取得联系并维修事宜。
- 保修卡在购买产品时请仔细阅读,本产品售后服务卡由售后服务部负责,保持卡卡背面的完好,请随用户在保修期间一起让服务人员填写并保留,因快卡卡背面的完好,以便更好的享受本公司提供的专业服务。

 
申明

本产品不同型号,功能会有所不同,最终解释权归公司所有。

您在核对中有任何疑问,请随时与我们联系,我们将竭诚为您服务。 公司承诺:严格执行国家三包服务政策。

Y6/Y6S

Wireless karaoke microphone&speaker

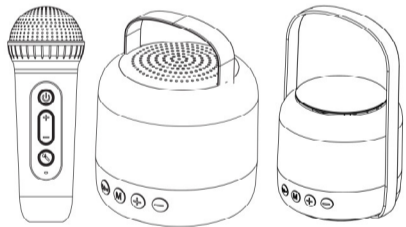

quick start guide

 
PREFACE

Thank you for purchasing our company's products. Before using this product, please read this manual carefully and be sure to keep it safe. The manual is convenient for future reference, and all content has been carefully prepared by our company. If there are any printing, omission, or errors, please understand.

NOTE

- Do not use this machine in extremely hot, cold, dusty, and humid environments.
- Do not drop, collide, or vibrate violently during use.
- Moderate ventilation should be maintained around the body, otherwise it may cause an increase in internal temperature and ultimately damage the wiring.
- When moving the local device, first shut down and disconnect the corresponding connecting wires with other devices.
- The surface of the speaker and the speaker should avoid contact with corrosive liquids and gases, and should not be placed in direct sunlight for a long time. If there is dust, it can be cleaned regularly with a clean soft cloth. If there are stains, they can be cleaned without strong agents. Wipe with solvent.
- Do not forcefully press switches and other devices.
- If the machine suddenly emits smoke or other abnormal phenomena, please quickly shut down and unplug the charging plug to avoid causing an accident and contacting a local dealer for repair.
- Changes that occur due to the performance and functionality of the product will not be notified separately.
- This product has no dustproof, moisture-proof, or waterproof functions.
- Do not disassemble this machine without authorization to avoid danger.
- If consumers use a power adapter for charging, they should purchase a matching device that has obtained CCC certification and meets the standard requirements. The power adapter:
- To reduce unnecessary power loss, this product will automatically shut down after 10 minutes of no signal input.

FUNCTIONAL DIAGRAM

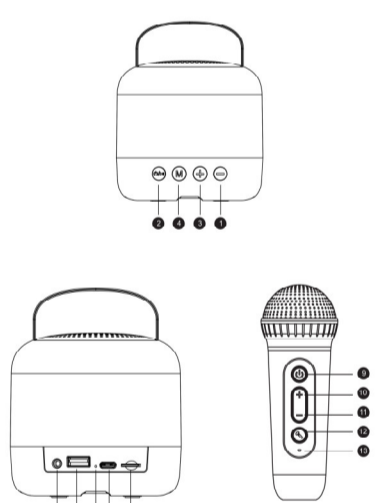

SPEAKER BUTTON OPERATION

- Volume down button: Short press the volume down button; Long press one song; turn on/off; double-click Bluetooth to turn on/off;
- Power on button: Short press to pause playback; Long press for 2-3 seconds to turn on/off; double-click Bluetooth to turn on/off;
- Volume up button: Short press the volume up button; Long press the previous song;
- Mode key: Short press to switch between Bluetooth, TF card, USB drive, and AUX modes; TF card, USB drive, and AUX modes can only be switched when corresponding devices are connected; Long press to turn off the music light; double-click to turn on the music light; switch to select the music light;
- TYPE-C charging interface;
- TF card interface;
- Charging indicator light hole, charging type red light always on, fully charged light off;
- AUX interface;
- U-disk interface;

MICROPHONE BUTTON OPERATION

- Power on button: Long press to turn on/off; Short press to switch: microphone adjustment, reverb adjustment, accompaniment adjustment; Double click to control the speaker playback pause;
- Key: Short press to adjust the microphone volume, accompaniment volume, and reverb factor; Long press to control a song on the speaker;
- Key: Short press to adjust the microphone volume, accompaniment volume, and reverb factor; Long press to control the next song on the speaker;
- Key: Short press to switch: KT mode, female to male, male to female, girl sound, Warcraft sound; Double click on the elimination vowel to turn it on/off; Long press to turn off the microphone;
- The blue light flashes quickly when the wireless microphone is successfully connected. The blue light remains on, while the red light remains on when the wireless phone is charging. The red light turns off when fully charged, and flashes twice every 5 seconds when the battery is low;

INSTRUCTIONS

BLUETOOTH MODE

- Bluetooth connection: When turned on, the default setting is Bluetooth. Enter Bluetooth mode or press the "MODE" button to search to Bluetooth mode. Turn on Bluetooth scanning on your phone, search for "Y6/Y6S" and click on pairing. After successful connection, there will be a prompt tone.
- Play music: Open your phone or other Bluetooth device, download and play your favorite songs.
- After connecting the machine to the phone once, Bluetooth has a memory function, which can be automatically or manually connected after turning on the phone. If you need to disconnect, you can use your mobile Bluetooth device to disconnect or double-click the power button to forcibly disconnect Bluetooth.

TF CARD MODE

- Insert the TF card, and the machine will automatically perform a priority playback with a prompt sound. When all TF cards are inserted, you can switch by briefly pressing the "MODE" button.

USB mode

(1) Insert the USB flash drive, and the machine will automatically prioritize playback with a prompt sound. When all the USB flash drives are inserted, you can switch by short pressing the "MODE" button.

(2) When both AUX and TF cards are inserted simultaneously, you can switch by briefly pressing the "MODE" button.

AUX (EXTERNAL AUDIO INPUT) MODE

(1) Insert the AUX external audio cable, and the audio system will automatically play back with priority and a prompt tone.

(2) When both AUX and TF cards are inserted simultaneously, you can switch by briefly pressing the "MODE" button.

MUSIC LAMP DESCRIPTION

This product has 5 types of music lights, including color rotation, alternating transformation, full color breathing, monochromatic breathing, and gradient effect light. The default mode for turning on is full color rotating light effect. Double click the MODE key to switch between one light effect at a time, and long press the MODE key to turn off the light effect.

WIRELESS MICROPHONE USAGE

The speaker and microphone are turned on simultaneously, and the 2.4G wireless signal is automatically paired. At this time, users can start singing, and then can adjust the buttons to their favorite style according to their preferences. Note: The size of the accompaniment music can only be adjusted when the microphone is switched to reverb mode.

SIGNAL TO NOTE RATIO: > 8:10Distortion rate: < 5%Frequency response range: 50Hz-18KHzExternal interfaces: Type-C, AUX, USB drive, TF card interfaceCharging voltage: 5V/1AControl method: button adjustmentSpeaker size: 105x105x100.5mmWorking temperature: 0~45℃Executive standard: GB/T13837-2012; GB17625.1-2012; GB8898-2011

*According to the company's business development, the functional parameters and image content of the product may be adjusted at any time, and cannot guarantee that: Timely updates of relevant packaging and instructions shall be based on the actual functionality and content used by customers.

WARRANTY TERMS

1. According to relevant national regulations, we will fully implement the Three Guarantees policy.

The users of the product will follow the "Household Audiovisual Products" released by relevant national departments on July 23, 2002. Regulations on Responsibility for Repair, Replacement, and Return "Enjoy comprehensive three guarantees service.

2. Warranty principles

- Under normal operating conditions, if a malfunction occurs without disassembly or repair, the product will be replaced within seven days from the date of purchase, with a one-year warranty and lifelong maintenance.
- If there are quality issues with product accessories such as connecting cables before sale, they can be replaced with new ones and are not covered by the warranty. Under one of the following circumstances, three guarantees are not implemented, but paid repairs can be implemented:
 - Damage caused by human factors, including damage caused by use in abnormal working environments and failure to follow the instructions;
 - Users dismantle the machine without permission, repair, modify or repair it without the joint guarantee unit of our company;
 - Damage caused by force majeure (such as floods, fires, earthquakes, lightning strikes, etc.);
 - Without a product warranty card and valid purchase voucher;
 - The product warranty card and purchase voucher do not match the product model or are altered without authorization.

3. Warranty method

- When providing three guarantees, one must present a warranty card and a valid purchase voucher. If lost, please contact our customer service department system, query user information files.
- For products that meet the warranty requirements, you can directly handle the exchange procedures with the agent. If there is a malfunction in the host during the exchange, free replacement of our company's same specification and model host; If the accessories of the host are faulty, replace them free of charge.
- For products that require maintenance, you can contact our designated agent or after-sales service center for specific repair matters.
- Please fill out the warranty card immediately after purchasing the product. It is invalid without the company's after-sales service seal.
- Please make sure to fill out the warranty card. Please ask the salesperson to collaborate with the customer on the sales site to carefully fill out the warranty information. Return the receipt card to our company for better enjoyment of our professional services.

4. AFFIRM

We cannot control any misunderstandings that users may have about this manual, therefore, our company will not use it again. We are responsible for any accidental damage that may occur during the process of this manual and do not assume any responsibility for any third party damage caused by the use of the product. Feng is responsible for claiming compensation.

This product has different batches and functions, and the final interpretation rights belong to the company.

If you have any questions during the verification, please contact the dealer. The company promises to actively implement the national three guarantees service policy.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

RF Exposure

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be used as portable exposure without any restriction.