


Dear users: Thank you for using our products, please read this manual carefully before use, so as to operate and use it correctly, and better grasp the fun that this product brings to you. The pictures in the manual are for reference only, the functions and parameters are subject to the actual product, and are subject to change without notice.

- *Note 1: This product does not come with a power adapter
- 2: If the battery is not replaced properly, there will be a risk of explosion, and it can only be replaced with the same type or equivalent type of battery.

Precautions for product use

- (1) Unless there is a special indication in the manual, do not attempt to disassemble or replace any parts of the product.
- (2) Do not put the product in water or any other liquid, this product is not waterproof design.
- (3) If any liquid accidentally gets inside the product, disconnect it immediately and remove the product.
- (4) To avoid electric shock, make sure that your hands are not wet when installing or uninstalling the product.
- (5) Do not place this product near a heat source or directly expose it to a fire source.
- (6) Do not place this product in an environment with strong electromagnetic force, otherwise it will cause product failure.

Keys & Functions

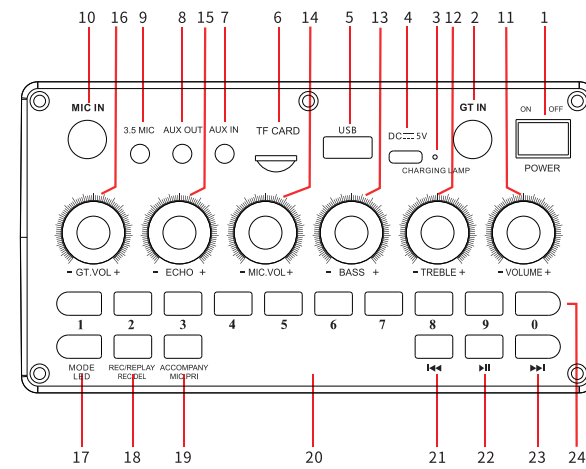

1. power on/off
2. Musical Instrument Input: External musical instrument jack, support for guitar and other musical instruments input
3. Charging Indicator: Lights on when charging, off when fully charged
4. Charging Port: When the speaker's battery is low, please remember to charge it in time with the provided charging cable.
5. USB: Insert a USB card to play music stored on the USB card.
6. TF CARD: Insert a TF card to play music stored on the TF card
7. Audio In: Use a 3.5mm audio cable to connect one end to plug into this port, and the other end to plug into your cell phone or computer, and select your favorite accompanying music for accompaniment.

8. Audio out: Plug one end into this port and the other end into your phone or computer using a 3.5 mm audio cable.
9. Condenser Mic: 3.5mm condenser mic input
10. Microphone Input: External 6.35mm dynamic microphone
11. VOLUME: After the machine is powered on, the volume can be controlled by rotating the knob left or right - turning it to the left ("-") decreases the volume, and turning it to the right ("+") increases the volume.
12. Treble: Music Treble Adjustment Knob, turning it to the right turns the treble up, turning it to the left turns the treble down.
13. Bass: music bass adjustment knob, turning it to the right turning it to the left to decrease the bass.
14. MIC VOL: You can adjust the microphone volume according to your own needs
15. Microphone Reverb: Adjustable reverb effect, clockwise rotation increases the reverb, counterclockwise rotation when using the microphone, turn to reduce the reverb, the goal is to make the microphone vocals become more natural.
16. Instrument Volume: When inserting instrument audio into the instrument port, rotate clockwise to increase the sound of the instrument and counterclockwise to decrease the sound of the instrument.
17. Mode/LED: Short press to switch Bluetooth, USB, TF card, AUX, FM, five modes, long press to select LED light and switch function.
18. Record/Playback/Record Delete: Insert the USB flash disk and short press once to record the microphone sound directly into the USB flash disk, then short press once to play the recording just now, and long press to delete the recording under the playback state. (Note: The recording function requires a USB drive or TF card to be inserted, For recording, a wired microphone must be connected or a wireless microphone must be turned on.)

19. Eliminate the original song/Microphone Priority: Short press to eliminate the original sound of the music, short press again to return to the original sound of the music, long press for the Microphone Priority function.
 20. Display box: Status display after power on
 21. PREV: Short press for previous song, Long press for fast rewind
 22. PLAY/PAUSE: Short press to pause/continue playback : When the karaoke machine has been connected to a Bluetooth device, long press this button for 3 seconds to release the link, then you can reconnect the new Bluetooth device.
 23. NEXT: Short press for next song, Long press for fast forward.
 24. Number key: Press the "0-9" number keys to quickly select the song you want, if you want to play the 3rd song press the number 3 first. The display shows "0003", and the third song is played after 3 seconds; To play the 12th song, press the number button 1 first, and then press the number key 2 (you must have this song in the folder to select it) After that, the 12th song will be played, and the other songs you want will be selected similar (Note: it only works when playing music from USB and TF)
- Product operating instructions**
- (1) **Bluetooth connection**
Short press the "Mode Button" on the panel to select Bluetooth mode, turn on the Bluetooth function of your device, search for the Bluetooth device of the karaoke machine, Bluetooth name: HBL100 , and then click to connect the machine's Bluetooth. If you can't connect, please restart the machine or your device and reconnect.
- Tips:**
Bluetooth connection status, users can control music playback through the audio source device or speaker buttons, which is more convenient and convenient.
- (2) **USB flash drive playback**
Insert the USB disk into the USB card slot, the speaker will automatically play the music in the USB disk, the product will automatically read the audio files in the USB disk, and the user can use the speaker button to play music.

- (3) **TF card playback**
Insert the TF card into the card slot, the speaker automatically plays the music in the TF card, the product automatically reads the audio file in the TF card, and the user can use the speaker button to play music, and the maximum capacity is supported 32G.
- (4) **FM radio (FM mode)**
Convert the short press mode key to FM mode, long press the "Play/Pause" button to automatically search and store the station, press the upper and lower songs to select the station. Note: The closing effect is related to the use environment and signal strength, the strong signal receiving effect is good, and the weak signal receiving effect will be worse.


Charge

Plug one end of the power cord into the charging jack of the unit, and the other end of the USB plug into the charger with USB interface for charging, while charging, the red indicator light will be on, and the red will turn off when it is fully charged.

Notes:

1. If the machine is smoking or other abnormalities, please contact the dealer or contact our after-sales service for processing.
2. If the inside of the machine is exposed to rain or moisture, please place the machine in a ventilated place to dry.
3. Do not bake the machine at high temperature, otherwise it will be easy to burn or make the internal components of the machine fail.
4. This product must not be exposed to such as sunlight, fire, or similar excessive heat
5. Do not throw it to avoid damage caused by falling.
6. If the battery is not properly replaced, there will be a risk of explosion, and it can only be replaced with the same type of battery. The battery (battery pack or combination battery) should not be exposed to such as sunlight, fire roasting or similar overheating.

Remote control buttons and functions

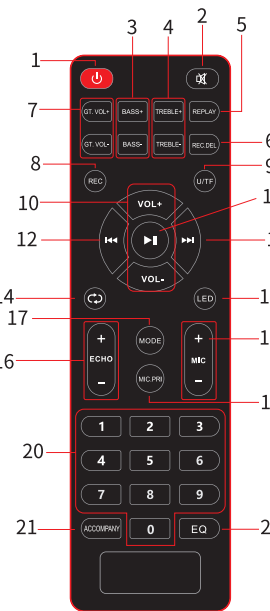

1. power on/off (Used on a karaoke machine with the power turned on)
2. Mute: turns off sound when pressed
3. Bass-size function buttons
4. Treble-size function buttons
5. Loop replay
6. Recordings are deleted
7. GT volume level (instrument input volume adjustment)
8. recording
9. switch USB, TF card, modes
10. VOL: "+" to increase volume, "-" to decrease volume
11. Play/Pause
12. PREV: Short press for previous song
13. NEXT: Short press for next song
14. Loop Playback
15. LED light style selection and on/off switch
16. Microphone Reverb
17. Mode switching
18. MIC VOL: "+" to increase volume, "-" to decrease volume
19. Microphone on/off
20. 0-9 numeric key function
21. Press to turn off the original singer's voice.
22. EQ Music Adjustment

FCC Caution:
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

