
SPIROK STAR

ferrofluid speaker

Ferrofluid Audio Visualizer

A Tech Art Speaker


USER MANUAL

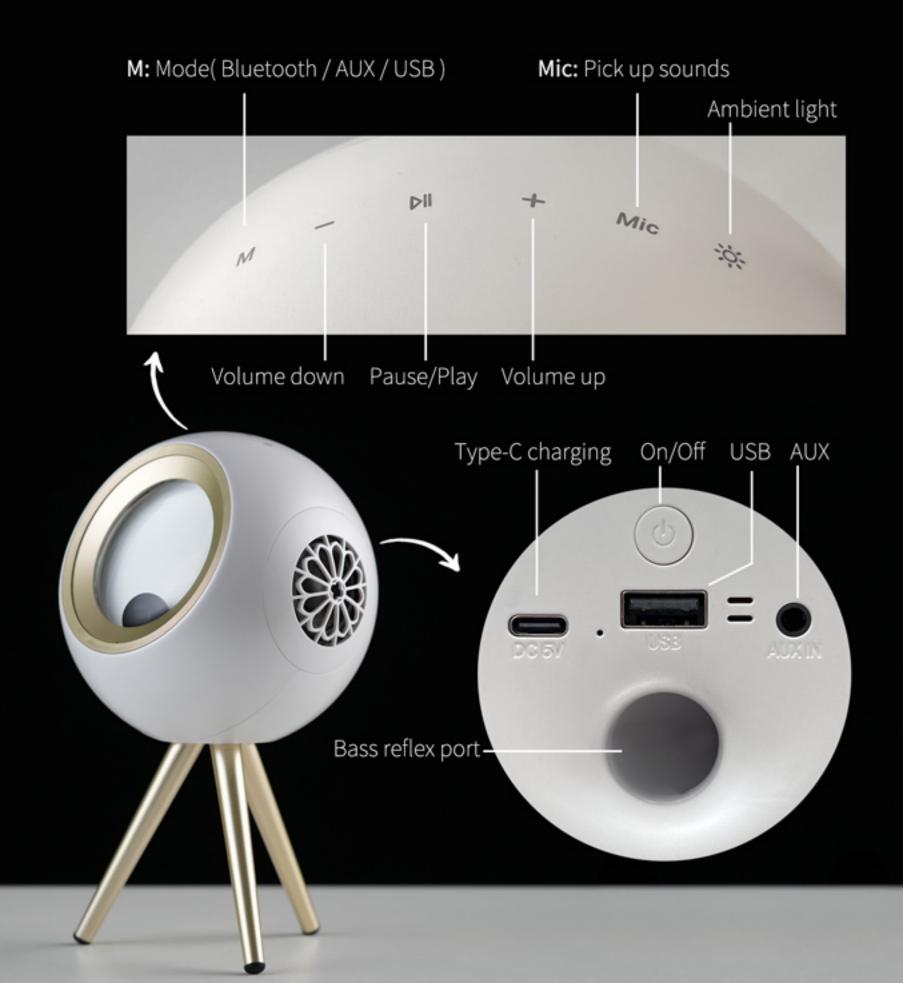

CONNECTING VIA Bluetooth (PAIRING)

WHEN TURN ON SPIROK SPEAKER THE DEFAULT MODE IS BLUETOOTH WAITING FOR PAIRING. THE BLUE INDICATOR STARTS TO BLINK.


001. ENABLE Bluetooth ON YOUR DEVICE (SMARTPHONE, TABLET, COMPUTER).
002. SELECT SPIROK STAR FROM THE Bluetooth LIST AND ACCEPT PAIRING.
THE Bluetooth INDICATOR ON THE SPEAKER STOPS BLINKING AND REMAINS
LIT WHEN THE UNITS ARE CONNECTED.

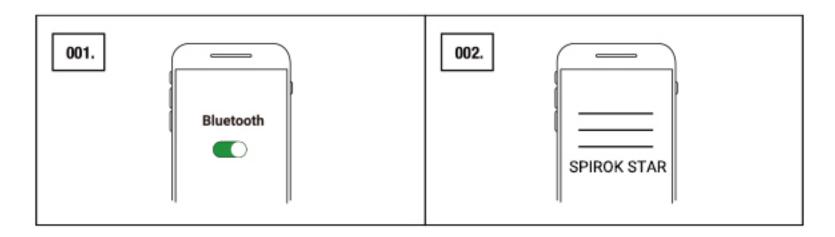



CONNECTING VIA USB/AUX

- 001. STORE AUDIO FILES ON A USB DRIVE AND PLUG IT INTO THE USB PORT. PRESS Mode BUTTON TO SELECT USB AS THE INPUT. THE SPEAKER WILL PLAY THE MUSIC FROM THE USB DRIVE.
- 002. SELECT AUX AS THE INPUT. CONNECT THE OTHER END OF THE LEAD TO THE AUDIO OUTPUT ON YOUR AUDIO SOURCE.

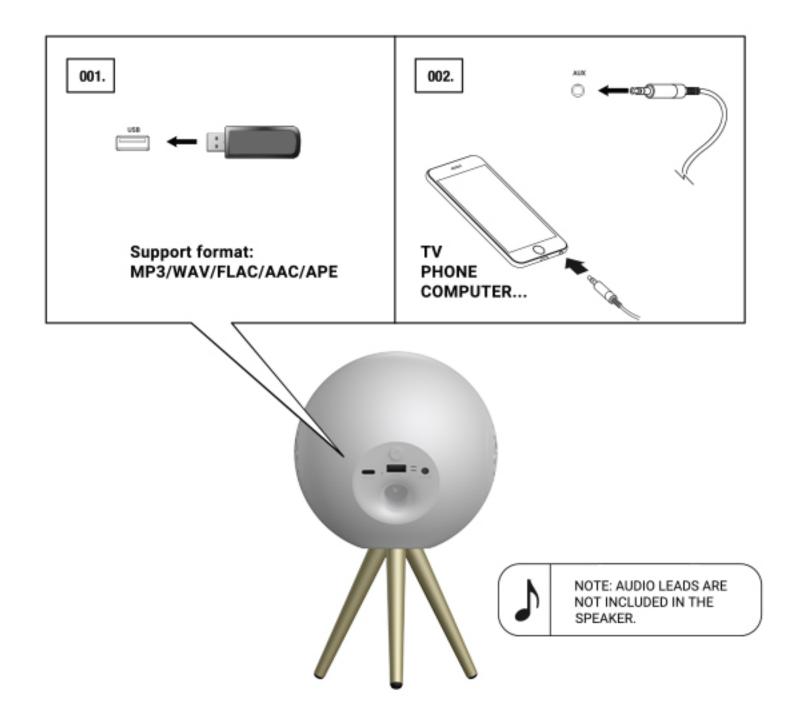

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

The device has been evaluated to meel general RF exposure requirement. The device can be used in porlable exposure condition without restriction.

SPIROK STAR

Copyright ©2024 All Rights Reserved.

Manual Edition 1.0, April 2024

Printed in China

Shenzhen Yixiu Technology Co.,LTD Made in China