 


# User Manual

## ROBOTIC POOL CLEANER

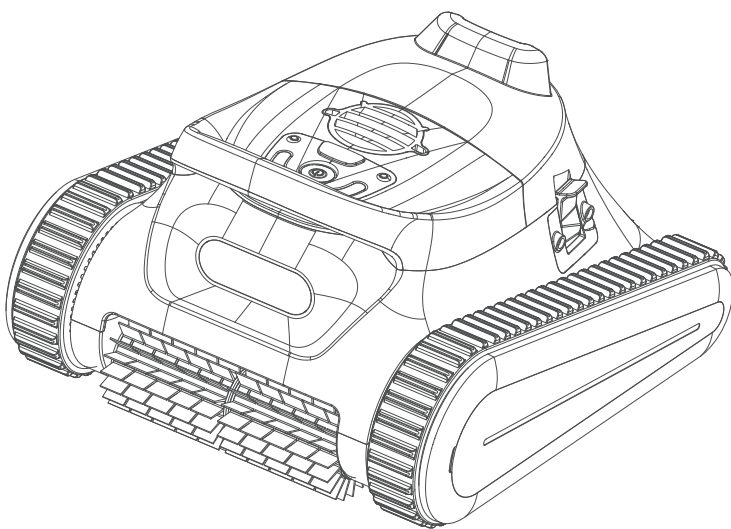

Thank you for purchasing a Seauto Robotic Pool Cleaner.



# CONTENTS

---

**PRODUCTION INTRODUCTIONS** ..... 02

1. WARNINGS AND CAUTIONS ..... 02

2. STRUCTURE ..... 03

3. SPECIFICATIONS ..... 03

4. LED STATUS ..... 04

5. CLEANING MODES (Available only get paid) ..... 04

**USING THE POOL CLEANER** ..... 05

1. CHARGING ..... 05

2. PLACEMENT INTO THE POOL ..... 05

3. REMOVAL FROM THE POOL ..... 06

4. CLEANING ..... 07

5. REPLACEMENT OF BATTERY ..... 08

**OFF-SEASON STORAGE** ..... 10

**TROUBLE-SHOOTING & FAQ** ..... 10

**WARRANTY** ..... 12

# 1. PRODUCTION INTRODUCTIONS

Thank you for purchasing a Seauto Robotic Pool Cleaner.

Rest assured that your Seauto Robotic Pool Cleaner will provide you with reliable, convenient and cost-effective pool cleaning.

Its reliable filtration in all pool conditions, active brushing, and all-surface climbing brush ensures maximum pool hygiene.

The Robotic Pool Cleaners by Seauto deliver advanced cleaning technology and an intelligent, cable-free cleaning experience with easy maintenance. You and your family will be free to enjoy swimming with confidence that your pool is completely clean.

 
## 1. WARNINGS AND CAUTIONS

Read this manual carefully and use the device accordingly. We are not liable for any loss or injury caused by improper use of the device.

1. Be sure to charge the device before the first use.
2. Make sure the water depth of the pool is at least 19.5 in (50 cm) away from the top of the device, to achieve optimal cleaning performance.
3. The device comes with a lithium battery. Do not disassemble the sealed compartment without authorization. Protect the device from direct sunlight and impact.
4. Keep people and animals out of the pool while the device is in use. Do not leave children unsupervised while using the device.
5. Turn off the device before cleaning the filters.
6. During the off-season period, charge the device once a month to protect its battery.
7. Use the Pool Cleaner in the following water conditions only:

|             |                        |
|-------------|------------------------|
| Chlorine    | Max 4 PPM              |
| pH          | 7.0 - 7.8 PPM          |
| Temperature | 41 - 95 °F (5 - 35 °C) |
| NaCl        | Maximum = 5000 PPM     |

2. STRUCTURE

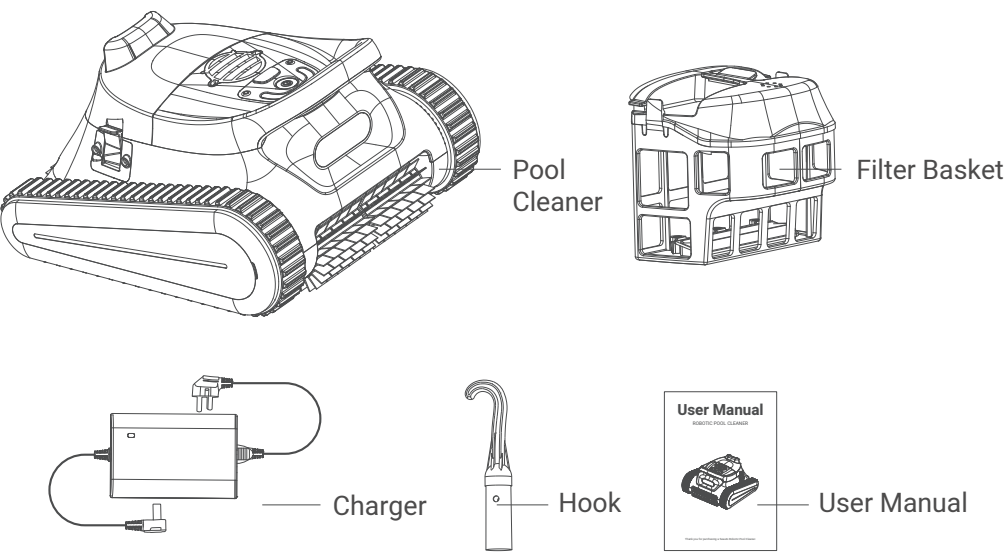

3. SPECIFICATIONS

|                          |                                            |
|--------------------------|--------------------------------------------|
| Applicable pool size     | Up to 1614 sq ft (150 m²)                  |
| Water depth supported    | 1.6-16.4 ft (0.5-5 m)                      |
| Charger input            | 100-240 VAC, 50/60 Hz                      |
| Lithium battery capacity | 7800 mAh                                   |
| Battery life             | ≥ 1.5 hours                                |
| Charging time            | 2.5 hours                                  |
| Filtration system        | Filter Basket: 250um, for regular cleaning |
| Moving speed             | 59 ft/min / 18 m/min                       |
| Dimensions (L x W x H)   | 16.7*15.1*9.8 in / 424.7*384*250.42 mm     |
| Net weight               | 19.8 lb / 9 kg                             |
| Waterproof level         | IP68                                       |
| Storage temperature      | 32 to 104°F (0 to 40°C)                    |

## 4. LED STATUS

| LED Color                                                                                | State                         | Lamplight           |
|------------------------------------------------------------------------------------------|-------------------------------|---------------------|
| Blue    | Initialization phase          | Flash per 1 second  |
|                                                                                          | Free time                     | Flash per 3 seconds |
|                                                                                          | Work                          | Solid               |
| Yellow  | Device is abnormal            | Flash per 1 second  |
| Red     | Low battery                   | Flash per 1 second  |
|                                                                                          | Charging                      | Solid               |
| Green   | Fully charged                 | Solid               |
| Purple  | Failure to get out of trouble | Solid               |

## 5. CLEANING MODES (Available only get paid)

Search “Unlock SEAUTO” on either Google play or the App store.

Turn on bluetooth in your phone, as well as the cleaner. Make sure your phone is near to your cleaner.

Once you connect the cleaner in the App, you can unlock the Clean Modes to 3 modes for shift by pressing the on/off button on the cleaner.

| Modes <sup>a</sup>          | Cleaning Coverage     | Voice Reminder <sup>b</sup> |
|-----------------------------|-----------------------|-----------------------------|
| All-cover mode <sup>c</sup> | Covers all areas      | All-cover mode              |
| Wall-only mode              | Only cleans the wall  | Wall only                   |
| Floor-only mode             | Only cleans the floor | Floor only                  |

 
Note:

- a) The modes can be selected by pressing the switch button to shift.
- b) When a mode is selected, it will give a voice alert of the current mode.
- c) When turning on the cleaner, it will be in All-cover mode as default.


## 2. USING THE POOL CLEANER

### 1. CHARGING

a. Connect to the power supply - it will then start charging. The LED light will be solid red.

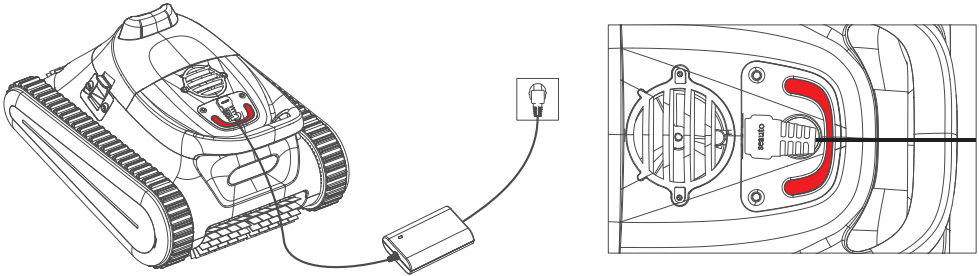

 b. It will be solid green when the device is fully charged, then will turn off automatically in 10 minutes.

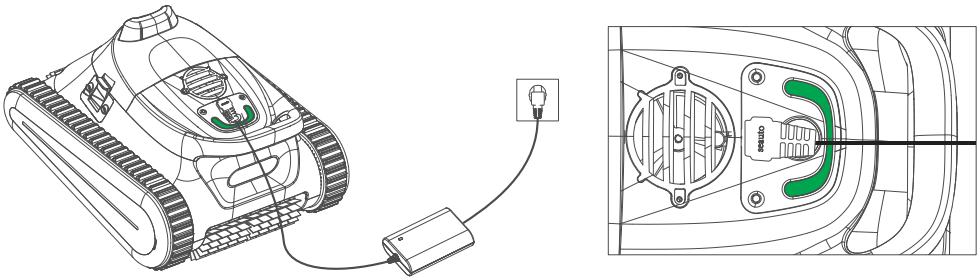


Note: Charging should be done indoors to prevent damage to the charger, the charger is not waterproof, not sunproof.

### 2. PLACEMENT INTO THE POOL

 
#### 2.1 ALL-COVER MODE

Note: After turning on the cleaner, the cleaner will automatically clean the entire pool, including wall and floor.

a. Press the button to turn it on - it will show a flashing blue light, and then it will say: "Welcome to the Seauto pool cleaning robot. I'm ready to work."

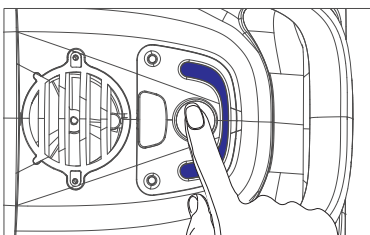

 
b. Put the device into the pool, making sure that the water surface is above the top of the cleaner to enable proper use. The LED light will turn to a solid blue when it starts cleaning the pool.

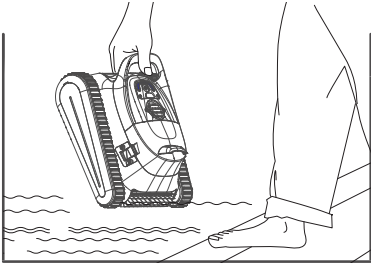


**3. REMOVAL FROM THE POOL**

Note: Please attach the hook (included in your packaging) to a compatible pole, the pole is not included in the package.

 a. Hook up the cleaner by using a pole.

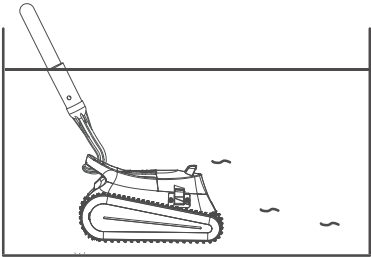

 b. Before cleaning the filter, press and hold to switch off the cleaner.


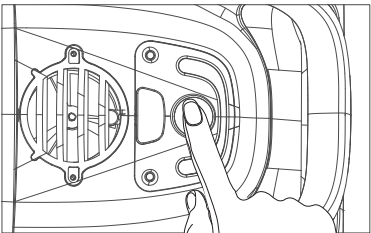





## 4. CLEANING

Note: Clean the basket before it dries out. Make sure the cleaner is off.

 
 
a. Unbuckle both sides of the filter basket to open the lid.

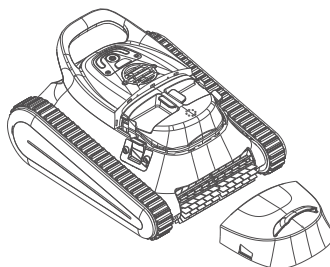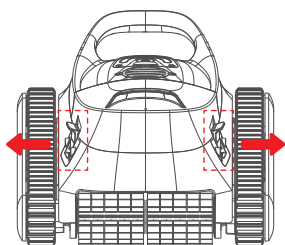

 
b. Remove the filter basket.

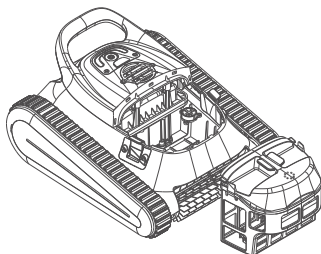

 
 
c. Open the cap of the basket.

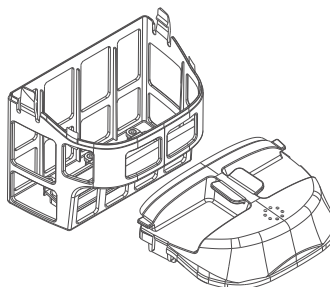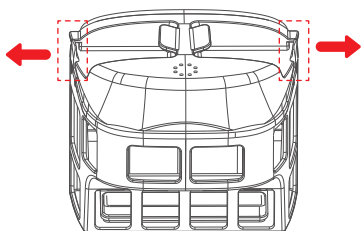

 d. Clean the filter basket.

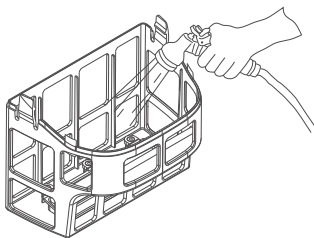

  e. Assemble the robot.

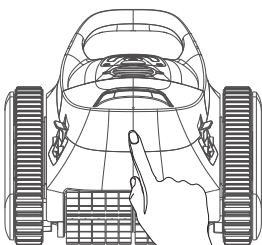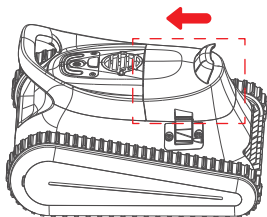


**5. REPLACEMENT OF BATTERY**

Note: In case the performance of new battery being affected, before replacement please leave the cleaner stand for 2 days to ensure the complete evaporation of moisture.


Replacing the battery as follows to make pool cleaning robot an optimal cleaning state.

 a. Remove the six screws that used to fix equipment and fetch out the used battery.

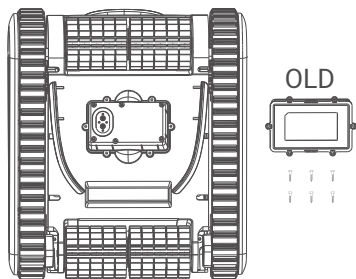


b. Insert the new battery according to the corresponding contacting positions of used battery.

 Note: Before putting in a new battery, clean up the water droplets/sand and other foreign objects in the connection position.

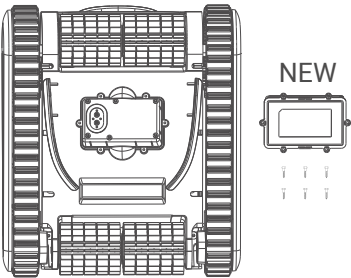

 c. Installing, fixing and locking the screws.

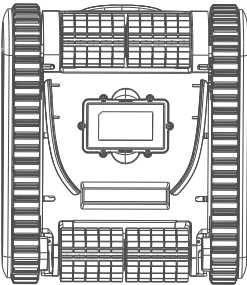

### 3. OFF-SEASON STORAGE

If the pool cleaner will not be in use for an extended period, perform the following storage steps:

1. Make sure that no water is left in the pool cleaner.
2. Thoroughly clean the filter basket and insert them back into place.
3. Store the pool cleaner in a protected area out of direct sun/rain/frost at a temperature of between 5°-45°C / 41°-113°F.
4. Charge the pool cleaner once per month to protect the battery.

### 4. TROUBLE-SHOOTING & FAQ

If the suggested solutions do not solve the problem, please feel free to contact us.

Q: What kind of swimming pool is suitable?

A: It is recommend to 150m<sup>2</sup>.

Q: Why doesn't the cleaner respond after turning on the cleaner?

A: The battery may be dead after a long-time delivery or storage. Please charge the device, the light will be solid red while charging.

Q: Why can't it climb the wall?

A1: It may be set to the Floor-Only Mode. Please the button to select the right mode.

A2: There is too much garbage or debris in the filter basket. You'll need to remove the basket and clean it.

Q: Why does the cleaner just sit at the bottom of the pool and not move or move slowly?

A1: It may be caught in the drain outlet on the floor. It will try to float itself to break free. If it is still stuck for several minutes, please use the pole to help.

A2: It may suck up lots of debris in a very short time if it's placed into a dirty pool, so check and clean the filters if needed.

Q: Why does the front part float while the rear part stays on the floor?

A: It's an intelligent feature of our pool cleaner, to break free from being stuck.

Q: Why does the cleaner automatically switch off after a few hours of charging?

A: It is designed to shut off automatically in 10 minutes after fully charged to protect the battery and ensure its lifespan. So, you can go out with confidence without worrying about charging safety.

Q: What is the issue when the cleaner lights up with a yellow light?

A: The yellow light means the cleaner has a problem (over-currented due to being stuck, or failure to start). Take the cleaner out and re-start it – it should then be ready to work.

Q: How can I get replacement accessories?

A: Please contact your purchase channel. Or you can visit our website, or give us a call – we are available to help you out.

Q: How can I buy a long pole and what size is it?

A: We offer a pick-up hook in the box, which is the universal pool accessory – the hook fits a standard pole size with an 1-1/4" (25-32 mm) diameter connection end. You can easily find a pole in your local market or shop online.

Q: Why are there some water droplets inside a newly purchased cleaner?

 
A: As every cleaner is rigorously tested before leaving the factory, including underwater test, etc. So, there may be little water left inside, please feel free to use it normally.

Q: What should I do if the cleaner get a purple LED while working in the pool?

A: The cleaner is stuck by an obstacle at the bottom of the pool, please use the pole to remove the cleaner, restart it and put it back into the pool.

Q: Why can't I turn off the cleaner when I take it out of the pool?

A: It is because there is water in the water detection probe, and the cleaner mistakenly thinks that it is still working under the water, so it can be turned off after wiping the probe clean.

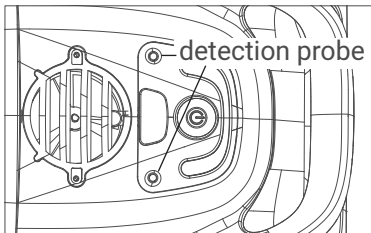

## 5. WARRANTY

This product has passed all quality control and safety tests, conducted by the technical department of the factory.

1. The warranty is covered for 12 months from the date of its original purchase.
2. There is no extension warranty for the consumables (filter net).
3. This warranty will be void if the product has been altered, misused, or has been repaired by unauthorized personnel.
4. The warranty extends only to manufacturing defects. It does not cover any damage resulting from mishandling of the product by the owner.
5. The order number or record must be presented for any claim or repair during the warranty period.
6. Please email or call us with any warranty issues, or visit our website for more information and support on accessories and consumables.



 Built by: Seauto

 Manufacture Model: PC09

 800-618-8968

 [support@seautorobots.com](mailto:support@seautorobots.com)

 Mon-Fri, 09:00-18:00 (EST)

**Made in China**

