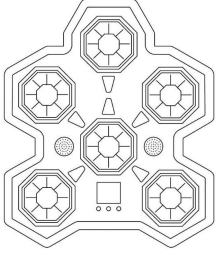
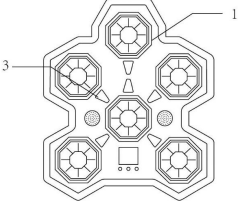


21x28.5cm

PRODUCT

1. beat position

2.Type-C charging port

3. Luminous region

Boxing target button operation instructions

Keys	Long/Short	Reaction	Reaction
—	Long press	Volume	Volume reduction
—	Short press	Previous Song	When playing Bluetooth music, the song plays the previous one
+	Long press	Volume	Volume Boost
+	Short press	Next Song	When playing Bluetooth music, the song skips the next one
⊖	Long press	Power Off	/
⊖	Short press	Display switching	The content displayed on the display screen is switched between the first and second screens
— + ⊖	Long press 5s or longer	Reset	1. Press — + ⊖ and ⊖ simultaneously for one second to enter the factory default settings, restore the original program and hardware reset. 2. The factory default settings are: 3. The volume is 50%. 4. The equalizer is off. 5. The Bluetooth music is off. 6. The light mode is on. 7. The working sound effects is playing repeat, and the display screen displays the corresponding song name. The corresponding light color is blue for music suspension

1

INSTALLATION

Installation Way1:

- 1.First, tear off the double-sided tape on the upper half of the EVA.
- 2.The EVA paste is aligned on the back of the product.
- 3.Tear off the double-sided tape on the lower half of the EVA sticker.
- 4.Put it in place and stick it firmly on the wall.

Installation Way2:

1. Remove the shorter part of the Velcro tape and apply the Velcro Parallel to the back of the product.
2. Apply the longer part of the Velcro to the back of the product, then peel off the tape and stick it to the wall together with the product.

PRECAUTIONS

1. Please fix this product to a solid and reliable surface. When striking, please be in the striking area Do not hit the corner area to avoid hand injury or device damage.
- 2.This product is suitable for adults, children should be used under the guidance of adults.
- 3.Beginners should not hit too hard to avoid hand injuries. Pay attention to safety first during exercise, and leg and knee strikes are strictly prohibited.
- 4.It is strictly forbidden to hit the horn area.
- 5.If the device cannot be turned on or is abnormal, please check whether the battery is too low and charge it in time. The charging time should not exceed 8 hours. It is recommended to charge once every 1-2 months if it is not used for a long time.
- 6.This product is not waterproof. When wiping the boxing target, use a dry cloth and do not get it wet.
- 7.Please keep the instruction manual for emergency need.

Troubleshooting

NO.	Symptoms	Cause Analysis	Method of exclusion
1	No lights and no sound	The product is not powered on	Short press the switch
2	No lights and no sound	Battery drain	Charge
3	Lights flicker	Low battery	Charge
4	LONG PRESS THE SWITCH CANNOT TURN ON	The main chip capacitor is short of power due to long-term non-startup	PRESS AND HOLD THE SWITCH REPEATEDLY FOR 3 SECONDS
5	Banging sound inside the device	Issued by the internal active stress structure	Normal phenomenon

2

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1.Reorient or relocate the receiving antenna.
- 2.Increase the separation between the equipment and receiver.
- 3.Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 4.Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1)This device may not cause harmful interference.
- (2)This device must accept any interference received, including interference that may cause undesired operation.