

ESCAVATORE EXCAVATOR

ITEN NO.:Z6809A


EN: This product requires 2 x 1.5 v AA batteries (not included)
This product requires 1 battery 3.7V-Li-Poly (included)

Batteries should only be replaced by an adult.
BATTERY REPLACEMENT:
Use a screwdriver (not included) to remove the battery cover.
Place new batteries in the battery compartment and replace the battery cover.


BATTERY WARNINGS:
Use only batteries of the same or equivalent type as recommended.
Do not mix old and new batteries.
Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
Remove batteries if product is to be left unused for a long time.
Non-rechargeable batteries are not to be recharged.
Batteries are to be inserted with the correct polarity (+ and -).
Exhausted batteries are to be removed from the toy.
The supply terminals are not to be short-circuited.
Rechargeable batteries are to be removed from the toy before being charged.
Rechargeable batteries are only to be charged under adult supervision.
For toys equipped with battery chargers, batteries should only be charged by people at least 8 years of age.
Do not plug antenna wires into power outlets.

The crossed bin indicates that the waste of electrical and electronic equipment (WEEE) should not be disposed of using the normal solid urban waste, but collected separately for recovery and recycling of the materials they contain, so as to prevent potential damage to health and to the environment due to the presence of potentially dangerous substances. According to the European Directive 2012/19/EU, such waste may be awarded at the designated collection centers or given out free to the dealer on the purchase of new equipment or equivalent without an obligation to purchase new equipment for the smaller of 25 cm. Used batteries should be disposed in the appropriate containers or at the collection centers. There are penalties for illegal disposal. Consult local authorities for more information regarding the disposal routes.

Transformers or battery chargers used with the toy and/or product are to be regularly examined for damage to the cord, plug, enclosure and other parts, and in the event of such damage, they must not be used until the damage has been repaired.

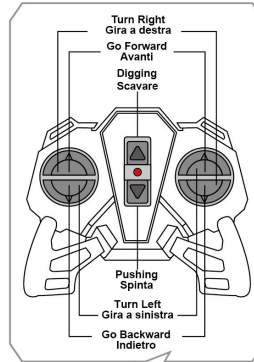

REMOTE CONTROL FUNCTION

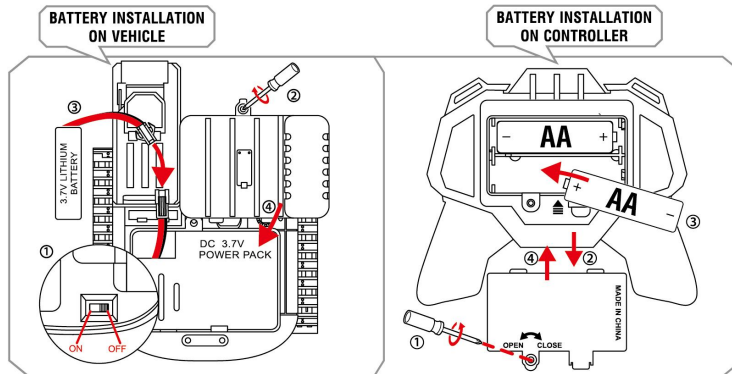

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.