



User Manual

Konexial PingIT Device

Steps to take to activate and install PingIT device:

1. Unpack from shipping packaging.
2. Plug charger into wall and place PingIT device on charger for 2 hours to bring to full charge.
3. The recommended install location for the PingIT device is under the passenger seat.
4. Take PingIT device to vehicle to be installed and ensure there is no buildup of dust or debris under the passenger seat.
5. Place device under the passenger seat and ensure the built-in magnet has connected to the metal floorboard or metal around the seat.
6. Push and hold the side orange button for 3 seconds until you hear a beep.
7. Monitor the device on the Konexial app for location and battery levels.

FCC Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator& your body.