

英文 (正面)

| | | | | | | | |
|--|--|--|--|---|---|--|--|
| <div>Mini smartphone instruction manual</div> <div>Thank you for choosing this mini smartphone. This mobile phone is a smart phone based on Android operating system. It has stylish design and high-end manufacture technology. It supports GSM, WCDMA, TDD, FDD standard network, supports wireless GPS and WIFI, and the operation interface is simple and easy to use, so that you can fully enjoy the comfortable experience. It is forbidden to use any tool root this phone, otherwise there may be unrecoverable faults, and the root phone does not enjoy the warranty! In order to use this phone safely and effectively, please read the instruction manual carefully before use.</div> <div>Introduction to this manual</div> <div>This manual describes concise information about how to use your mobile phone. If you want to quickly grasp the basic practical methods of this mobile phone, please Refer to "Understanding the phone".</div> <div>Safety Precautions</div> <div>Safe boot</div> <div>Do not use your mobile phone when it is forbidden to use your mobile phone or if it may cause interference or danger. Traffic safety first</div> <div>Do not use your mobile phone while driving, so as not to interfere with safe driving.</div> <div>Shut down in restricted areas</div> <div>Please comply with the relevant restrictions or regulations.</div> <div>Shut down on airplanes or near flammable materials, chemicals or medical equipment.</div> <div>Interference</div> <div>Mobile communications can be subject to radio interference, which can affect performance.</div> <div>Waterproof</div> <div>This phone is not waterproof, please keep it dry.</div> <div>Specialized service</div> <div>1</div> | <div>Mini smartphone instruction manual</div> <div>Do not disassemble the phone and accessories. Only authorized organizations can repair the phone.</div> <div>Initial SIM or USIM card and battery</div> <div>When you order a mobile phone service, you will receive a Subscriber Identity Module (SIM) card with your order details, such as a Personal Identification Number (PIN) and optional services. To use the 3G (WCDMA) service, you can purchase a Universal Subscriber Identity Module (USIM) card. Install the SIM card or USIM card as follows.</div> <div>1. On the right side of the phone, find the card slot of the SIM card.</div> <div>2. There is a corresponding SIM card and memory card slot on the right side of the phone, please insert the card according to the pattern shown.</div> <div>If you do not have a SIM or USIM card inserted, you can only use your phone's non-network services and some of the menus.</div> <div>Do not insert the memory card into the SIM card slot.</div> <div>Charging the battery</div> <div>You must charge the battery before using it for the first time. You can use the provided travel charger or connect your phone to your computer via a computer cable to charge your phone.</div> <div>When the battery is low, the phone will sound a warning tone and display a low battery message. If the battery is too low, the phone will automatically shut down. You need to charge the battery before you can continue using your phone.</div> <div>Charging with a travel charger</div> <div>Plug the small end of the travel charger into the multi-function jack. Improper connection of the travel charger may result in serious damage to the mobile phone and will not be warranted for any damage caused by mishandling.</div> <div>2</div> | <div>Mini smartphone instruction manual</div> <div>1. Plug the big end of the travel charger into the power outlet.</div> <div>You can use your phone while charging, but this will extend the battery charging time.</div> <div>The phone will heat up when charging, this phenomenon is normal and will not affect the life or performance of the phone.</div> <div>2. When the battery is fully charged, disconnect the travel charger from the phone and unplug it from the power outlet.</div> <div>Charging with computer data cable</div> <div>Make sure your computer is turned on before charging.</div> <div>1. Plug one end of the computer data cable (micro USB) into the multi-function jack.</div> <div>2. Connect the other end of the computer data cable to the computer's USB port. Depending on the type of computer data cable used, it may take a while to start charging.</div> <div>3. When the battery is fully charged, disconnect the computer data cable from the phone and unplug it from the computer.</div> <div>Format SD card storage</div> <div>In the main menu, select Settings → Storage → Store Information → Format SD Storage.</div> <div>Before formatting the SD card storage, remember to back up all the important data stored on your phone. The manufacturer warranty service does not include data loss due to user actions.</div> <div>Power on and off</div> <div>To boot, press and hold [Power On/Off] the phone will turn on.</div> <div>In areas where wireless devices are prohibited (such as airplanes and hospitals), please follow all posted warnings and instructions from official staff.</div> <div>To use only your phone's non-network service, switch to</div> <div>3</div> | <div>Mini smartphone instruction manual</div> <div>airplane mode. Pull down the main interface and select the icon power outlet.</div> <div>The backlit screen can also be adjusted. In standby mode, then select Settings → Display → Sleep → Sleep time</div> <div>Use your phone's touch screen to make it easier to select items or perform functions.</div> <div>Learn the basics of using a touch screen:</div> <div>To avoid scratching the touch screen, do not use sharp tools.</div> <div>Do not allow the touch screen to touch other electronic devices. Electrostatic discharge may cause the touch screen to malfunction.</div> <div>Do not let the touch screen touch the water. The touch screen may malfunction in a humid environment or when exposed to water.</div> <div>In order to achieve the best results, please remove the touch screen protective film before using the phone.</div> <div>The touch screen has a protective layer that reveals tiny charges from the body. For the best performance, tap the touch screen with your fingertips. The touch screen does not react to the touch of a sharp tool, such as a stylus or pen.</div> <div>The following operations can be performed to control the touch screen:</div> <div>Click: Click once with your finger to select or launch a menu, option, or application.</div> <div>Click and hold: hold down the item for more than 2 seconds to open up a list of options.</div> <div>Scroll: Click and drag your finger up, down, left or right to move to the items in the list.</div> <div>Drag and drop: Click and hold an item with your finger, then drag your finger to move the item.</div> <div>Double-click: When viewing a photo, tap twice with your finger to zoom in or out.</div> <div>If the phone is not used for the specified length of time, the phone will turn off the touch screen. To turn</div> <div>4</div> | <div>Mini smartphone instruction manual</div> <div>the touch screen back on, press [Power On/Off].</div> <div>The backlit screen can also be adjusted. In standby mode, then select Settings → Display → Sleep → Sleep time</div> <div>Lock or unlock the touch screen and buttons.</div> <div>The touch screen and buttons can be locked to prevent any accidental phone operation.</div> <div>To lock, press [Switch button]. To unlock, press [Power On/Off] and follow the on-screen prompts to manually unlock.</div> <div>Select wallpaper source</div> <div>You can set the wallpaper to customize the standby screen or lock screen interface (the wallpaper can customize the pictures in the album).</div> <div>Lock screen wallpaper: set lock screen interface image.</div> <div>Desktop wallpaper: set desktop wallpaper.</div> <div>Live Wallpaper: You can set live wallpaper.</div> <div>Video wallpaper: set background video.</div> <div>Move items on the lock screen</div> <div>Click and hold the item you want to move.</div> <div>Drag the project to the desired location after the project vibrates.</div> <div>Remove item from standby screen: click and hold the item, then select the item to be removed, and X delete appears in the top left corner of the item.</div> <div>Click on X to delete the item</div> <div>Use the shortcut panel</div> <div>When in standby mode or while using the app, touch the indicator icon area at the top of the screen and drag your finger down. Open the shortcuts panel. You can activate or deactivate other features such as wireless connections and access a list of notifications, such as messages, calls, events, or processing status. To hide the list, drag the bottom border of the list up.</div> <div>Swipe the shortcut icon left and right in the shortcuts panel</div> <div>5</div> | <div>Mini smartphone instruction manual</div> <div>to use the following options:</div> <div>Wi-Fi: Turn Wi-Fi connection on or off. Long click this icon to enter the Wi-Fi settings interface.</div> <div>Data connection: start or close the data connection.</div> <div>Bluetooth: Turns Bluetooth wireless connection on or off.</div> <div>Airplane mode: Activate or deactivate flight mode.</div> <div>Scene mode: standard, mute, switch between conference and outdoor mode.</div> <div>Settings: Shows device power usage.</div> <div>Hibernates: Adjust the delay time for the screen to automatically turn off.</div> <div>One-button lock screen: After clicking, the device is off screen and locked.</div> <div>More: You can set the shortcut function and access display in the shortcut panel.</div> <div>Secure application</div> <div>If you want to access the app of your phone:</div> <div>Open phone lock.</div> <div>Scroll left or right to other application screens.</div> <div>Select the launcher.</div> <div>Press the middle button to return to the main standby screen.</div> <div>The phone has a built-in motion sensor that detects the direction of the phone. If you rotate your phone while using certain features, the phone interface will automatically switch to landscape mode. If you want to set the interface does not change with the rotation of the phone, Open the shortcuts panel at the top of the screen and select Auto Rotate. Alternatively, select Settings → Display → Rotate Screen → Auto or Keep</div> <div>6</div> | <div>Mini smartphone instruction manual</div> <div>Portrait.</div> <div>Widget.</div> <div>Click the Menu button from standby, select Add widget, select any widget and press and drag to standby.</div> <div>Custom phone</div> <div>Customize your phone to your personal preferences, themes and desktop slideshow effects, etc.</div> <div>Set current time and date</div> <div>In the main menu interface, then select Settings → Date & Time.</div> <div>Set time and date and change other options.</div> <div>Turn touch tones on or off</div> <div>In the main menu interface, then select Settings → Sounds & Notifications → Standards → click on the right setting → select the touch tone.</div> <div>Adjust the ringar volume</div> <div>Press the up or down volume button to adjust the ringar volume.</div> <div>Switch to vibration mode</div> <div>To shake or de-vibrate your phone, do one of the following:</div> <div>Switch directly in the shortcut panel mood mode.</div> <div>In standby mode, press and hold [Switch button].</div> <div>Then select the vibration mode.</div> <div>Change ringtone</div> <div>In the main menu interface, then select Settings → Sounds & Notifications → Standards → Port. Right Settings → Phone Ringtone / Black Receipt Notification Tone / Message Ringtone. Select a ringtone from the list and select OK.</div> <div>Select the wallpaper of the standby screen</div> <div>In standby mode, press menu → wallpaper → select the type of wallpaper to be set</div> <div>Adjust the brightness of the display</div> <div>Adjust screen brightness under the setup menu.</div> <div>7</div> | <div>Mini smartphone instruction manual</div> <div>Portrait.</div> <div>Widget.</div> <div>Click the Menu button from standby, select Add widget, select any widget and press and drag to standby.</div> <div>Custom phone</div> <div>Customize your phone to your personal preferences, themes and desktop slideshow effects, etc.</div> <div>Set current time and date</div> <div>In the main menu interface, then select Settings → Date & Time.</div> <div>Set time and date and change other options.</div> <div>Turn touch tones on or off</div> <div>In the main menu interface, then select Settings → Sounds & Notifications → Standards → click on the right setting → select the touch tone.</div> <div>Adjust the ringar volume</div> <div>Press the up or down volume button to adjust the ringar volume.</div> <div>Switch to vibration mode</div> <div>To shake or de-vibrate your phone, do one of the following:</div> <div>Switch directly in the shortcut panel mood mode.</div> <div>In standby mode, press and hold [Switch button].</div> <div>Then select the vibration mode.</div> <div>Change ringtone</div> <div>In the main menu interface, then select Settings → Sounds & Notifications → Standards → Port. Right Settings → Phone Ringtone / Black Receipt Notification Tone / Message Ringtone. Select a ringtone from the list and select OK.</div> <div>Select the wallpaper of the standby screen</div> <div>In standby mode, press menu → wallpaper → select the type of wallpaper to be set</div> <div>Adjust the brightness of the display</div> <div>Adjust screen brightness under the setup menu.</div> <div>8</div> |
| <div>Mini smartphone instruction manual</div> <div>2. Enter your PIN and choose OK.</div> <div>If you activate the PIN lock, you must enter your PIN every time you turn it on.</div> <div>If the PIN code is entered incorrectly three times, the SIM card or USIM card will be locked.</div> <div>You must enter your PIN unlocking key (PUK) to unlock your SIM card or USIM card.</div> <div>If the SIM card or USIM card is locked due to incorrect PUK input, bring the card to the service provider to unlock it.</div> <div>Dial</div> <div>Learn how to use call features, such as making and receiving calls through available options during a call, or customizing and using call-related features, call records</div> <div>Can view call history filtered by type.</div> <div>In standby mode, click the dial button to enter the dialing interface and click call interface..</div> <div>In the call log interface, you can press the call type of the call.</div> <div>3. Select the record for which you want to view detailed call details.</div> <div>Deleted</div> <div>Click the icon in the lower left corner of the main interface to close or pop up the dial pad to operate the contacts recorded in the call. Each time you dial a contact number, the contact automatically join the call history page.</div> <div>Function menu</div> <div>Includes contacts, speed dials, set options, information</div> <div>Learn how to create and send text messages (SMS) or multimedia messages (MMS), as well as view and manage the messages you have sent or received. Sending or receiving information outside the local service area may incur additional charges. For more information, please consult your service</div> <div>9</div> | <div>Mini smartphone instruction manual</div> <div>provider.</div> <div>Music</div> <div>Learn how to listen to your favorite music using the music player.</div> <div>Depending on the phone software, some file formats are not supported.</div> <div>If the file size exceeds the available storage space, an error occurs when opening the file.</div> <div>Add music</div> <div>Transfer music files to your phone.</div> <div>Download from wireless web</div> <div>Copy through data cable</div> <div>Transmission via Bluetooth</div> <div>Album</div> <div>Learn how to view images on your memory card and play them.</div> <div>Radio</div> <div>Listen to radio programs on the radio and record your favorite while listening. Before using the FM radio, be sure to connect the supplied headphones (the headphones are used as the radio antenna).</div> <div>Recorder</div> <div>Help you quickly save your voice recordings, you can set your favorite sound quality and recording mode.</div> <div>Clock</div> <div>You can set an alarm, view world time, use timers and stopwatch functions.</div> <div>Note: Support shutdown alarm.</div> <div>Browser</div> <div>The browser enables faster internet speeds, safer URL navigation, more convenient mobile internet access and more enhancements. High-speed download, skimming, full-screen browsing, and more. The browser is not only easy to use, but also powerful.</div> <div>10</div> | <div>Mini smartphone instruction manual</div> <div>Document management</div> <div>Learn to quickly and fully open all your pictures, videos, music, documents and other kinds of files stored in your phone's storage.</div> <div>note:</div> <div>In addition to MP3, MP4 and picture files, please do not move or delete the system files.</div> <div>It is recommended to install the APK installation package that comes with the phone storage. If you install the APK file package yourself, the phone will crash and restart, and you will not be responsible for it.</div> <div>Calendar</div> <div>You can view the date, view the lunar calendar, and set calendar events for easy use.</div> <div>e-mail</div> <div>Send or receive emails from your phone by configuring your personal corporate email account.</div> <div>Video</div> <div>Can view, delete video files and sort videos.</div> <div>display</div> <div>Set functions related to mobile phone display, such as screen standby time, auto-rotate screen, interactive screen saver, screen lock notification, brightness adjustment, wireless display, etc.</div> <div>Sound and notification</div> <div>Set the phone mode. Default mode: standard, mute, conference, outdoor mode.</div> <div>Set phone ringtones, message ringtones, volume, etc., as well as set custom profiles.</div> <div>Storage</div> <div>View phone and SD card storage</div> <div>battery</div> <div>View phone battery usage</div> <div>Application</div> <div>11</div> | <div>Mini smartphone instruction manual</div> <div>Settings</div> <div>Set WLAN status, network notification, add network, etc</div> <div>Bluetooth</div> <div>Set Bluetooth status, search for Bluetooth devices, and modify Bluetooth names, etc.</div> <div>SIM card</div> <div>SIM card management: This function can be chosen to close or open the SIM card, select whether the data connection and international roaming are open.</div> <div>More</div> <div>Airplane mode: All language services can be disabled.</div> <div>Default SMS app: Set default SMS app.</div> <div>Network and sharing and portable hotspots; WLAN hotspots, USB sharing networks, Bluetooth shared networks, network sharing and portable hotspot settings</div> <div>VPN: You can set a VPN profile.</div> <div>Video network: set up data connections, 4G services, preferences, etc.</div> <div>display</div> <div>Set functions related to mobile phone display, such as screen standby time, auto-rotate screen, interactive screen saver, screen lock notification, brightness adjustment, wireless display, etc.</div> <div>Sound and notification</div> <div>Set the phone mode. Default mode: standard, mute, conference, outdoor mode.</div> <div>Set phone ringtones, message ringtones, volume, etc., as well as set custom profiles.</div> <div>Storage</div> <div>View phone and SD card storage</div> <div>battery</div> <div>View phone battery usage</div> <div>Application</div> <div>12</div> | <div>Mini smartphone instruction manual</div> <div>Manage applications locally and change administrative settings for installed applications.</div> <div>Safety</div> <div>Screen lock mode: set to none, slide, pattern, PIN, password, fingerprint recognition.</div> <div>Auto lock: select auto lock time</div> <div>User information: After editing, the information you edit will be displayed in the standby lock.</div> <div>Encrypted phones: Please see their instructions for specific information.</div> <div>Set the SM card lock.</div> <div>Click the SM card, click to lock the SM card, enter the PIN code and turn on the lock SM card function.</div> <div>Change SIM card PIN: Enter the original PIN code first, then enter the new PIN code twice.</div> <div>Show password: Turn the display password on and off.</div> <div>Device Manager: View or deactivate Device Manager.</div> <div>Unknown source: Whether to allow the installation of a location-sourced app. It can be turned on and off.</div> <div>Self-start management: Allow or disable the application to run automatically</div> <div>App permissions: Manage app permissions for security and privacy</div> <div>Mobile phone theft: remotely lock the phone and remotely destroy the data</div> <div>Storage Type: Shows the type of storage.</div> <div>Trusted credentials: Use certificates and credentials to ensure secure use of individual applications.</div> <div>Install from phone storage: Install the encryption certificate stored in the phone storage.</div> <div>Clear credentials: delete the contents of the voucher in the phone and reset the password.</div> <div>Account</div> <div>Check if you press and hold the [Power On/Off] key for at least 1 second.</div> <div>Check if the battery is in poor contact. Please remove it and reinsert it. Try again.</div> <div>Check if the battery is exhausted, please charge.</div> <div>Start the phone, there is information display.</div> <div>13</div> | <div>Mini smartphone instruction manual</div> <div>Manage accounts to sync.</div> <div>Language and keyboard</div> <div>Language and input method: you can choose the language, set the keyboard, select the input method.</div> <div>Backup and reset: Restoring the factory default settings will erase all data on the phone, please be cautious.</div> <div>Date and time</div> <div>Automatically determine date and time, use the network to provide time.</div> <div>Automatically determine the time zone: Use the time zone provided by the network.</div> <div>Set date: Set the current date manually.</div> <div>Set time: Set the current time manually.</div> <div>Select time zone: set local time zone.</div> <div>Use 24-hour format: set to display time in 24-hour format.</div> <div>Timer switch</div> <div>Set the time when the phone is turned on and off.</div> <div>Print</div> <div>Connect the printer to print the necessary images and other files</div> <div>About mobile phone</div> <div>Query information about your phone, such as system upgrades, status information, legal information, phone model, version number, processor, etc.</div> <div>Common problems and solutions: order to save your time and unnecessary expenses, please do the following simple check before contacting professional after-sales service.</div> <div>Unable to start phone</div> <div>Check if you press and hold the [Power On/Off] key for at least 1 second.</div> <div>Check if the battery is in poor contact. Please remove it and reinsert it. Try again.</div> <div>Check if the battery is exhausted, please charge.</div> <div>Start the phone, there is information display.</div> <div>14</div> | <div>Mini smartphone instruction manual</div> <div>Enter the phone lock password and select the auto lock function. You must enter the phone password before using it.</div> <div>Enter the PIN code and select the function to enter the PIN every time you turn it on. You must enter the PIN code.</div> <div>Enter the PUK code: correct the error PIN code three times and lock the SIM card. Enter the PUK code provided by the operator.</div> <div>SIM card error</div> <div>The metal surface of the SIM card is dirty. Wipe the metal contact point of the SIM card with a clean cloth.</div> <div>If the SIM card is not installed, install the SIM card correctly according to the instruction manual.</div> <div>SIM card is damaged, contact your network service provider.</div> <div>Unable to connect to network</div> <div>The signal is weak. Please move to a strong signal and try again.</div> <div>Exceeding the network coverage area of the network service provider.</div> <div>Invalid SIM card, contact your network provider.</div> <div>The number cannot be called out</div> <div>Please confirm whether the dialing button is pressed after dialing.</div> <div>Please confirm if the call is forbidden due to arrears.</div> <div>Please confirm if the SIM card is valid.</div> <div>Please confirm if the call barring function is set.</div> <div>Please confirm if the fixed dialing function is set.</div> <div>Poor call quality</div> <div>Please check if the volume adjustment is not suitable.</div> <div>Using mobile phones in poorly received areas, such as near high-rise buildings or basements, radio waves cannot be effectively communicated.</div> <div>Use the phone during a call-intensive period, such as after</div> <div>15</div> | <div>Mini smartphone instruction manual</div> <div>work hours, the line is congested and the call cannot be made.</div> <div>Number cannot be called</div> <div>Please confirm that the phone is turned on and connected to the network.</div> <div>Please confirm if you are prohibited from calling due to arrears.</div> <div>Please confirm if the SIM card is valid.</div> <div>Please confirm if the call restriction function is set.</div> <div>Contacts can't hear you</div> <div>Please confirm that the microphone is turned on.</div> <div>Please keep the microphone in the lower part of the phone close to your mouth.</div> <div>Short standby time</div> <div>The standby time is related to the system settings of the network and may be in an area where reception is poor. When the signal is not received, the phone will continue to transmit to find the base station, which consumes a large amount of battery power, resulting in a shorter standby time. Please move to a place with strong signal or temporarily turn off the phone.</div> <div>Need to replace the battery, please replace with a soft, clean cloth.</div> <div>Dirty, wipe the phone and battery terminals with a soft, clean cloth.</div> <div>When charging in an environment below 0 ° C or above 45 ° C, please change the charging environment.</div> <div>The battery or charger is damaged and needs to be replaced.</div> <div>If the above information does not help you solve the problem, please record your phone model and serial number, authorization or insurance policy information, and a clear description of the problem, then contact your local after-sales service provider.</div> <div>Attention</div> <div>Explosion hazard if you replace it with the wrong type of battery. Always dispose of the used battery as instructed!</div> <div>16</div> |

中文 (反面)

| | | | | | | | |
|---|--|--|--|--|--|--|---|
| <div>迷你智能手机使用说明书</div> <div>感谢您选择此款迷你智能手机。</div> <div>本手机是一款基于 Android 操作系统的智能手机。外观设计时尚，制造工艺高端，支持 GSM、WCDMA、TDD、FDD 制式网络，支持无线 GPS、WIFI，操作界面简洁易用，让您充分享受网络体验。</div> <div>禁止使用任何工具 root 本手机，否则可能出现无法恢复数据，root 后的手机不受保修。</div> <div>为了安全、有效的使用本手机，使用前请仔细阅读使用说明书。</div> <div>本说明书简介</div> <div>本说明书概述有关如何使用手机的简要信息，如欲迅速掌握本手机的基本实用方法，请参考“了解手机”。</div> <div>安全注意事项</div> <div>在禁止使用手机的场所，或者使用手机会引起干扰或危险时，请不要使用手机。</div> <div>交通安全第一</div> <div>开车时请勿使用手机，以免妨碍安全驾驶。</div> <div>在危险的区域使用手机</div> <div>请遵守相关的限制规定或条例，在“机上”，或在易燃物质、化学制剂或医疗设备附近使用手机。</div> <div>干扰</div> <div>移动设备可能会对无线电干扰，从而影响性能。</div> <div>防水</div> <div>此手机不耐水，请保持其干燥。</div> <div>个性化服务</div> <div>请仔细阅读手机附件及软件，只有授权的机构才可维修本手机。</div> <div>1</div> | <div>迷你智能手机使用说明书</div> <div>安装 SIM 卡或 USIM 卡和电池</div> <div>当您订购移动电话服务时，将收到一张用户识别模块 (SIM) 卡，其中载有您的订购详细信息，例如个人识别号码 (PIN) 和可选服务。如欲使用 3G (WCDMA) 服务，可购买通用用户识别模块 (USIM) 卡。安装 SIM 卡或 USIM 卡操作如下：</div> <div>1. 在手机右侧，找到 SIM 卡的卡槽。</div> <div>2. 在手机上有对应的 SIM 卡和存储卡的插卡方式，请根据为了安全、有效的使用本手机，使用前请仔细阅读使用说明书。</div> <div>本说明书简介</div> <div>本说明书概述有关如何使用手机的简要信息，如欲迅速掌握本手机的基本实用方法，请参考“了解手机”。</div> <div>安全注意事项</div> <div>在禁止使用手机的场所，或者使用手机会引起干扰或危险时，请不要使用手机。</div> <div>交通安全第一</div> <div>开车时请勿使用手机，以免妨碍安全驾驶。</div> <div>在危险的区域使用手机</div> <div>请遵守相关的限制规定或条例，在“机上”，或在易燃物质、化学制剂或医疗设备附近使用手机。</div> <div>干扰</div> <div>移动设备可能会对无线电干扰，从而影响性能。</div> <div>防水</div> <div>此手机不耐水，请保持其干燥。</div> <div>个性化服务</div> <div>请仔细阅读手机附件及软件，只有授权的机构才可维修本手机。</div> <div>2</div> | <div>迷你智能手机使用说明书</div> <div>查。</div> <div>2. 当电池充满电时，断开旅行充电器与手机的连接，然后将其从电源插座上拔下。</div> <div>用电脑数据线充电</div> <div>充电前，请确保电脑已开机。</div> <div>1. 将电脑数据线的一端 (微型 USB) 插入多功能插口。</div> <div>2. 在手机上与有对应的 SIM 卡和存储卡的插卡方式，请根据所使用的电脑数据线类型，可能需要等待片刻才能开始充电。</div> <div>3. 当电池充满电时，断开电脑数据线与手机的连接，然后将其从电脑上拔下。</div> <div>格式化 SD 卡存储</div> <div>在主菜单，选择设置 → 存储 → 存储信息 → 格式化 SD 存储。</div> <div>格式化 SD 卡存储前，记住备份存储在手机中的所有重要数据，制造商保修服务不包括因用户操作而造成数据丢失。</div> <div>开机和关机</div> <div>如欲开机，长按【开机键】手机会开机。</div> <div>如欲关机，长按【开机键】，然后选择关机。</div> <div>在禁止使用无线设备的区域 (例如飞机和医院)，请遵守所有的警告和官方人员的指示。</div> <div>如欲使用手机的非网络服务，可切换到飞行模式。下拉主界面，然后选择右上角图标飞行模式。</div> <div>3</div> | <div>迷你智能手机使用说明书</div> <div>触屏屏</div> <div>使用手机触摸屏可以更轻松地选择项目或执行功能。</div> <div>使用手机触摸屏的基本操作</div> <div>为了避免划伤触摸屏，请勿使用尖锐的工具。</div> <div>触摸屏使用注意事项</div> <div>请勿让触摸屏接触其他电子设备，静电放电可能会导致触摸屏发生故障。</div> <div>在潮湿环境中接触水时，触摸屏可能会出现故障。</div> <div>为了保护最佳的使用效果，使用手机前请取下触摸屏保护膜。</div> <div>触摸屏上有一层保护层，可以吸收人体发出的微小电荷，要获得最佳性能，请用指尖点击触摸屏。触摸屏不会对尖锐工具的碰触产生反应，例如针尖或钢笔。</div> <div>可执行以下操作来控制触摸屏：</div> <div>点击：用手指点击一次来选择或启动功能，或选项或使用程序。</div> <div>点击并长按：长按项目 2 秒钟以上，可弹出选项列表。</div> <div>滑动：点击并向上、向下、向左或向右滑动手指来移动到列表中的项目。</div> <div>拖放：用手指点击并紧按住一个项目，然后拖动手指来移动项目。</div> <div>双击：双击看照片时，用手指快速点击两次可以放大或缩小。</div> <div>如果未使用手机的时间达到指定时间长度，手机会关闭触摸屏。如欲重新打开触摸屏，按【开机键】。</div> <div>4</div> | <div>迷你智能手机使用说明书</div> <div>也可调整背景灯时间。在待机模式下，然后选择设置 → 显示 → 休眠 → 休眠时间</div> <div>锁定或解锁触摸屏和按钮</div> <div>可以点击触摸屏按钮，以防止任何意外手机操作。</div> <div>如欲锁定，按下【开机键】。如欲解锁，按下【开机键】。</div> <div>然后触摸屏会提示，手动进行解锁。</div> <div>选择解锁模式</div> <div>可以设置锁屏背景以与待屏或锁屏界面 (壁纸可以任意从相册里的图片)。</div> <div>解锁提醒</div> <div>解锁提醒：设置解锁界面提醒。</div> <div>桌面提醒：设置桌面提醒。</div> <div>动态壁纸：可以设置动态壁纸。</div> <div>视频提醒：设置背景视频。</div> <div>在待机模式下启动项目</div> <div>点击并长按要移动的项目。</div> <div>项目拖动后项目拖动到所需位置。</div> <div>从待机屏移除项目</div> <div>点击并长按要移除的项目，项目拖动并且项目左上角出现删除。</div> <div>点击 X 图标可删除该项目。</div> <div>使用快捷方式显示</div> <div>在待机模式下或使用应用程序时，触摸屏顶部显示图标区域，然后向下拖动并拖，打开快捷方式面板。可以启动取消无线连接等其他功能，并访问通知的列表，如信息、通话、活动或处理状态。如欲隐藏列表，请向上拖动列表的下边框。</div> <div>在快捷方式面板中左右滑动快捷图标，可以显示以下选项：Wi-Fi、启动或关闭 Wi-Fi 连接功能，长点此图标可进入 Wi-Fi 设置界面。</div> <div>5</div> | <div>迷你智能手机使用说明书</div> <div>数据连接：启动或关闭数据连接。</div> <div>蓝牙：启动或关闭蓝牙无线连接功能。</div> <div>飞行模式：启动或关闭飞行模式。</div> <div>情景模式：标准、静音、会议和户外模式之间的切换。</div> <div>一键清理：点击可结束后台应用，释放部分内存。</div> <div>亮度：调节屏幕的亮度。</div> <div>电量：显示设备电量使用情况和。</div> <div>提醒：调节屏幕自动关闭的延迟时间。</div> <div>一键屏闭：点击后设备关闭手机功能。</div> <div>更多：可设置快速面板内快捷功能和顺序显示。</div> <div>访问应用程序</div> <div>如欲访问手机的应用程序，</div> <div>打开手机锁。</div> <div>左右滑动至其他应用程序屏幕。</div> <div>选择启动程序：</div> <div>手机具有可启动手机方式的内置动作传感器，如果在使</div> <div>用某些功能时旋转手机，手机界面会自动切换为横屏模式。如欲设置界面不随手机的旋转而改变，在屏幕顶部打开快捷方式面板，然后选择自动保持。或者，选择设置 → 显示 → 旋转屏幕 → 自动是保持保持。</div> <div>窗口小部件</div> <div>检查是否按住 Menu 键，选择添加小部件，任意选择一个部件长住，拖动到待机。</div> <div>自定义手机</div> <div>根据个人喜好自定义手机：主题和桌面背景特效等。</div> <div>设置当前待机时间和日期</div> <div>在主菜单界面，然后选择设置 → 日期和时间。</div> <div>6</div> | <div>迷你智能手机使用说明书</div> <div>设定时间和日期并更改其他选项。</div> <div>打开或关闭触摸屏</div> <div>在主菜单界面，然后选择设置 → 声音和通知 → 标准 → 点击右边设置 → 选择触摸屏提示音。</div> <div>调整铃声音量</div> <div>按上或下音量按钮可调整铃声音量。</div> <div>切换铃声模式</div> <div>设置铃声模式或铃声通知，请执行以下其中一种操作：</div> <div>快捷方式面板快捷模式直接切换。</div> <div>在待机模式下，紧按住【开机键】，然后选择振动模式。</div> <div>更改铃声</div> <div>在主菜单界面，然后选择设置 → 声音和通知 → 标准 → 点击右边设置 → 手机铃声/默认通知提示音 → 选择铃声。</div> <div>选择铃声响铃的强度</div> <div>在待机模式下，按下 menu 键 → 壁纸 → 选择设置的壁纸强度。</div> <div>调整显示屏幕的亮度</div> <div>在设置菜单下调整屏幕亮度：</div> <div>1. 在主菜单界面，然后选择设置 → 显示 → 亮度。</div> <div>2. 输入 PIN 码并选择确定。</div> <div>如欲关闭自动调整亮度上的按钮。</div> <div>如欲关闭 PIN 码再次输入错误，则 SIM 卡或 USIM 卡被锁定。此操作必须输入 PIN 解锁密码 (PUK) 才能解锁 SIM 卡或 USIM 卡。</div> <div>设置解锁模式</div> <div>可以设置解锁模式以防止他人未经允许使用手机。</div> <div>在主菜单界面，然后选择设置 → 安全 → 屏幕锁定 → 图案。</div> <div>7</div> | <div>迷你智能手机使用说明书</div> <div>2. 注意查看屏幕提示和示例图案并选择下一步 (如有必要)</div> <div>3. 拖动手指至至少连接四个点，画出图案。</div> <div>4. 选择继续。</div> <div>5. 重新绘制图案以确认。</div> <div>6. 选择确定。</div> <div>设置解锁模式</div> <div>设置铃声模式或铃声通知，请执行以下其中一种操作：</div> <div>快捷方式面板快捷模式直接切换。</div> <div>在待机模式下，紧按住【开机键】，然后选择振动模式。</div> <div>更改铃声</div> <div>在主菜单界面，然后选择设置 → 声音和通知 → 标准 → 点击右边设置 → 手机铃声/默认通知提示音 → 选择铃声。</div> <div>选择铃声响铃的强度</div> <div>在待机模式下，按下 menu 键 → 壁纸 → 选择设置的壁纸强度。</div> <div>调整显示屏幕的亮度</div> <div>在设置菜单下调整屏幕亮度：</div> <div>1. 在主菜单界面，然后选择设置 → 显示 → 亮度。</div> <div>2. 输入 PIN 码并选择确定。</div> <div>如欲关闭自动调整亮度上的按钮。</div> <div>如欲关闭 PIN 码再次输入错误，则 SIM 卡或 USIM 卡被锁定。此操作必须输入 PIN 解锁密码 (PUK) 才能解锁 SIM 卡或 USIM 卡。</div> <div>设置解锁模式</div> <div>可以设置解锁模式以防止他人未经允许使用手机。</div> <div>在主菜单界面，然后选择设置 → 安全 → 屏幕锁定 → 图案。</div> <div>8</div> |
| <div>迷你智能手机使用说明书</div> <div>按号</div> <div>了解如何使用通话功能，如在通话过程中通过可选选项拨打和接听电话，或者自定义和使用与通话相关的功能。</div> <div>通话记录</div> <div>可以查看按类型筛选的通话记录。</div> <div>1. 在待机模式下，点击拨号键进入拨号界面和通话记录界面。</div> <div>2. 在通话记录界面，可拨打电话的类型通话记录。</div> <div>3. 选择欲查看其详细通话详情的记录。</div> <div>按号查看</div> <div>点击主界面左下角图标可收起或弹出按号查看，可对通话记录的联系人进行操作。每次拨打联系人号码后，联系人会自动加入通话记录列表。</div> <div>功能菜单</div> <div>包括联系人、快速拨号、设置选项。</div> <div>信息</div> <div>了解如何创建和发送短信 (SMS) 或彩信 (MMS)，以及查看和管理已发送或接收的信息。在本地图服务区分发送或接收信息可能会产生额外的费用，有关详细信息，请查询服务提供商。</div> <div>音乐</div> <div>了解如何使用音乐播放器收听自己喜欢的音乐。</div> <div>视手机软件而定，某些文件格式不受支持。</div> <div>如果文件大小超过可用的存储空间，打开文件时会出错。</div> <div>添加音乐</div> <div>将音乐文件传输到手机中：</div> <div>从无线 Web 下载</div> <div>9</div> | <div>迷你智能手机使用说明书</div> <div>通过数据线拷贝</div> <div>通过蓝牙传输</div> <div>相册</div> <div>了解如何查看存储卡中的图片及播放其中的视频。</div> <div>收音机</div> <div>在收音机上收听电台节目并可以在收听时对自己喜欢的进行录音。在使用 FM 收音机之前，请务必先连接提供的耳机 (耳机用于收音机天线)。</div> <div>录音机</div> <div>帮您快速保存语音记录，可以设置自己喜欢的音质和录音模式。</div> <div>时钟</div> <div>可以设置闹钟，查看世界时间，使用计时器和秒表功能。</div> <div>注意：支持关机闹钟。</div> <div>浏览器</div> <div>浏览器实现了更快的上网速度、更安全的网站导航、更方便的手机上浏览和更多的增强功能。高速下载、换肤、全屏浏览等，浏览速度不仅简单易用，而且功能强大。</div> <div>文件管理</div> <div>学习快速而又有趣地开启您所存储在手机存储中的图片、影片、音乐、文档以及其他种类的文件。</div> <div>注意：</div> <div>1. 手机存储内资料库 MP3、MP4 和图片文件外，系统文件请勿不要随意移动或删除；</div> <div>2. 建议安装手机存储用的 APK 安装包，否则因安装 APK 文件包，出现手机死机重启等现象，将不承担任何责任。</div> <div>日历</div> <div>可以查看日期，查看农历，设置日历事件方便使用。</div> <div>10</div> | <div>迷你智能手机使用说明书</div> <div>电子邮件</div> <div>通过配置个人或公司电子邮件帐户，用手机发送或接收电子邮件。</div> <div>视频</div> <div>可以查看，删除视频文件和缩略图排序。</div> <div>联系人</div> <div>了解如何创建和管理存储在手机内存或者 SIM 卡或 USIM 卡上的个人或联系人的列表，可保存联系人的姓名、手机号码、家庭电话号码、电子邮件地址及更多信息。</div> <div>家庭</div> <div>设置手机联系人群组。</div> <div>计算</div> <div>了解如何在手机上直接执行数学计算，如同普通的手持式或桌面计算器一样，横屏时切换为科学计算器。</div> <div>设置</div> <div>设置 WLAN 的状态，网络通知，添加网络等</div> <div>蓝牙</div> <div>设置蓝牙状态，搜索蓝牙设备，以及修改蓝牙名称等。</div> <div>SIM 卡</div> <div>SIM 卡管理：此功能可设置关闭或打开 SIM 卡；选择数据连接和际际网络是否打开；</div> <div>更多</div> <div>飞行模式：可以使用所有语言服务。</div> <div>默认语言应用：设置默认语言应用</div> <div>11</div> | <div>迷你智能手机使用说明书</div> <div>网络与共享与便捷式热点：可以使用 WLAN 热点、USB 共享网络、蓝牙共享网络、网络共享与便捷式热点连接 VPN；可以添加 VPN 配置文件。</div> <div>移动网络：设置数据连接，4G 服务，偏好设置等。</div> <div>显示</div> <div>设置与手机显示相关的功能，如屏幕待机时间、自动旋转屏幕、互动屏保、屏幕锁定状态、调节亮度、无线显示等。</div> <div>声音和通知</div> <div>设置手机模式：默认模式：标准、静音、会议、户外模式。</div> <div>设置手机来电铃声、信息铃声、以及音等，同时还可以设置自定义情景模式。</div> <div>存储</div> <div>查看手机 SD 卡存储情况</div> <div>电池</div> <div>查看手机电量使用情况</div> <div>了解如何在手机上直接执行数学计算，如同普通的手持式或桌面计算器一样，横屏时切换为科学计算器。</div> <div>本地管理应用程序和更改已安装应用程序的管理设置。</div> <div>安全</div> <div>屏幕锁定方式：设置为无、滑动、图案、PIN、密码、指纹识别。</div> <div>自动锁定：选择自动锁定时间</div> <div>锁住信息：锁住后，会在手机上锁处显示您编辑的信息。</div> <div>加密手机：具体信息查看其说明。</div> <div>设置 SIM 卡锁</div> <div>锁定 SIM 卡：点击锁定 SIM 卡，输入 PIN 码后开启锁定 SIM 卡功能。</div> <div>更改 SIM+PIN：先输入号码 PIN 码，再输入再次输入的 PIN 码。</div> <div>显示密码：开启和关闭显示密码。</div> <div>12</div> | <div>迷你智能手机使用说明书</div> <div>设备管理器：查看或使用设备管理器。</div> <div>未知来源：是否允许安装未知来源的应用，可对其进行开启和关闭。</div> <div>启动管理：允许或禁止使用开机自动运行应用程序；管理应用程序和隐私。</div> <div>手机设置：设置锁定手机或设置解锁数据</div> <div>存储类型：显示存储的类型</div> <div>信任的应用：使用证书和凭证以确保安全使用各个应用程序。</div> <div>从手机存储备份：安装存储在手机存储中的应用程序。</div> <div>清除浏览器：删除手机中的浏览器内容，并清除密码。</div> <div>账户</div> <div>添加账户：更改自动同步功能的设置或管理要同步的账户。</div> <div>语言和输入法</div> <div>语言和输入法：可以设置语言，设置键盘，选择输入法。</div> <div>备份和重置：恢复出厂默认设置会清除手机上所有数据，请谨慎操作。</div> <div>日期和时间</div> <div>自动确定日期和时间：使用网络提供时间。</div> <div>自动确定时区：使用网络提供的时区。</div> <div>设置日期：手动设置当前日期。</div> <div>定时时间：手动设置当前时间。</div> <div>选择时区：设定本地时区。</div> <div>使用 24 小时制格式：设置以 24 小时制显示时间。</div> <div>定时开关机</div> <div>设置手机开关机的时间</div> <div>打印</div> <div>13</div> | <div>迷你智能手机使用说明书</div> <div>连接打印机打印所需的图片等文件</div> <div>关于手机</div> <div>查询有关手机的信息，如系统升级、状态信息、法律信息、手机信号、版本等、处理器等信息。</div> <div>常见问题与解决方法</div> <div>为节省时间和不必要的花费，请联系专业售后服务部门，进行以下简单的检查。</div> <div>无法启动手机</div> <div>检查是否按住【开机键】键至少 1 秒以上。</div> <div>检查电池是否接触不良，请先移除重新安装、重置手机。</div> <div>检查电池电量是否已耗尽，请充电。</div> <div>启动手机，有信息显示</div> <div>检查是否按住 Menu 键，选择添加小部件，任意选择一个部件长住，拖动到待机。</div> <div>输入手机密码：适用了自动上锁功能，必须在使用前输入手机密码。</div> <div>检查音量设置</div> <div>输入 PIN 码，选用了每次开机时输入 PIN 的功能，必须输入 PIN 码。</div> <div>输入 PUK 码：连续三次输入错误 PIN 码，会锁定 SIM 卡，应输入运营商提供的 PUK 码。</div> <div>SIM 卡锁死</div> <div>SIM 卡金属面有污垢，用干净的布擦拭 SIM 卡金属接触点。</div> <div>SIM 卡未装好，按照使用说明书正确安装 SIM 卡。</div> <div>SIM 卡损坏，与您的网络服务提供商联系。</div> <div>无法连接网络</div> <div>信号弱，请移动到信号强的地方重试。</div> <div>超出网络服务范围的区域。</div> <div>SIM 卡无效，与您的网络服务提供商联系。</div> <div>请确认是否否按下或按下键。</div> <div>14</div> | <div>迷你智能手机使用说明书</div> <div>请确认是否因欠费而被禁止呼叫。</div> <div>请确认 SIM 卡是否有效。</div> <div>请确认是否设置了呼叫限制功能。</div> <div>通知铃声</div> <div>请检查是否否将铃声调至不合适。</div> <div>在接收不假地区使用手机，如高楼附近或地下室，无线电波无法有效传达。</div> <div>在通话密集时期使用手机，如上下班时间，线路拥堵造成无法通话。</div> <div>手机无法开机</div> <div>请确认手机已开机，且连接网络。</div> <div>请确认是否因欠费而被禁止呼入。</div> <div>请确认 SIM 卡是否正确。</div> <div>请确认是否设置了呼叫限制功能。</div> <div>联系人无法接听电话</div> <div>请确认麦克风已打开。</div> <div>保持手机下部的麦克风靠近您的嘴巴。</div> <div>待机时间短</div> <div>待机时间与网络的系统设置有关，可能处于接收不良的区域，收到信号时，手机将持续发射以寻找基站，消耗大量电池电量，造成待机时间变短。请移动到信号强的地方使用或暂时关闭手机。</div> <div>需要更换电池，请更换新电池。</div> <div>无法充电</div> <div>检查插头是否连接好。</div> <div>充电线不良，用柔软干净的布擦拭手机和电池的接口。</div> <div>在低于 0 °C 或高于 45 °C 的环境中充电时，请改变充电环境。</div> <div>15</div> | <div>迷你智能手机使用说明书</div> <div>电池或充电器损坏，需更换。</div> <div>如果上述措施您无法帮助您解决问题的，请联系您手机的型号和序号，授权或保修单信息，以及问题的详细描述，然后联系当地的售后服务商。</div> <div>注意</div> <div>用假型号或电池充电会有操作危险，务必按照说明正确使用电池的电源！</div> <div>16</div> |

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information:

This Smart phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: KING 9000 (FCC ID: 2BGA8-KING9000) has also been tested against this SAR limit. This device was tested for typical body-worn operations with the back of the handset kept 5mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 5mm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 5 mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.