

CS11 Instruction Manual



Please read the user manual carefully before using the product and keep it properly

I. Product Profile



- | | | |
|--------------------|------------------|------------------|
| ① HD lens | ② Fill light | ③ Display screen |
| ④ Upturn | ⑤ ¼ screwdriver | ⑥ Fill light key |
| ⑦ Confirm | ⑧ Downturn | ⑨ Loudspeaker |
| ⑩ Charge lamp | ⑪ Mic Holes | ⑫ Video |
| ⑬ Back splint | ⑭ Photo | ⑮ On/Off key |
| ⑯ Turn/WiFi switch | ⑰ TF card groove | ⑱ Reset |
| ⑲ Data interface | ⑳ Recording Keys | |

1

II. Functional description

- The lens of this product can be rotated 180°, and the angle can be adjusted according to the needs during use.
- The charging indicator light is red, the red light flashes slowly when charging, the red light is always on when fully charged.
- The working indicator light is red, the red light is always on when switching on, standby and working.
- Please use genuine TF card, support 4-256G.
- Reset key: If the machine is dead or connection failure, please use the reset pin to insert it into the RESET hole for 3-5 seconds under the boot state, the machine will automatically restore the factory settings and shut down, if you need to use it again, please press the boot key.

III. Methods of use

① On/Off button:

Long press the "⏻" key in the off state to light up the display and hear the beep, long press the "⏻" key in the on state to turn off the display and hear the beep. Short press "⏻" key to return to standby mode when taking photos, recording mode, and short press on/off key to return in setting.

② Photo button:

Short press the "📷" key to enter the photo mode, short press once to take a photo, short press the on/off key to return to standby mode.

③ Video key:

- Short press "📹" key to start recording when in standby mode, short press to stop recording when in recording mode.
- When in standby mode, long press "📹" key to open motion detection, short press to close motion detection.

2

④ Fill light key:

Short press "💡" key to control the screen off, long press "💡" key to turn on the LED light, long press "💡" key to turn off the LED light in the LED light on

⑤ Record button:

Short press "📹" key to enter recording mode, short press "📹" key to start recording in recording mode, short press "📹" key to stop recording in recording state.

⑥ Flip key:

Short press "🔄" key to turn on the screen flip 180°, short press "🔄" key to turn off the screen flip 180° under the on state, long press "🔄" key to turn on the hotspot WiFi, WiFi on Long press "🔄" key to turn off the hotspot WiFi.

⑦ Upside down key:

Short press the "▲" key to scroll up in settings or albums, and short press the "▲" key to fast forward times when playing back videos.

⑧ Confirmation key:

In standby mode long press "OK" key to enter the video screen function setting, in photo mode long press "OK" key to enter the photo parameter setting, in viewing album video and recording files short press "OK" key to Play the video or recording, short press "OK" key to stop playing, long press "OK" key to delete the photo or video screen.

⑨ Scroll down key:

Short press the "▼" button to scroll down while setting or viewing album videos and recordings.

IV. APP Download and Installation

Scan the QR code below to download and install Sports Camera, or search for Sports Camera on Google play or App store to download and install.

3



Android IOS Google

V. Hotspot WiFi

- WiFi Switch: Under the boot state, long press the flip key to turn on WiFi, long press the flip key again to turn off WiFi.
- WiFi Connection: The WiFi setting of your mobile phone or tablet PC will search for a connection with the name of the network starting with "NM (e.g. NM_FF42)", after the connection is successful, open the Sports Camera App and enter the main interface and tap ". Enter the real-time preview interface, and select video/photo in the preview interface. If you encounter any other problems during operation, please click Help in the main interface.



Charging: This machine has a built-in rechargeable lithium battery, access to 5V/1A USB power charging (does not support fast charging) When you first use this machine, please charge it first, the red light flashes quickly when charging, full of red light is always on, don't use the function when charging, it may lead to the battery as well as the TF card damage!

4

Attention:

Please strictly abide by the relevant laws of the country in which you are using this product, and do not use this product for any illegal purposes, and the company is not responsible for any disputes caused by unauthorised video or audio recording.

Notes:

Working temperature:

- Please use it in natural temperature, do not use it in the temperature that the human body can not adapt to.

Working humidity:

- Please use the product in human suitable environmental humidity, do not put the product in a wet working environment, this product is not waterproof, avoid getting wet or exposed to rain.

Shooting Requirements:

- Please use it in the environment of sufficient light source, do not point the camera directly to the sun and other strong light sources, so as to avoid damage to the optical device.

Cleaning requirements:

- Do not use it in an environment with high dust density, so as to prevent the lens and other parts from being contaminated with dust, which may affect the video effect.
- There is a risk of data loss due to malfunctioning of the machine, so please

5

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

* RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

6