



1.Can be connected to the Type-C port of the machine for charging or USB charging.

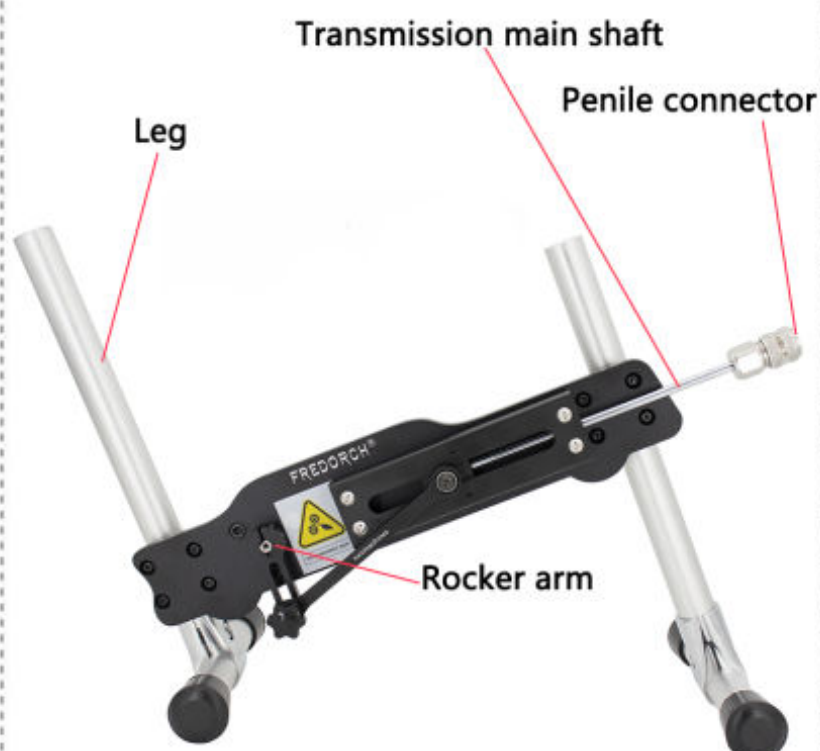

2.Connect the two halves of the power cord (E and F). Connect one end to a compatible power source and the other to the power inlet on the main body.



Remote Control

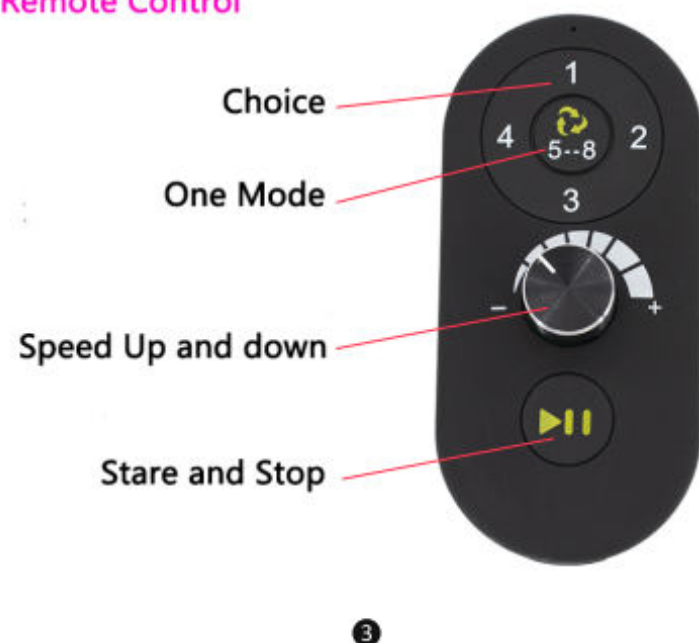

Safety Information

- DO NOT use this product if you suffer from gynecological diseases, heart problems, or any physical or mental condition that renders you unable to withstand strong stimulation without first consulting with your doctor.
- Stop use if you experience any discomfort. For best results, apply a personal lubricant (not included) as needed.
- ONLY use this product with a stable compatible power source.
- ALWAYS use this product on stable, level, and clean surfaces.
- DO NOT use this product if it is damaged or shows signs of malfunction. Repair or replace worn or broken parts before further use.
- DO NOT leave this product unattended during use.
- DO NOT get this product wet or operate it with wet hands.
- ALWAYS disconnect this product from its power source before cleaning, servicing, and storage.

Specifications

Thrusting Speed Range: 50-320 Thrusts/min.
 Thrusting Length Range: 1.2-3.4 in. / 3-8.7 cm
 Rated Power: 86W
 Input Power: 100-240 V~ 50/60 Hz
 Max. Noise Level: 30 dB(A)
 Remote Batteries: Lithium battery charging
 Net Weight: 11 lb./5 kg

Sex Machine



FREDORCH®

86W SEX MACHINE -- FR1
 USER MANUAL
 Wired and wireless version



Read Carefully Before Use
 Keep for Future Reference

Height

1. While holding the machine's main body with one hand, loosen the vertical clamps of the joints by pulling their levers open.
2. Raise or lower the main body until your desired height is reached.
3. Lock the main body by pushing the levers closed.



Height

1. While holding the machine's main body with one hand, loosen the vertical clamps of the joints by pulling their levers open.
2. Raise or lower the main body until your desired height is reached.
3. Lock the main body by pushing the levers closed.



Thrusting Length

1. Loosen the knob on the connecting rod by turning it counterclockwise.
2. Slide the knob and rod forward or backward until you reach your desired thrusting length.
3. Retighten the knob by turning it completely clockwise.



Operation

1. Connect your machine to a grounded outlet. (Do not use a 3-to-2 prong adapter or ungrounded power strip.)
2. Press 1-8 to select your desired thrusting mode

Mode	Description
1	Constant slow thrusting (speed 1)
2	Fast (speed 5) for 3 sec., slow (speed 1) for 2 sec.
3	Slow (speed 1) for 3 sec., fast (speed 5) for 2 sec. stopping for 1/2 sec.
4	Constant slow thrusting (speed 1) for 2 sec., stopping for 1/2 sec.
5	(speed 1) for 2 sec. (speed 4) for 3 sec. stopping for 1/2 sec.
6	(speed 5) for 2 sec. stopping for 1/2 sec. (speed 8) for 2 sec. stopping for 1/2 sec.
7	Slow (speed 1) to fast (speed 18) Fast cycle not controlled by knob
8	From slow (speed 1) to extremely fast (speed 18), 1 sec. not controlled by knob

Speed No.	Thrusts/Min.	Speed No.	Thrusts/Min.	Speed No.	Thrusts/Min.
1	50	7	146	13	242
2	66	8	162	14	258
3	82	9	178	15	274
4	98	10	194	16	290
5	114	11	210	17	306
6	130	12	226	18	320

4. To change the height, angle, and/or thrusting length, stop your machine lease.
5. Once finished, please stop the thrusting and then disconnect your machine from its power source.



Maintenance

- Unplug your machine after each use and prior to any cleaning or other maintenance.
- Clean the exterior of your machine after each use. For the dildo, unscrew it from your machine, rinse it with clean water or mild detergent, and air dry it in a well-ventilated place away from direct sunlight. For the other exterior parts, wipe them with a soft damp cloth. Do not rinse them or use abrasive cleaners or caustic chemicals. Allow all parts to dry completely before further use.
- Check the parts of your machine for any looseness, wear, or damage after use. Tighten, repair, or replace any problematic parts before further use.
- For best results, lubricate the guide rail inside your machine with high-quality sewing machine oil (not included) periodically as shown below.
- If your machine will not be used for an extended period of time, clean and lubricate it before storing it in a cool dry place inaccessible to children.



QR Code for Fredorch official website

FREDORCH®

Thank you for choosing our products!
 If you have any questions or comments, contact us at fredorch.com.cn and we'll resolve your issue ASAP!

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.