

Wireless Bluetooth Headset



USER MANUAL/说明书

Contents

English 1~5

Power On

Open the charging case, the earbuds will automatically power on.

Power Off

Place the earbuds back into the charging case and close the case, the earbuds will automatically power off.

Pairing & Re-pairing

1. Open the charging case and take both Earbuds out of the charging case and the twin Earbuds will power on and pair with each other automatically.
2. Active Bluetooth setting on your device, search and choose to connect You.
3. The earbuds can remember previously paired devices. When you make the second connection, simply active the Bluetooth in your devices, take out the both earbuds from the charging case. They will reconnect to your device automatically. If the earbuds doesn't automatically connect to your device, please active the Bluetooth in your device and click on the Bluetooth list.
4. Mono mode: When Bluetooth connected, you can use either one of the earbuds only by putting the other one back into the charging case and closing the cover.

Factory Reset

- Try the following steps if you fail building connection between earbuds and device: :
1. Clear pairing record between the earbuds and all your devices.
 2. Take out the headphones and turn off the two flash lights, then click on the connection.

LED Indicator Behavior

TWS connecting	both earbuds rapidly flashing blue
TWS connected	one earbud rapidly flashing blue , one earbud light off
Bluetooth pairing	one earbud rapidly flashing blue , one earbud light off
Bluetooth connected	both earbud blue light off

Specifications

Bluetooth version	Bluetooth 5.3
Driver diameter	φ 8 mm
Bluetooth range	15m/33ft
Battery capacity	30mAh×2 (Earbuds) ; 300mAh (Charging Case)
Charging time	60mins
Playtime	6Hours

Control

Stereo Mode		
Play/Pause		tap once
Previous track		long press for 2s
Next track		long press for 2s
Answer phone call/Hang up		tap two times
Reject phone call		long press for 4s
Active voice assistant		tap three times
volume control		
Mono Mode		
Play/Pause		tap once
Answer phone call/Hang up		tap two times
Reject phone call		long press for 4s
Active voice assistant		tap three times

Charging

Charging the earbuds

When the headset is low, it will be low power prompt. 1. When the charging case is powered, put the earbuds into the charging case and close the charging case, the earbuds will charge automatically.

Charging the charging case

When charging case battery is low, the LED indicator of the charging case is rapidly flashing in red.

1. Please use the provided USB-C cable to charge the charging case directly.
2. During charging, the LED indicator of the charging case is rapidly flashing in red. When the case is fully charged, the LED indicators will be turning red.

NOTE: Fully charge both the earbuds and the charging case before the first use.

Warranty

We provide warranty service in accordance with the national three-guarantee policy

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.