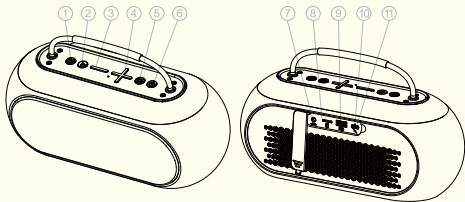




Dear customer:

Thank you for choosing our product. please read all the instructions carefully and retain the manual for future use.

Presentation of the product



- | | | | |
|---|---|----|--|
| 1 | Short press : Wireless / USB / AUX
TF Card mode switch/(FM only used for NR-8866)
Long press:TW5 connection(only used for NR-8866) | 6 | Short press :Bass / Vocal sound effect / Normal sound effect
(only used for NR-8866D)
Long press :ON / OFF |
| 2 | Short press : Pause / Play
Hands free calling (only used for NR-8866)
Long press : Reject incoming calls , Automatically search for radio stations
in FM mode (only used for NR-8866)
Double click : callback the last call (only used for NR-8866) | 7 | AUX input |
| 3 | Short press : Volume decrease
Long press : Previous track | 8 | TF card slot |
| 4 | Short press : Volume increase
Long press : Next track | 9 | USB flash drive slot |
| 5 | Short press : Colorful light flashing mode switching (only used for NR-8866D)
Short press EQ: Bass / Vocal sound effect / Normal sound effect (only used for NR-8866)
Long press : Turn on/off the colorful light (only used for NR-8866D) | 10 | LED indicator |
| | | 11 | Type-C charging port |

Charging the speaker


The speaker has built-in rechargeable battery. When the battery is drained out, speaker would turn off automatically. Please recharge the battery.

Plug the Type-C cable into the charging port. Plug the other end into a USB port on your computer or other devices made for USB charging. Red LED Light illuminates indicating that the device is being charged. Once the speaker is fully charged, LED Light would turn OFF.

Important reminder

- Please do not disassemble, repair or transform the product.
- This product used lithium battery, please do not discard or put it in the fire.
- Do not expose this product to rain or humidity, so as to avoid the damages to the device.
- Please do not recharge the device repeatedly, otherwise the lithium battery inside would be aging quickly.
- In the FM radio mode, please Insert the charging line to the charging port, to get better radio signals and better listening experience.

Pairing the device

- Long press the  key to turn on the power of the speaker.
- You will hear beeping sound and words "The wireless device is ready to pair". The status LED will flash blue, indicating that the device is in pairing mode.
- Set your wireless-enabled device to search for wireless devices.
- When the wireless-enabled device finds the wireless devices, select **"NR-8866/NR-8866D"** from the list of found devices connection pairing to connect and pair.
- After a successful pairing, words "Du" will be heard.

Listening to music wirelessly

 

 



Please ensure that your device (Mobile phone, tablet or other devices) is paired with the Wireless Speaker to stream music wirelessly. once it is paired, play music from your device.

Music mode	Function	Operation buttons
Playing music	Increase Volume	Short press + key
Playing music	Decrease Volume	Short press - key
Playing music	Pause	Short press ⏸ key
Pause	play	Short press ▶ key
Playing music	Previous track	Long press - key
Playing music	Next track	Long press + key

Note: the above functions can be used in all mode, such as Wireless play mode, USB flash drive play mode, Mrico TF card play mode, as well as FM radio mode. In AUX input mode, you need to control the medias through the media source devices, you need to operate with the source devices for previous / next track.

Hands free calling function (only used for NR-8866)

Please ensure your mobile phone is paired with the wireless speaker.

Hands free mode	Function	Operation buttons
Incoming call	Answer incoming call	Short press  key
Incoming call	Reject incoming call	Long press  key
Incoming call	End the call	Short press  key
ON the line	Increase volume	Short press  key
ON the line	Decrease volume	Short press  key
Standby mode and connected to a device	Recall last number	Short press  key 2 times

TWS connection (only used for NR-8866)

- Long press the **🔑** key to turn on the power of the speaker.
- Long press the **M** button on either and you will hear "Ding Ding", then the speakers are connected successfully in TWS mode.
- Search for "**NR-8866**" in your mobile phone and pair it with this device.
- Enjoy your music.
- If you don't need TWS mode, please Long press the **M** button, you will hear "Du" voice then the speakers are not in TWS mode.

Listening to FM radio (only used for NR-8866)

- Long press the **⏻** key to turn on the power of the speaker.
- Insert one end of the charging cable mini interface into the charging port of the wireless speaker. In FM Radio mode, use the USB charging cable as the FM radio antenna, otherwise the station will not be found.
- Short press key **M** to each time until it reaches FM radio mode, sound message "The Radio Mode" will be heard.
- When using it for the first time, please long press the **▶** key (1.5 seconds) , and the speaker will automatically search for channels. After the search is completed (1-2 minutes), the system will automatically save all channels.
- Long press key **-** or **+** to skip selected stations.
- Short press key **-** or **+** to decrease or increase the volume.

Play music through "Auxiliary" mode

- Long press the **0** key to turn on the power of the speaker,
- Insert one end of the auxiliary cable (included) into the auxiliary port, sound message "AUX mode" will be heard. Plug the other end to the audio device (such as phone / MP3 / Player / computer / tablet...etc)
- Select your favorite song at the source device to play.
- Short press key **-** or **+** to decrease or increase the volume.

Note: media can be controlled only through the source devices, while playing music in auxiliary mode.

Stream music from TF card or USB flash drive

- Long press the **⏻** key to turn on the power of the speaker.
- Insert the micro TF card or USB flash drive preloaded with songs, into the micro TF card slot or USB flash drive slot of the speaker correspondingly, sound message "USB mode" or "TF card mode" respectively will be heard. Speaker would automatically start playing songs from the micro TF card or USB flash drive.

Tips!!

When the speaker is not in use, turn it OFF in order to save the battery power.

Troubleshooting

Problem	Possible cause	Solution
Low sound level	Source (Tablet, Mobile phone, Laptop, etc.) volume too low.	Adjust source volume
	Low battery or battery dead	Low battery or replace battery
Sound distorted	Low battery or battery nearly dead	Low battery or replace battery
No sound at all	Source (Tablet, Mobile phone, Laptop,) turned off.	Turn the source on
	Speaker turned off	Turn the speaker on
	Media paused on source	Play media from source
Wireless BT cannot connect	There are short functional obstacles in the product	Restart the speaker
	Product has been connected with other devices	Disable wireless BT of other source devices and search for wireless BT again

Specification

Wireless version	5.1
Wireless distance	up to 10 metres
Power	15W×2(NR-8866)
Horn size	66mm
FM frequency range	50Hz~20kHz (only used for NR-8866)
Unit size	L279 x W105 x H200mm
Power input	DC 5V 2A
Charging time	2.5 hours(NR-8866) / 3 hours(NR-8866D)
Play time	7 hours(NR-8866) / 4 hours(NR-8866D) (70% Volume)
Built-In rechargeable battery	1800mAh(NR-8866) / 3000mAh(NR-8866D)
Micro TF card/USB flash drive	Support up to 32GB
Multiple functions	Wireless play / USB flash drive / Hands-free calling / Micro TF card (AUX input / TWS connection FM radio only used for NR-8866) Colorful lights.only used for NR-8866D)

Safety instructions

- Keep the speaker away from heat sources, direct sunlight, humidity, water and any liquids.
- Do not operate the speaker if it has been exposed to water, moisture or any other liquid to prevent against electric shock, explosion and / or injury to yourself and damage to speaker.
- Do not use the speaker if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by a qualified electrician. Improper repairs may place the user at serious risk.
- Do not use the speaker with wet hands.
- Do not put objects into any of the openings.
- Keep the speaker free from dust, lint etc.
- Do not use this speaker for anything other than its intended use.
- Keep the speaker out of reach of children.

- This appliance is not a toy.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat, place, such as sunshine, fire or the like.

Care and maintenance

Read the following recommendations before using the wireless speaker. Following these recommendations will help you get the most out of the product, and you will be able to enjoy the product for many years.

- Do not expose the unit to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Don't use abrasive cleaning solvents to clean the unit.
- Do not expose the unit to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Don't dispose of the unit in fire as it will result in an explosion.
- Don't expose the unit to contact with sharp objects as this will cause scratches and damage.
- Don't let the unit fall down onto the floor, the internal circuit might get damaged.
- Don't attempt to disassemble the unit as it may get damaged if you are not professional.

RoHS

FC CE
MADE IN CHINA



FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.