



Presentation of the product

- 1 Short press: Volume increase / Long press: Previous track
- 2 Short press: Volume decrease / Long press: Next track
- 3 Short press: Power / Play / Long press: Call light to switch mode / Long press: Call light
- 4 Short press: Volume increase / Long press: Next track
- 5 Type-C charging port
- 6 USB flash drive slot
- 7 AUX input
- 8 LED indicator
- 9 TF card slot

Speaker and microphone charging

Wireless speakers and microphones have built-in rechargeable lithium batteries. When the battery runs out, the speaker and microphone will automatically turn off. Please charge your speakers and microphones promptly.

Charging method:

- Plug the Type-C end of the charging cable into the charging port of the speaker or microphone, and plug the other end into the charge cable or the USB port of the computer/other USB charging device used on the USB charging mode. When charging successfully, the indicator light under the charging port will be showing red LED, and the red LED light will turn off when the speaker is fully charged.

Important reminder

- Do not disassemble, repair or modify the speaker without authorization.
- The speaker contains a built-in lithium-ion battery. Please do not discard the battery or put the speaker in the fire.
- Do not expose the speaker to rain or humid environment to prevent the speaker from being damaged.
- Do not expose the speaker to exposure to the sun or high-temperature environment to prevent the speaker from being damaged.
- Do not charge the device repeatedly for a long time to avoid accelerated aging of the built-in lithium-ion battery.

Instructions for wireless microphone

- Long press the **Q** key to turn on the power of the speaker.
- Short press the **+** key to adjust a comfortable volume.
- Long press the **Q** key to turn on the microphone, then it will connect to the speaker automatically.
- When the microphone pairing is complete, the indicator LED will show blue light.

Action buttons	Use features
Long press Q key	Microphone Power on/off
Short press + key	Speaker control: Play/Pause
Long press + key	Speaker control: Next song
Long press - key	Speaker control: Previous song
Short press EFF key	Distortion effect of voice

Press button	Key	Turn on the microphone mode
Short press	+ key	Microphone volume increase
Short press	- key	Microphone volume decrease
		Short press: auto play / Long press: 10BT for 2 seconds

Karaoke mode: Pure singing in your way

- Turn on the speaker and microphone to ensure that both are paired successfully.
- Open the music APP and playback your favorite song.
- Long press the **EFF** button on the microphone to turn on the pure singing function: Singing mode.
- Long press the **EFF** button on the microphone to turn off the pure singing function: Background music mode.
- In order to save power, please remember to turn off BT speaker and microphone when you are not using them.

Magic voice on the microphone

- Turn on the speaker and microphone to ensure that both are paired successfully.
- Press the **EFF** button on the microphone to change voice modes (Magic effect / Echo effect / Magic voice / Futuristic voice / Chorus's voice, etc.).

Instructions for wireless speaker

- Long press the **Q** key to turn on the power of the speaker.
- Short press the **+** or **-** key to adjust a comfortable volume.
- Power on flash blue light, connected driving blue light. Power off: the light turn off.
- Wireless connector would be the standby mode when the speaker is turned on, ready to pair wireless device.
- USB mode/TF card mode: the speaker will play songs automatically when insert USB or TF Card.
- When the speaker is not in use, please turn off.

Wireless connection

- Toggle the standby switch to turn on the power of the speaker. Select wireless pairing mode **magic** to your smartphone/ tablet, then wireless connected.
- Power on flash blue light, connected driving blue light. Power off: the light turn off.
- The speaker will reconnect to the last paired wireless device automatically when power on.

USB/TF Card mode

- Insert the USB or TF Card. Music will play automatically.

Aux input mode

- Use the included 3.5mm aux cable to connect the speaker to other audio sources device. Music will play. Control the device previous or next songs only from audio sources device.

Tip:

Please Long press the **Q** switch to turn OFF the power of the speaker

How to use

Mode	How to function	Functional effects
Wireless	Short press + key	Volume up
Wireless	Short press - key	Volume down
TF Card/Aux/Air play mode	Short press + key	Volume up
Wireless	Short press - key	Volume down
Wireless	Long press + key	Previous track
Wireless	Long press - key	Next track

Troubleshooting

Problem	Possible cause	Solution
Low sound level	Source (radio, mobile phone, laptop, etc.) volume is low.	Adjust source volume.
Low battery or battery dead	Low battery or battery dead	Low battery or replace battery
Sound distortion	Low battery or battery dead	Low battery or replace battery

No sound or all	Source (radio, mobile phone, laptop, tablet, etc.) Speaker is turned off	Turn the source on
	Speaker is turned off <td>Turn the speaker on</td>	Turn the speaker on
	Media player no source <td>Play media file source</td>	Play media file source
Wireless connection error	There are other Bluetooth devices in the range <td>Restart the speaker</td>	Restart the speaker
	Speaker has been connected with other device	Check wireless or other media device and search for wireless again

Microphones specifications

Built-in rechargeable battery	3.7V 600mAh
Operating frequency	2.4GHz

Sound specifications

Wireless version	5.2 + EDR
Wireless distance	up to 10 meters
Output power	15W
Item size	4*8*8cm
Frequency range	50Hz-20KHz
Item size	128*52*118mm/5.05*2.09*4.65inch
Power input	DC 5V 1A
Charging time	4.5 hours
Play time	10 hours (10% volume)
Built-in rechargeable battery	3.7V 600mAh
Micro TF card/USB flash drive slot	Support up to 32GB
Multiple Functions	USB flash drive / Micro TF card / AUX input

Safety Instructions

- Keep the speaker away from heat sources, direct sunlight, humidity, water and any fire.
- Do not operate the speaker if it has been exposed to water, moisture or any other liquid to prevent against electric shock, explosion and/or injury to yourself and damage to speaker.
- Do not use the speaker if it has been damaged or damaged in any way.
- Repair or electrical equipment should only be performed by a qualified electrician. If proper repairs have been made the user is serious risk.
- Do not put objects into any of the openings.
- Keep the speaker free from dust, etc.
- Do not use this speaker for anything other than its intended use.
- Keep the speaker out of reach of children.
- This speaker is not a toy.
- Batteries (battery pack, or battery installed) shall not be exposed to excess or heat (above 60°C or 140°F), fire or the like.

Care & Maintenance

Read the following recommendations before using the Wireless Speaker. Following these you will be able to enjoy the product for many years.

- Do not expose the unit to dust, moisture or humidity to avoid the product's internal circuit being affected.
- Do not use abrasive cleaning solutions to clean the unit.
- Do not expose the unit to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Don't dispose of the unit in the fire as it will result in an explosion.
- Don't expose the unit to contact with sharp objects as this will cause scratches and damage.
- Don't let the unit fall down onto the floor. The internal circuit might get damaged.
- Don't attempt to disassemble the unit as it may get damaged if you are not professional.



FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

*RF warning for Mobile device:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.