



NR-5506

OUTDOOR  
WIRELESS SPEAKER




User manual

Dear customer:

Thank you for choosing our product. please read all the instructions carefully and retain the manual for future use.

#### Presentation of the product

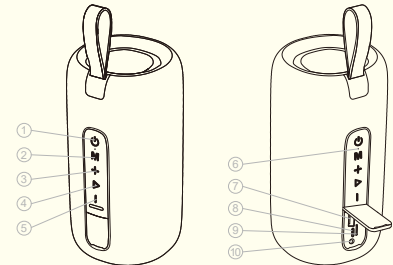

- 1 Short press : Bass / Vocal sound effect / Normal sound effect  
Long press : ON/OFF  
Press twice :TWS connection
- 2 Short press : Wireless / FM / USB / TF Card mode switch  
Long press : Colorful light flashing mode switching / Turn on / off colorful light.
- 3 Short press : Volume decrease  
Long press : Previous track
- 4 Short press : Pause / Play / Hands free calling  
Long press : Reject incoming calls / Automatically search for radio stations in FM mode
- 5 Short press : Volume increase  
Long press : Next track
- 6 LED indicator
- 7 USB flash drive slot
- 8 Type-C charging port
- 9 TF card slot
- 10 AUX input

#### Charging the speaker

The speaker has built-in rechargeable battery. When the battery is drained out, speaker would turn off automatically. Please recharge the battery.

Plug the Type-C cable into the charging port. Plug the other end into a USB port on your computer or other devices made for USB charging. Red LED Light illuminates indicating that the device is being charged. Once the speaker is fully charged, LED Light would turn OFF.

#### Important reminder

- Please do not disassemble, repair or transform the product.
- This product used lithium battery, please do not discard or put it in the fire.
- Do not expose this product to rain or humidity, so as to avoid the damages to the device.
- Please do not recharge the device repeatedly, otherwise the lithium battery inside would be aging quickly.
- In the FM radio mode, please insert the charging cable to the charging port, to get better radio signals and better listening experience.

#### Pairing the device

Long press **⏻** to turn on the speaker.

- You will hear beeping sound and words "The wireless device is ready to pair". The status LED will flash blue, indicating that the device is in pairing mode.
- Set your wireless-enabled device to search for wireless devices.
- When the wireless-enabled device finds the wireless devices, search for model " **NR-5506** "of this product pairing link on your wireless device.
- After a successful pairing, words "Du" will be heard, indicating that the device is paired and the status LED will stay solid blue.

#### Listening to music wirelessly

Please ensure that your device ( Mobile phone, tablet or other devices ) is paired with the Wireless Speaker to stream music wirelessly. once it is paired, play music from your device.

Music mode	Function	Operation buttons
Playing music	Increase Volume	Short press <b>+</b> key
Playing music	Decrease Volume	Short press <b>-</b> key
Playing music	Pause	Short press <b>▷</b> key
Pause	play	Short press <b>▷</b> key
Playing music	Previous track	Long press <b>-</b> key
Playing music	Next track	Long press <b>+</b> key

Note: the above functions can be used in all mode, such as Wireless play mode, USB flash drive play mode, Mrico TF card play mode, as well as FM radio mode. In AUX input mode, you need to control the medias through the media source devices. you need to operate with the source devices for previous / next track.

#### Hands free calling function

Please ensure your mobile phone is paired with the wireless speaker.

Hands free mode	Function	Operation buttons
Incoming call	Answer incoming call	Short press <b>▷</b> key
Incoming call	Reject incoming call	Long press <b>▷</b> key
Incoming call	End the call	Long press <b>▷</b> key
ON the line	Increase volume	Short press <b>-</b> key
ON the line	Decrease volume	Short press <b>+</b> key
Standby mode and connected to a device	Recall last number	Short press <b>▷</b> key 2 times

#### Colorful Lights

- Long press the **⏻** key to turn on the power of speaker.
- Long press the **M** button to switch the light mode, turn on the light, and turn the light off.

#### TWS connection

- Long press the **⏻** key to turn on the power of the two speaker.
- Press twice and hold the **⏻** button on either speaker to turn on/off the TWS function, and you will hear a "Du" sound. The speaker will then be successfully connected in TWS mode.

- Search for model name of this product pairing link on your wireless device.
- Enjoy your music.
- If you don't need TWS mode, please press twice the **⏻** button, you will hear "Du" voice then the speakers are not in TWS mode.

#### Stream music from TF card or USB flash drive

- Long press the **⏻** key to turn on the power of the speaker.
- Insert the TF card or USB flash drive preloaded with songs, into the micro TF card slot or USB flash drive slot of the speaker correspondingly, sound message "USB mode" or "TF card mode" respectively will be heard. Speaker would automatically start playing songs from the TF card or USB flash drive.

#### Play music through "Auxiliary" mode

- Long press the **⏻** key to turn on the power of the speaker.
- Insert one end of the auxiliary cable (included) into the auxiliary port, sound message "AUX mode" will be heard. Plug the other end to the audio device (such as phone / MP3 / Player / computer / tablet...etc)
- Select your favorite song at the source device to play.
- Short press key **-** or **+** to decrease or increase the volume.

Note: media can be controlled only through the source devices, while playing music in auxiliary mode.

#### Listening to FM radio

- Long press the **⏻** key to turn on the power of the speaker.
- Plug the AUX cable into the AUX connector of the wireless speaker, and in FM Radio mode, the AUX cable is used as an auxiliary antenna for FM radio.
- Short press key **M** to each time until it reaches FM radio mode, sound message "The Radio Mode" will be heard.
- Long press key **+** or **-** to skip selected stations.
- Long press the key **▷** for to AUTO-SCAN the stations.
- It will take few minutes to search all the stations. once all the stations are scanned, they get registered in memory, automatically.
- Short press key **+** or **-** to decrease or increase the volume.

#### Tips!!

When the speaker is not in use, turn it OFF in order to save the battery power.

#### Troubleshooting

Problem	Possible cause	Solution
Low sound level	Source ( Tablet, Mobile phone, Laptop, etc. ) volume too low.	Adjust source volume
	Low battery or battery dead	Low battery or replace battery
Sound distorted	Low battery or battery nearly dead	Low battery or replace battery
No sound at all	Source ( Tablet, Mobile phone, Laptop. ) turned off.	Turn the source on
	Speaker turned off	Turn the speaker on
	Media paused on source	Play media from source
Wireless BT cannot connect	There are short functional obstacles in the product	Restart the speaker
	Speaker has been connected with other devices	Disable wireless BT of other source devices and search for wireless BT again

#### Specification

Wireless version	5.3
Wireless distance	up to 10 metres
Output power	8W x 2
Horn size	66mm
Frequency range	50MHz-20MHz
Unit size	L10x W10 x H20cm
Power input	DC 5V 1A
Charging time	3 hours
Play time	3 hours ( 70% Volume )
Built-In rechargeable battery	3.7V / 1800mAh
Micro TF card flash drive	Support up to 32GB
Multiple functions	Wireless play / FM radio / USB flash drive / Hands-free calling / TF card / AUX input TWS connection / Colorful lights

#### Please read the following maintenance instructions carefully, so as to ensure the service life of the speaker product:

- Do not use the mobile phone fast charger to charge the wireless speaker. Please use the charger that matches the speaker (DC 5V 1A) to charge the wireless speaker. If it does not match, it may lead to failure of charging and even damage to the wireless speaker. (special attention should be paid here)
- Do not put the wireless speaker in liquid or moisture to avoid damage to the built-in circuit board.
- Do not wipe the wireless speaker with corrosive cloths.
- Do not expose the wireless speaker to extremely high or low temperature environment, otherwise the electronic components inside the device will be damaged, and even some plastic parts will be damaged.
- Do not put this wireless speaker in fire as it may explode.
- Do not store the wireless speaker near sharp objects to avoid scratching the device.
- Please do not drop the wireless speaker from a height, as the internal components will be damaged.
- If you are not a professional, do not attempt to open or assemble the wireless speaker, otherwise the wireless speaker may be damaged.

#### Safety Tips

- Keep the wireless speakers away from heat, direct sunlight, moisture, water or any other liquids.
- Do not perform any operation if the wireless speaker has been exposed to water, moisture or other liquids.
- If the bad wireless speaker has been dropped from a height or damaged for other reasons, please do not continue to use it.
- If the wireless speaker needs to be repaired, please seek professional help, do not dispose of it without authorization; improper disposal will bring huge risks!
- Please do not handle the wireless speaker with wet hands.
- Please do not place other irrelevant objects on any port of the wireless speaker.
- Keep the wireless speakers away from dust, paper scraps, etc.
- Keep wireless speakers out of the reach of children.
- This wireless speaker is not a toy.

**Note:** Consumers are requested to read the above precautions carefully. Consumers are responsible for the damage and safety accidents of wireless speakers caused by the above matters, and the merchants do not bear any responsibility!

RoHS



MADE IN CHINA

## FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.