

## User's Manual

(Multi-Language)

# WELCOME TO USE VEIDOO CIOUD DIGITAL PHOTO FRAME (English)

#### **Interface Introduction**

**Type-C Charger:** Veidoo Cloud Digital Photo Frame to be used while

charging

SD Card slot: Veidoo Cloud Digital Photo Frame supports SD card

insertion to expand capacity

**USB Interface**: Veidoo Cloud Digital Photo Frame can be connected to

external devices via the USB port and supports OTG function

On/Off button: Power on / Power off


## Steps to use

1. Connect to the charger

- 2. Turn on the frame and complete the setting
- 3. Download Frameo APP and Register your personal account
- 4. Connect your phone with the frame via code
- 5. Select photos/videos from album and send to the frame
- 6. Invite friends/family to share photos via Frameo APP

## Frameo APP Features

Navigating your Frameo

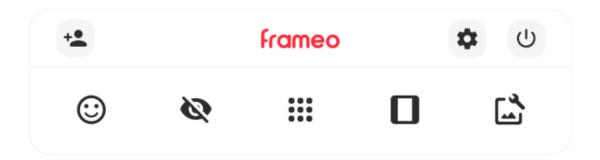

#### \* Add friend

This will generate a code that you can share with your friends and family so they can connect and send photos to your frame.



## Settings

Changes the name of your frame. Sets the language and date used on the frame.

## (I) Power menu

Tap the power icon to access the power menu. Here you can power on/power off, restart your frame or enter sleep mode.

## React

Tap one of the reactions to let the sender know how it made you feel.



## W Hide photo

Hides the current photo. This means that the photo will no longer be shown in the slideshow. If needed the photo can be shown again through

the settings menu.

## Gallery

Opens a gallery which allows for easy and fast navigation through your photos.

## ☐ Fit to frame/Fill frame

This toggles how the photo is shown.

## Adjust photo

Allows you to adjust the position of the photo in the frame for an even better fit.

#### **Contact Us:**

Customer Service Email: <a href="mailto:support@veidoo.com">support@veidoo.com</a>

Manufacturer: Shenzhen Veidoo Digital Vision Co., Ltd

Address: 4th Floor, Block 6, Saitu Technology Park, No. 137 Bulan Road,

Jihua Street, Longgang District, Shenzhen, China.518100

#### EC| REP

Name der firma: SINO-SEAR GmbH Adresse: Feuerbachstrasse11, 14471 Potsdam, Germany

Tel: +49 331 9513 0908 Email; info@sino-sear.com

#### UK | REP

Company Name: REPLAB CONSULTING LTD Adresse: 28 BARLETTA HOUSE VELLACOTT CLOSE

CARDIFF, WALES, CF10 4AF Tel: +44 29 2255 0988 Email: UKREP @REPLAB.CC

WARNING: CHOKING HAZARD -- Small parts. Not for children under 3 yrs.



#### FCC Warnning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection againstharmful interference in a residential installation. This equipment generates, uses and can radiateradio frequency energy and, if not installed and used in accordance with the instructions, maycause harmful interference to radio communications. However, there is no guarantee thatinterference will not occur in a particular installation. If this equipment does cause harmfulinterference to radio or television reception, which can be determined by turning the equipmentoff and on, the user is encouraged to try to correct the interference by one or more of thefollowing measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.