 


Remote Control Connection Instructions


Step 1: Open the Back Cover of the Remote Control

Open the back cover of the remote control in the direction shown in the illustration.

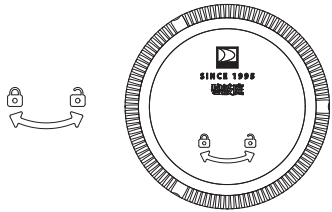

Step 2: Insert the Batteries

Insert two 1.5V AA batteries into the battery compartment and secure them according to the indicated directions. After securing the batteries, press any button on the front of the remote control to activate it, and the green light at the top front of the remote control should turn on (indicating that the remote control is not yet connected).

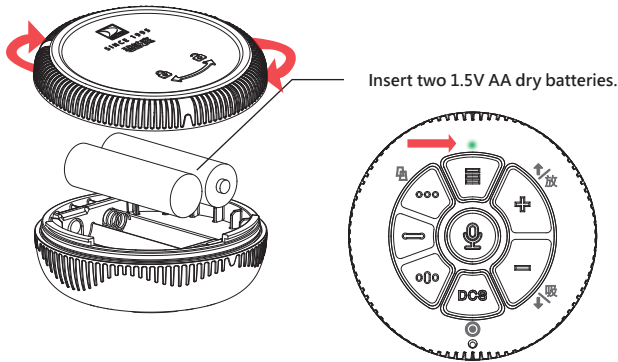


Step 3: Connect the Remote Control to the Device

Press and hold the knob on the left side of the device for two seconds until the screen displays the connection symbol.

Press and hold the rhythm button on the remote control until the green light starts flashing. Then, bring the remote control within 15 cm of the device to establish the connection.

A successful connection is indicated by two beeps and the green light turning blue. The connection symbol will also appear on the device's screen, confirming that the connection has been successfully established.

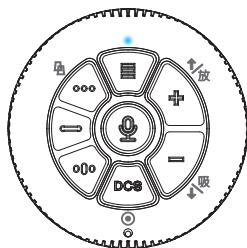

The device will display the connection symbol.



Function Indicator Explanation

Blue Light Mode on the Device

- (1) Rhythm Button:
- (2) Long Press: Connect/Disconnect the device.




Red Light Mode on the Device

Strengthen Suction Button

Yellow Light Mode on the Device

Wave Suction Button

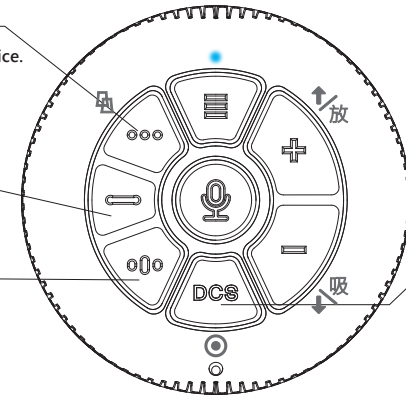

DCS Button:


- (1) A-B-C-III-II-I: Switch vibration frequencies.



- (2) Confirm Button: Used to confirm during the operation paging function.
- (3) Confirm Button: Used to confirm during the adjustment of suction function.

Function Explanation of the +/- Buttons

(1) Adjusting Suction and Release Time

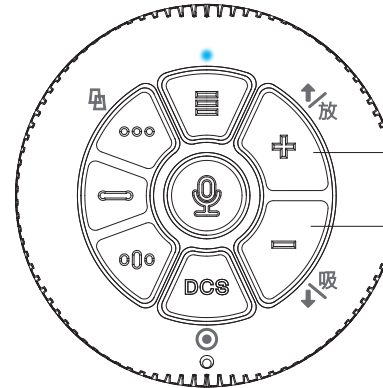

Adjusting Release Time:
Press and hold the "+" button for 1 second until the device's release time starts flashing yellow. Then use the +/- buttons to increase or decrease the release time by 0.1 seconds.

Adjusting Suction Time:
Press and hold the "-" button for 1 second until the device's suction time starts flashing yellow. Then use the +/- buttons to increase or decrease the suction time by 0.1 seconds.

Press the DCS button to confirm or it will automatically return to the main screen after 5 seconds.

(2) In the Main Screen, Adjusting Time by +/- 5 Minutes

(3) Navigating the Menu




Use the "+" button to scroll up.

Use the "-" button to scroll down.

Press the DCS button to confirm the selection. If there is no action within 12 seconds, it will automatically return to the main screen.

Page Button Function Explanation

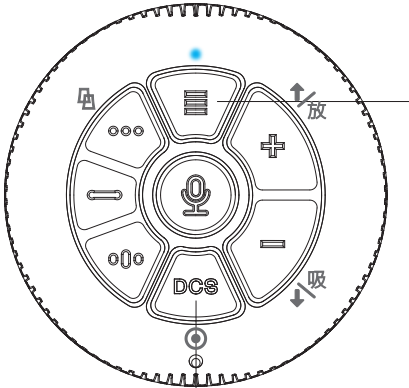

(01) Press once to change the page (cyclic pages)

Page Screen:


(1) Part Mode (First Page)



Contents of the Part Mode Selection Menu:


Breast		F Private1	
Abdomen		F Private2	
M Private1		Shoulder	
M Private2		Face	
Hip			

(2) Settings (Second Page)

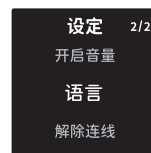

Contents of the Settings Menu:

Disconnect
Sound/Mute
Language
(1)简体中文
(2)繁体中文
(3)English

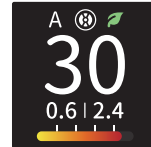


(3) Press the third time to return to the main screen



Press the DCS button to select "Language" and navigate up and down to choose the desired language. Once the language is confirmed, press the DCS button.

Language changed successfully.
Return to the main screen.

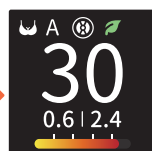


After confirmation, it will jump to the mode selection screen.

All selections are made using the "+" and "-" buttons to navigate up and down.

(02) Press the Page Button Twice Quickly to Return to the Main Screen



Voice Button Function Explanation

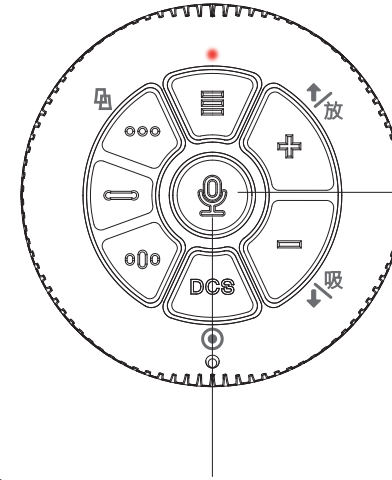

A short press pauses/resumes the operation of the device.

Voice Button:

(01) Upon successfully recognizing discernible content, a correct sound will be emitted. The device will then synchronize with this command.

Below are the recognizable voice commands:

1. Connect/Pair/Link: This command establishes a connection with the device.
2. Release: This command disconnects from the device.
3. Add 5/10 minutes: Increases the operation time of the device (maximum increase up to 60 minutes).
4. Subtract 5/10 minutes: Decreases the operation time of the device (minimum decrease down to 1 minute).
5. Stop/End: Completely stops the operation of the device.
6. Pause: Pauses the operation of the device.
7. Continue/Start: Resumes the operation from the paused state.
8. Chest/Abdomen/Hip/Shoulder & Neck/Facial: Specific body part selection.

The voice function can only recognize the following phrases

(02) To use the voice function, long-press the voice button and speak the designated phrase. When receiving the phrase, the indicator light will be red. Upon successful recognition, a correct sound will be emitted, and the device will synchronize with the command. If the phrase cannot be recognized, there will be no response, and the phrase needs to be re-recognized.

Precautions for Operating the Voice Button:

1. When long-pressing the voice button, only one command can be recognized at a time. Please do not speak consecutive phrases for recognition.
2. Speak the phrases clearly during recognition to avoid recognition errors or failures.

Explanation of Other Functions:

(1) If there are 45 minutes remaining on the device originally, upon selecting the page mode, it will revert back to 30 minutes and commence operation.




If the original time exceeds 30 minutes, upon selecting the mode, it will start counting down from 30 minutes.

(2) If the original time on the device is less than 30 minutes, upon selecting the mode, it will start counting down from that time.



(3) If you wish to exit the mode, what steps should be taken?


A: Using the chest mode as an example:
You need to press the button corresponding to the mode that is currently operating to exit the mode.

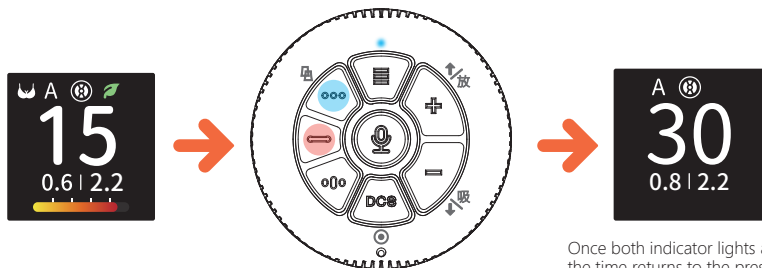

Once both indicator lights are turned off, the time returns to the preset value, and the suction and release time remains at the setting before cancellation.

This indicates the illuminated indicator lights on the device itself. The buttons on the remote control do not have indicator lights.

A: Using the chest mode as an example:
If the device is currently indicating a red-blue light in the operating mode, pressing the yellow light will exit the mode, and the yellow and red lights will illuminate.

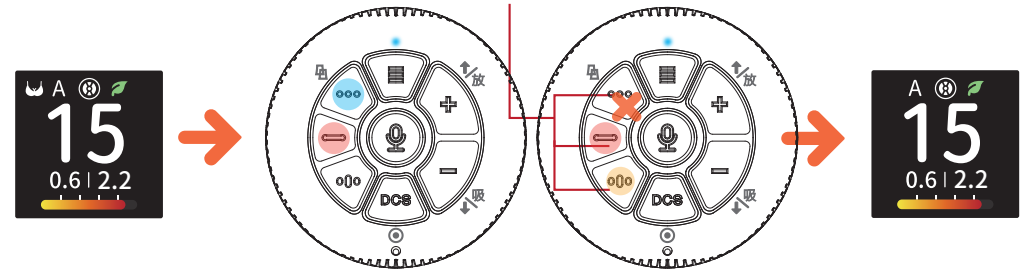

At this point, the indicator lights show red and yellow, and the time remains at the remaining minutes of the mode. The suction and release time also remain at the setting when the mode stopped.

A: Using the chest mode as an example:
Directly adjusting the suction and release will exit the mode.




When in chest mode, adjusting the suction and release will return to the mode without any specific setting.

And it will continue operating with the adjusted suction and release settings.


(4) The DCS buttons A, B, C, III, II, and I can be operated in any mode.



*However, in page mode or when changing suction and release time, the DCS button functions as the "Confirm" button. 

(05) If the indicator lights of the product are continuously flashing red or not illuminated at all during normal use, indicating that the device cannot be operated properly, please follow the instructions on the back cover to open it and replace the batteries.

And it is essential to replace both 1.5V AA dry batteries with new ones and securely tighten the back cover to prevent water ingress or operational issues.

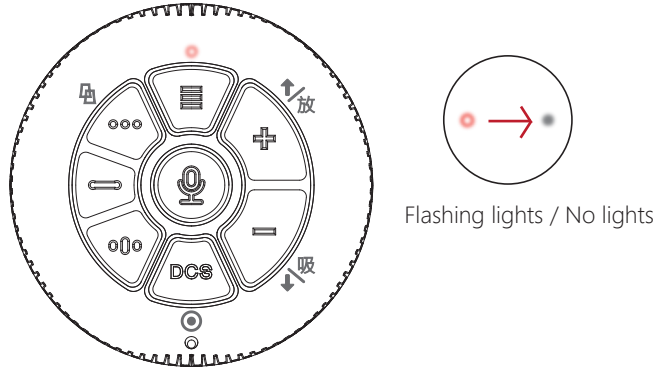

Remote Control Operation Precautions:

- * In any specific part mode, the operation time cannot be adjusted.
- * Once the suction and release frequency seconds are adjusted in the part mode, it will return to the customized state and continue the operation time based on the remaining minutes.
- * When the part mode or customized state is stopped prematurely or finishes operation, it will return to the preset 30 minutes, but the suction and release seconds will remain at the time when it stopped.
- * If you need to connect to another device, the remote control must first disconnect from the original paired device.
- * After the remote control is not used, it will enter sleep mode after 20 seconds. It can be awakened by pressing any button, and the indicator light will illuminate.
- * The device and the remote control can be used normally within a distance of at least 8 meters.
- * If the remote control runs out of battery or malfunctions for other reasons, the device screen will stay on the page mode screen. Press any button on the device to return to the main screen.
- * When in the connected state, the device can disconnect from the remote control by long-pressing the left knob. To reconnect, it needs to be paired again within 15 cm.

Product Features:

The remote control can synchronize with the device's functions after being connected, optimizing the convenience of using the device. With a moderate size, it fits comfortably in the palm for easy single-handed operation. The voice button enables quick operation of device commands by directly synchronizing with the device. During operation, if dirt or stains from essential oils accumulate, they can be easily wiped clean with a damp cloth. The textured pattern on the side of the product prevents slipping and facilitates battery replacement. After use, it can be conveniently stored on top of the device using the magnetic attachment.

Precautions for Use:

1. Before using this product, please read the instruction manual and usage precautions carefully.
2. If there are any doubts or abnormalities during use, please stop using it immediately.
3. Do not disassemble the main body of the product. If the product encounters abnormal conditions, please contact official customer service for assistance.
4. Do not place it in areas accessible to children.
5. Handle with care to avoid dropping the product from a height.
6. If the product gets oily or stained, please wipe it with a damp cloth. Do not immerse it in water.
7. After replacing the batteries, be sure to securely lock the back cover to prevent the batteries from falling out.
8. The body of the product is only splash-proof. Do not immerse it directly in water.
9. After cleaning the remote control, please wipe it dry before use.
10. Please use a soft cloth for wiping. Permanent scratches caused by personal reasons are considered normal wear and tear and are not covered by the warranty.
11. Only use AA dry batteries for placing or replacing batteries. Do not use rechargeable batteries.

Warranty Terms:

This clause applies only to the normal operation of our company's products and does not cover damages caused by force majeure or human factors.

Warranty Period:

- * The product comes with a one-year warranty period during which repairs are free of charge. If the warranty period exceeds one year, the actual damage will be subject to repurchase. (Warranty period begins from the date of shipment)/(Warranty period begins from the date of purchase)
- * To ensure the customer's warranty rights, the product is equipped with a Warranty Card. Please keep the Warranty Card during the warranty period for identification by the manufacturer.
- * Charges may apply for repairs due to improper operation or damage caused by natural disasters, etc., depending on the severity of the damage.
- * If a replacement occurs during the warranty period, the remaining warranty period of the original product will continue, and no new warranty period will be calculated.

I. The warranty period for service terminates under the following circumstances:

1. The product is determined to have been opened, disassembled, expanded, altered, or repaired by unauthorized individuals.
2. The warranty center cannot identify the product (e.g., due to unidentifiable product serial numbers) as having been manufactured by the original factory.

II. The following conditions will be excluded from the warranty scope during the one-year warranty period, and charges may apply for replacement depending on the actual situation:

1. Damage caused by replacing non-1.5V AA dry batteries.
2. Damage caused by not following the instructions in the product manual.
3. Damage caused by the use of corrosive solvents or cleaning agents, immersion, and other improper cleaning methods resulting in liquid damage to the main unit.
4. Damage caused by abnormal factors other than normal product conditions.

Disclaimer:

If products not produced by our company are used but are publicly claimed to be products of BIBOTING, we reserve the right to pursue legal action.

Repair Process:

Please consult customer service and provide your location to determine the appropriate repair center and address for sending the product for repair.

Repair Product Steps:

1. Please call customer service to confirm if the product needs repair.
2. Please package the product properly.
3. Choose the region to send the product for repair.

For Taiwan and other regions, please send to: Biboting International Co., Ltd.
address:8 F., No. 66-7, Sec. 2, Nankan Rd., Luzhu Dist., Taoyuan City 33855, Taiwan (R.O.C.)

Customer Service Phone: (03)312-1997

Service Hours: Monday to Friday 08:30-17:30 (excluding statutory holidays)

* Shipping Regulations (Including Warranty Period): Customers are responsible for shipping the product for repair, and all shipping costs are at their own expense.

* Please provide accurate information for shipping. The company is not responsible for any losses caused by incorrect information.

Purchase Considerations:

Dear Customer,

When receiving the product, please pay attention to the following points to ensure your consumer rights:

Upon receiving the product, please note the following within 7 days from the date of receipt: If there are any issues regarding packaging, quantity, quality, etc., with products including the device main unit, cups, accessories, Biboting 4DX care rods, Biboting sets, Biboting garden series, Biboting BOX series, Biboting Dangdang series, Biboting SEXY series, etc., please promptly contact our customer service for resolution. We regret to inform that we cannot address issues reported after 7 days (excluding warranty terms).

*If the distributor who sold you the product engages in the following behaviors, do not trust them.

Please return the product immediately and report to the agent, BIBOTING, and the Resgreen Group.

1. Do not believe promises of earning profits within a certain period. Please return the product immediately.
2. If the distributor fails to inform you of the correct usage and precautions of the product, as well as the after-sales warranty policy and repair methods, please return the product immediately.

Frequently Asked Questions:

Q1: How do I know when to replace the batteries?

When the remote control's indicator light flashes red or shows no response, it's time to replace the batteries. (Please make sure to replace them with two 1.5V AA batteries.)

Q2: What should I do if there is a malfunction?

If your remote control is experiencing abnormal behavior, it is recommended to first remove and reinstall the batteries or replace them before contacting customer service to avoid unnecessary replacements and save your valuable time. If the issue persists after trying the above methods, please contact customer service immediately to determine if a replacement is necessary.

Q3: How long does it take to replace at the original factory?

After receiving the product, BIBOTING company will take approximately three to seven working days for replacement (excluding special circumstances, and you will be notified separately after testing).


Q4: How should I clean it?

You can clean the remote control with a damp cloth, but please make sure the battery cover is securely tightened before cleaning to avoid malfunctions and potential hazards. However, do not immerse it in water.

Q5: Should I pay attention to cleaning utensils?

Please use a soft cloth dampened with water to wipe it, to avoid damaging the appearance of the product.

Q6: Can the remote control directly connect to other instruments?

Yes, it can, but you need to first disconnect it from the previously connected instrument. Then, long-press the left knob of the instrument you want to connect to (until the connection symbol appears)  and long-press the remote control's connection button, or use the voice function to establish the connection.

Q7: Can the remote control operate multiple instruments simultaneously?

No, the remote control is designed for one-to-one connection and operation.

Q8: What should I do if the connection suddenly drops?

Please try reinstalling the batteries or reconnecting.

Q9: Is this remote control compatible with all instrument models?

No, this product is only compatible with the 333PRO instrument. It cannot be used to operate other instruments.

Q10: If I have already connected the remote control to the instrument, do I need to reconnect it every time I restart the instrument?

No, you do not need to reconnect. The remote control will remember the last paired instrument and automatically reconnect to it.

FCC Statement

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has evaluated to meet general RF exposure requirement. The device can be used in portable exposure without restriction.