
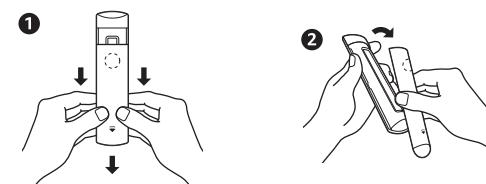


240x130mm

Get to know your Alexa Voice Remote

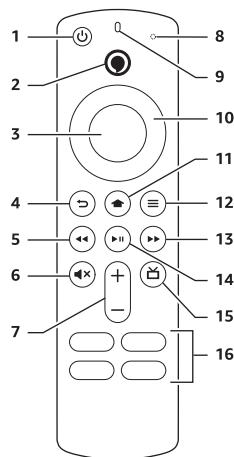

1. Power
2. Voice button
3. Select
4. Back
5. Rewind
6. Mute
7. Volume
8. Indicator LED
9. Microphone
10. Navigation
11. Home
12. Menu
13. Fast forward
14. Play/pause
15. Guide
16. App buttons

Set up your Alexa Voice Remote

Insert included AAA batteries

Remove the battery door and insert the batteries into your Alexa Voice Remote.

Pair the remote with your Fire TV device

You must pair your new remote to your Fire TV device. Choose the option below that fits your situation.

If this is a replacement remote and you don't have the original remote that came with your Fire TV device:

1. Restart your Fire TV device by unplugging the power cable, then plugging it back in. Once the Home screen for Fire TV appears, your remote should be ready for use. If not, move to Step 2.
2. Press and hold the Home button on the new remote for at least 10 seconds. The LED on the remote will slowly flash amber. Continue holding down the Home button until the LED starts to rapidly flash. A notification will appear on your screen indicating that your remote is successfully paired.

If you do have the remote that came with your Fire TV device, you'll need both remotes for setup:

1. On your new remote, press and hold the Home button for 10 seconds. The indicator LED will slowly flash amber for 10 seconds, then flash faster when your remote is ready to connect.

Use your original remote for the following steps:

2. Press the Home button, navigate to Settings at the top of the screen, then select Remotes & Bluetooth Devices > Amazon Fire TV Remotes > Add New Remote.

3. Your Fire TV device will search for remotes it can connect with, then display them in a list.

4. Using your original remote, select the new remote from the list. You'll see an on-screen message when it has been successfully paired. You can now use your new Alexa Voice Remote.

Troubleshooting tips

- If the new remote does not connect, remove and reinsert its batteries.
- If your remote isn't discovered, press and hold the Home button for at least 10 seconds until the LED rapidly flashes amber.
- Always replace dead batteries with new 1.5 V alkaline or 1.2 V NiMH rechargeable batteries.

Get the most out of your Fire TV Stick

There's always something on

You'll never run out of things to watch on Fire TV. Easily download your favourite apps, including Netflix, YouTube, Prime Video, Disney+ Hotstar and more. Access thousands of hours of free films and TV episodes from popular ad-supported streaming apps, such as YouTube, Zee5 and SonyLIV. Watch or browse live TV, sport, news and channels from the Live section on the Main Menu. With Profiles, everyone in your household can quickly get recommendations tailored to their preferences.

Press and ask Alexa

Press the Alexa Voice button on your included Alexa Voice Remote to easily find, launch and control content. Alexa can also play music, answer questions, read the news, check the weather forecast and set alarms.

Things to try

"Alexa, find nursery rhymes on YouTube."
"Alexa, find comedies."
"Alexa, open Netflix."
"Alexa, what's the time?"
"Alexa, how many countries in the world?"
"Alexa, what's the cricket score?"

To learn more about what Alexa can do, just ask "Alexa, what can you do?"

Important Product Information Safety Information



FAILURE TO FOLLOW THESE SAFETY INSTRUCTIONS COULD RESULT IN FIRE, ELECTRIC SHOCK, OR OTHER INJURY OR DAMAGE.

Watch for Small Parts



Your device and its batteries may present a choking hazard to small children. Keep them out of reach of small children.

Battery Safety



This product contains alkaline batteries. The remote requires batteries for use. Only use new 1.5 Valkaline or 1.2NiMH rechargeable AAA-sized batteries.

Never mix old and new batteries. Keep all of the batteries out of the reach of children. Do not open, disassemble, puncture, cut, bend, shred or heat the batteries and do not allow metal objects to touch the battery terminals on the remote as they can become hot and cause burns. Remove all batteries if they are worn out or before storing your remote for an extended period of time. Dispose of all batteries in accordance with applicable laws and regulations and do not dispose of batteries by throwing them into a fire. If any batteries begin to leak, take steps to prevent the fluid from coming into direct contact with skin or clothes as the fluid could be corrosive and may be toxic. Remove the batteries and clean the battery compartment in accordance with the battery manufacturer's recommendations.

Maintaining Your Alexa Voice Remote

Do not drop, throw, disassemble, crush, burn, puncture or paint your Alexa Voice Remote, and take care not to spill any food or liquid on your remote. If your remote does get wet, use rubber gloves to remove the batteries and wait for the remote to dry completely before reinserting the batteries. Do not attempt to dry your remote with an external heat source, such as a microwave,

oven or hairdryer. Clean the remote with a soft cloth and avoid using liquids or harsh chemicals that may damage the remote. Be careful not to wipe it with anything abrasive. Store your remote in cool, dust-free areas out of direct sunlight.

Use of third-party accessories may impact your device's performance. In limited circumstances, use of third-party accessories may void your device's limited warranty. In addition, use of incompatible third-party accessories may lead to damage to the device or accessory. Read all safety instructions for any accessories before using with your Alexa Voice Remote.

Other Safety Considerations

Engaging in repetitive motions such as pressing buttons or playing some games may cause you to experience occasional discomfort in your hands, arms, shoulders, neck or other parts of your body.

Small parts contained in your device and its accessories may present a choking hazard to small children.

Handle your device with care. Your device may have pointed edges, which can lead to scratches, cuts or other physical injury.

Compliance Markings

Certification and compliance markings for the device can be found in the battery compartment

Recycling Your Device Properly

In some areas, the disposal of certain electronic devices is regulated. Make sure you dispose of, or recycle, your device in accordance with your local laws and regulations.

Recycling Information for Indian Customers

This product is in conformity with the requirements of the E-Waste (Management) Rules, 2016. For the purpose of recycling to facilitate effective utilization of resources, please return this product to a nearby authorized Collection Point, registered dismantler or

recycler when disposing of this product. Please refer to www.amazon.in/devicerecycling for further details. What the Wheelie Bin symbol means: The symbol indicates you should not use waste collection bins for the disposal of your e-waste. This is because such waste is hazardous and needs to be recycled in a special way.

Instructions for Product Handling During and After Usage

Dos:

1. Please look for necessary information as provided herein.
2. Look for information about end-of-life equipment handling in your product catalogue.
3. Ensure that only Authorized Recyclers repair and handle your electronic products.
4. Always call Authorized E-Waste Recyclers to dispose of products that have reached their end of life.
5. Always drop your used electronic products, batteries or any accessories at your nearest Authorized E-Waste Collection Point when they have reached their end of life.

Don'ts:

1. Do not dismantle your electronic products on your own.
2. Do not throw electronics into bins featuring a "Do not dispose" sign.
3. Do not give e-waste to informal and unorganized sectors such as local scrap dealers/rag pickers.
4. Do not throw your product into bins along with municipal waste that ultimately reaches landfills.

Additional Safety & Compliance Information

For additional safety, compliance, recycling and other important information. Regarding your Amazon Fire TV device, please refer to the Settings Menu on your Amazon Fire TV device.

Limited Warranty

This warranty for the Alexa Voice Remote (the "Device") is provided by the entity set forth below. The provider of this warranty is sometimes referred to herein as "We". When you purchase a new or Certified Refurbished Device, we warrant the Device against defects in materials and workmanship under ordinary consumer use for 90 days from the date of original retail purchase. During this warranty period, if a defect arises in the Device, and you follow the instructions for returning the Device, we will, at our option, to the extent permitted by law, either (i) repair the Device using either new or refurbished parts, (ii) replace the Device with a new or refurbished Device that is equivalent to the Device that is to be replaced, or (iii) refund to you all or part of the purchase price of the Device. This limited warranty applies, to the extent permitted by law, to any repair, replacement part or replacement device for the remainder of the original warranty period or for thirty days, whichever period is longer. All replaced parts and Devices for which a refund is given shall become our property. This limited warranty applies only to hardware components of the Device that are not subject to accident, misuse, neglect, fire or damage from other external causes, alteration, repair or commercial use.

Instructions

For specific instructions about how to obtain warranty service for your Device, please contact Customer Service by using the contact information below. In general, you will need to deliver your Device in either its original packaging or in equally protective packaging to the address specified by Customer Service. Before you deliver your Device for warranty service, it is your responsibility to back up any data, software or other materials you may have stored or preserved on your Device. It is possible that such storage media, data, software or other managerial will be destroyed, lost or reformatted during service, and we will not be responsible for any such damage or loss.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

The device has been evaluatec to meeel general RF exposure requirement. The device can be used in porlable exposure condition without restriction.