

X1



User Manual

Please read the manual before use.

 
What include



Charging Case x1



Earbuds x2



USB-C Charging

Connect



1. Enable phone bluetooth function.
2. Take out the earbuds from charging box, the white indication lights flash on earbud.
3. Locate device bluetooth name "X1" on your phone to pair, the green lights will turn off when connected successfully.
(The earbuds will auto turn off if not connected to the device within 5 minutes.)

 
Touch Control



Play/Pause



Switch Song



Adjust Volume



Voice Assistant



Answer/Hang up



Reject Call



Power on



Power off

- | | |
|-----------------|-----------------------------------|
| X1: Tap once. | 2S: Press and hold for 2 seconds. |
| X2: Tap twice. | 3S: Press and hold for 3 seconds. |
| X3: Tap thrice. | 6S: Press and hold for 6 seconds. |

Troubleshooting

1. **Connected while no sound:**
Try to tap the right earbud to increase the volume.
2. **One earbud can not be charged:**
Clean the charging contacts of the earbud and its charging box.
3. **The charging box can not be charged:**
Ensure the charging cable is normal and there is no alien or over dirt in the type-C port.

Reset Earbuds

If there are connection or functional issues, please reset earbuds:

1. Delete bluetooth name "X1" from the phone list and disable mobile bluetooth function.
2. Put the earbuds into the charging box to charge to full.
3. Tap earbuds 4 times then press and hold control area for 3 seconds.
(The light flashes quickly and lights off, which means reset successfully.)
4. Then pair phone with the earbuds as per the above Connect Part.

Safety instructions

1. Keep the earbuds away from children under 3 yrs to avoid swallowing by mistake.
2. Never listen to music at high volumes in case to damage your listening.
3. Keep the product away from extremely hot and cold environments.
It will damage the battery and circuit.
4. Only charge your device from 5V USB ports in your phones, laptops or PCs.



Please clean the charging contacts of the earbuds and charging case frequently to avoid charging failures.

FCC Warning

This device complies with Part 15 of the FCC Rules. operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radiofrequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.