

SUNJOM

INSPIRE SERIES

**BLUETOOTH
HEADPHONES**
WITH FM RADIO

Bluetooth®



INSTRUCTION MANUAL

Please read these instructions carefully and retain them for future reference.



HIGHLIGHTS

- Bluetooth
- Up to 15 Hours of Playtime
- Aux Input
- Hands–Free Calling
- FM Radio Function
- TF card Input





PACKAGE CONTENTS


- SUNJOM® Inspire Series Bluetooth® Headphones
- Type C–USB Charging Cable
- Aux Cable
- Instruction Manual

SPECIFICATIONS

- Bluetooth®
 - Version : 5.3
 - Chipset : JL
 - Profiles : AVRCP/A2DP/HFP
 - Range : 10m
- Impedance : 32 Ω
- Frequency Response : 20 Hz – 20k Hz
- Sensitivity : 120 \pm 3 dB
- Battery : 400mAh \pm 10% Li–Ion
- Driver Size : 40 \pm 1mm
- Charging Time : 2–3 hours
- Charge Input : 5V DC, 0.5A
- Playing Time(50% Volume) : 15 Hours
- Playing Time(100% Volume) : 13 Hours

IDENTIFYING PARTS

1.  Power On /Off
2.  Next/ Volume Up/Voice Assistant
3.  Call/Play/Pause/Mode Switch(FM/Micro TF Card Bluetooth[®])
4.  Volume Down/ Previous
5. Aux Input
6. Microphone
7. Type-C Charging portt
8. Indicator Light
9. TF Card Slot

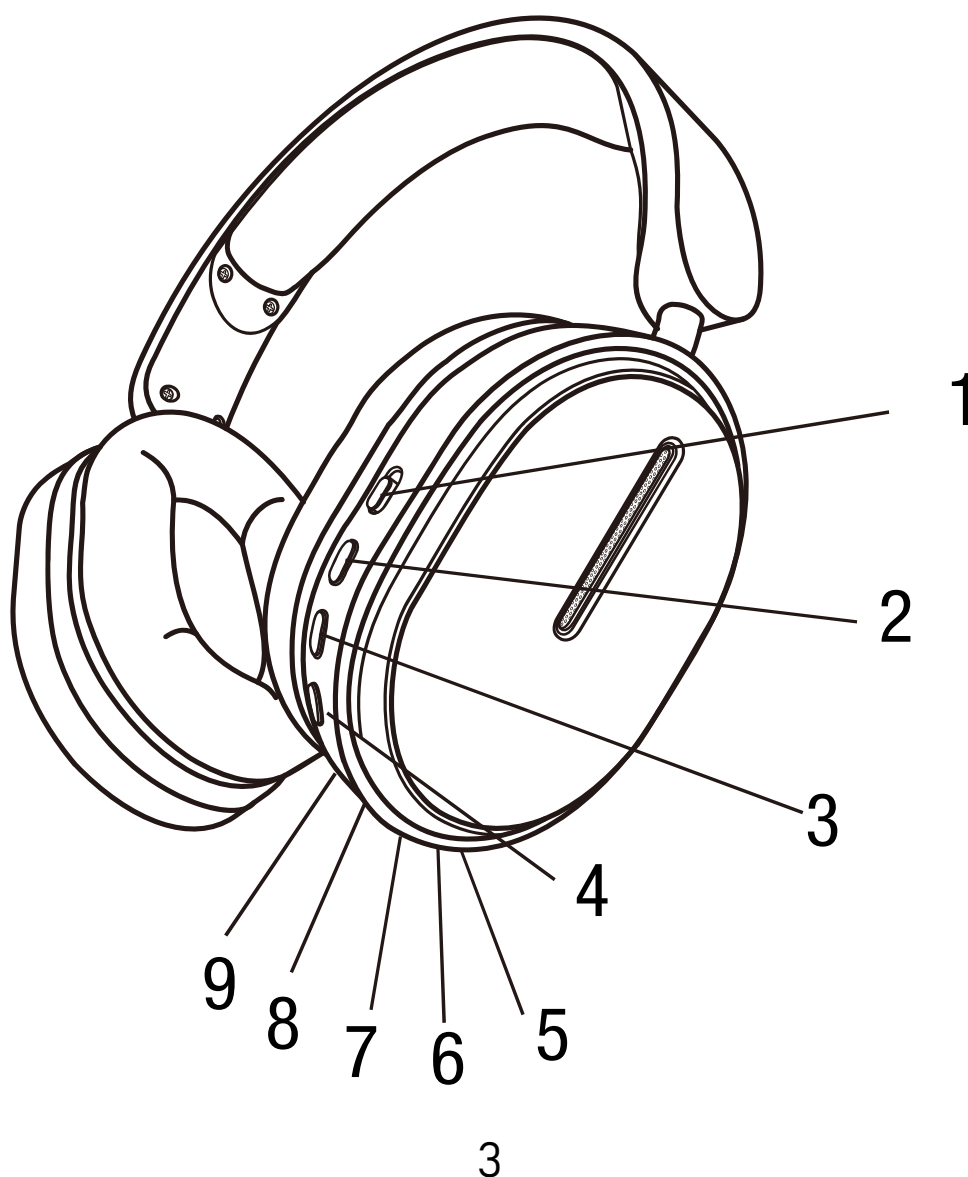

CHARGING

Please ensure that the battery is fully charged before using the device for first time.

- Connect the provided TYPE–C charger cable to the charging slot on the headset. Connect the other end of the USB charger to a 5 V USB wall charger or available USB Port on your computer.
- The LED indicator light will display a red color when charging.
- When the headphone is fully charged, the LED indicator light will turn off.

POWERING UP

- To switch the headphone on, dial the ⏻ Power Button up then the indicator light flashes blue and red light alternately.
- To switch the headphone off, dial the ⏻ Power Button down then the indicator light turn off.

LOCATION THE BLUETOOTH® MENU

iPhone, iPad, and iPod Touch

- a. On your device, go to Settings
- b. Select Bluetooth. If Bluetooth® is not on, turn it on.
- c. The iPhone/iPad /iPod will automatically search for new devices

Android Phones and Tablets

- a. On your device, go to the Settings Menu.
- b. Select Bluetooth® (on older Android devices Bluetooth® is found in the Wireless & Networks Menu). If Bluetooth is not on, turn it on.
- c. Select "Search for Devices" if your phone or tablet does not automatically search for new devices.

CONNECTING WITH PAIRED DEVICES

- Switch on the headphones.
- Press the ►|| Button three times switch to the FM Mode.
- The red and blue LED lights will flash, this means that the headphone is ready to pair with a Bluetooth® device.
- Ensure that your device's Bluetooth® is on. Search for “INSPIRE”. When your phone finds the device, confirm pairing by selecting the device from the list.
- When successfully paired, the blue LED light will flash slowly.
- The headphones are now paired and ready to be used with your device.

CONTROLS

1: Volume Controls

Function	Operation	Notes
Increase Volume	Short press the + Volume Up/ Long press Next Track, Double press wakes the Voice Assistant Function.	Volume can be controlled either by the control buttons on the headphone or via the paired device.
Decrease Volume	Short press the — Volume Down/ Long press Previous Track.	
Play or Pause Track	Short press the ► Play/ Pause button.	

2: Controlling MP3 Playback

Function	Operation
Enter MP3 Mode	Insert your TF Card. The device will begin reading from the card, or press the ► Button three times until the headphone switches to MP3 Mode.

3: Controlling MP3 Playback

Function	Operation
Enter FM Mode	Press the ► Button to cycle the FM mode.
Auto-Scan	Long press the ► Play Button to auto-scan stations.
Fine Tune	Press the “+” Volume Up/ Forward Button to skip a station and continue searching, or “-” Volume Down/ Backward to return to a station.

4: Controlling Phone Calls

Function	Operation
Answer or End Call	Short Press the ► Play/Pause/Call Button.
Reject a Call	Long Press the ► Play/Pause/Call Button.
Redial	Double Press the ► Play/Pause/Call Button.

NOTE: If you answer or make a call while listening to media, the media will be paused until the call has ended.

NOTE: Only when your headphones are Bluetooth[®] connected to your Smartphone will you be able to answer or reject calls via your headphones.

AUX-IN MODE

- You do not have to switch the headphones “ON” for this mode.
- Insert the provided audio cable into the Aux Input on the headphones, and the other end of the audio cable to the playback device's output / line out.
- In this mode, you can only control the playback volume with your playback device and not with the volume controls on the headphones.

SAFETY PRECAUTION

- The SUNJOM[®] Inspire Series Bluetooth[®] Headphones should only be used with the parts the manufacturer provides.
- This product is intended for indoor and outdoor scenes.
- Never use this product near water or where it can contact water.
- Never handle the product if it has been dropped in water or other liquid. This is a safety hazard if the product comes into contact with water while still plugged in.
- Always dry your hands before touching the USB cable or power connections.
- Do not operate the product with a damaged cable or after it has malfunctioned, dropped, or damaged in any manner.
- The product is intended for personal use only. Commercial use cancels the warranty, and the supplier cannot be held responsible for injury or damage caused when using the device for any other purpose than that which it was intended for.
- The product is not intended for use by children, or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the device by a person responsible for their safety. Extreme caution must be exercised.
- Children should be supervised to avoid playing with the product. Packaging must never be left within reach of children since it is potentially dangerous.

CLEANING AND CARING INSTRUCTIONS

- **Before Cleaning:** Ensure that the SUNJOM[®] Inspire Series Headphones are tuned off and not charging before cleaning or maintaining them.
- **Cleaning:** Wipe down the product's surface using a soft, slightly damp cloth.
- Do not use harsh or abrasive cleaning chemicals or materials on the product, as doing so may damage or scratch the finish.
- Do not expose the product to direct sunlight or high temperatures for extended periods.
- Do not store in temperatures over 140 °F (60 °C).


FM RADIO MODE

1. **My mobile phone cannot find any new Bluetooth® devices.**
 - a. Ensure the Device has entered the pairing mode.
 - b. Ensure the Device is within effective working range.
2. **Bluetooth device cannot pair up?**
 - a. Ensure your mobile phone allows new connections and has yet to reach the maximum number of allowed devices.
3. **The Device does not play music or answer calls when connected to a Bluetooth® mobile phone.**
 - a. Ensure your mobile phone supports A2DP and HSF (Hands–free) profiles.
 - b. Ensure your mobile phone is within effective working range.
4. **When paired with my computer, Windows asks for a new driver. Can you supply this?**
 - a. We recommend that you find compatible drivers for your computer online.
5. **Why i can not remotely control the pause and play function when music is playing?**
 - a. This feature needs the Bluetooth® device paired with the earphones to support AVRCP (Audio / Video Remote Control Profile).Please ensure your device supports this.

ENVIRONMENTALLY FRIENDLY DISPOSAL

IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH THE EUROPEAN DIRECTIVE ON WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT.

- At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.
- Never dispose of used electronics with ordinary solid waste since they contain toxic substances.
- Always dispose of used electronics in accordance with the prevailing community regulations that apply to the disposal of electronics. If there are no regulations concerning electronics disposal, please dispose of the device in a waste bin for electronic devices.

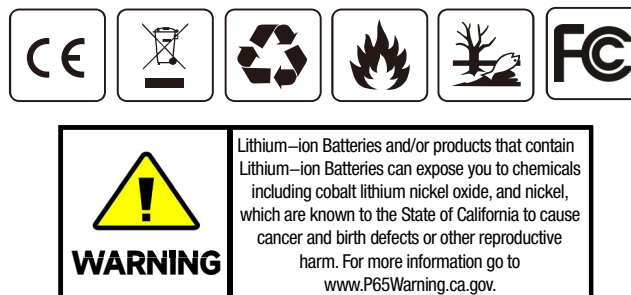

DISCLAIMER

The Bluetooth word, mark and logos are registered trademarks owned by Bluetooth[®] SIG Inc. and any use of such marks by SUNJOM[®] is under license. Other trademarks and tradenames are those of their respective owners.

All product and company names are trademarks[™] or registered[®] trademarks of their respective holders. Use of them does not imply any affiliation with or endorsement by them.

WARRANTY

These SUNJOM[®] Inspire Series Bluetooth[®] Headphones include a standard 12– month limited warranty against manufacturing defects and faults. Should your product be unboxed with any faulty parts, poor finishing, visible damage, or fail to perform due to a manufacturing defect or poor workmanship, please return it with your proof of purchase (till slip or invoice) to the store of purchases for an exchange, or repair, depending on the store's returns policy.

This warranty commences from the date of purchase.

Kindly retain your proof of purchase and the packaging for your warranty period.

NOTE:

The warranty does not apply to a product that:

- a. It has failed due to excessive wear and tear beyond what is considered reasonable.
- b. Has been misused or neglected.
- c. Has been damaged accidentally or by Force Majeure, including fire and flooding.
- d. Has been used or operated contrary to operating or maintenance instructions outlined in this manual.

The Store of Purchase / Seller cannot accept any returned products that have not been returned in accordance with this warranty or which does not follow their own Returns Policy. Please refer to the Store of Purchase / Sellers Returns Policy for details.

Should you require any further assistance or have any questions on your warranty, please contact the store of purchase.

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.