

Switch

14500/500mAh 3.7V

Detachable Tail Spring Button

Use a 3.7V rechargeable battery

Plug in USB charging power supply

Connect the USB wire to the battery

14500/500mAh 3.7V

Includes rechargeable battery and USB wire.

Remote control uses 2 x 1.5V AA battery. (not included)

NOT SUITABLE FOR CHILDREN UNDER 3 YEARS DUE TO SMALL PARTS

هشدار: برای کودکان زیر ۳ سال مناسب نیست، دارای قطعات کوچک است

تذکره: غیر مناسب برای کودکان تحت ۳ سالگی

COUNTRY OF ORIGIN: CHINA

بلد المنشأ: الصين

صنعت وفقاً للمواصفات والمعايير العالمية

Tested according to international standards

SPECIFICATIONS COLORS AND CONTENTS MAY VARY FROM ILLUSTRATIONS!

NOT SUITABLE FOR CHILDREN UNDER 3 YEARS

NO CONVIENE A NINOS MENORES DE 36 MESES

NON ADATTO AI BAMBINI DI ETÀ INFERIORE AI 36 MESI

**WARNING:**

**CHOKING HAZARD -Small parts.**

Not for children under 3 years.

**NO.BP201-2**

**MADE IN CHINA**

FC CE UK CA

0-3

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction