

# GM20B

# Worksite Radio Speaker

## USER GUIDE

### Definitions: Safety Alert Symbols and Words

This instruction manual uses the following safety alert symbols and words to alert you to hazardous situations and your risk


▲ **DANGER:** Indicates an imminently hazardous situation which, if not avoided, **will** result in **death or serious injury**

▲ **WARNING:** Indicates a potentially hazardous situation which, if not avoided, **could** result in **death or serious injury**

▲ **CAUTION:** Indicates a potentially hazardous situation which, if not avoided, **may** result in **minor or moderate injury**

▲ (Used without word) Indicates a safety related message.

**NOTICE:** Indicates a practice **not related to personal injury** which, if not avoided, **may** result in **property damage**

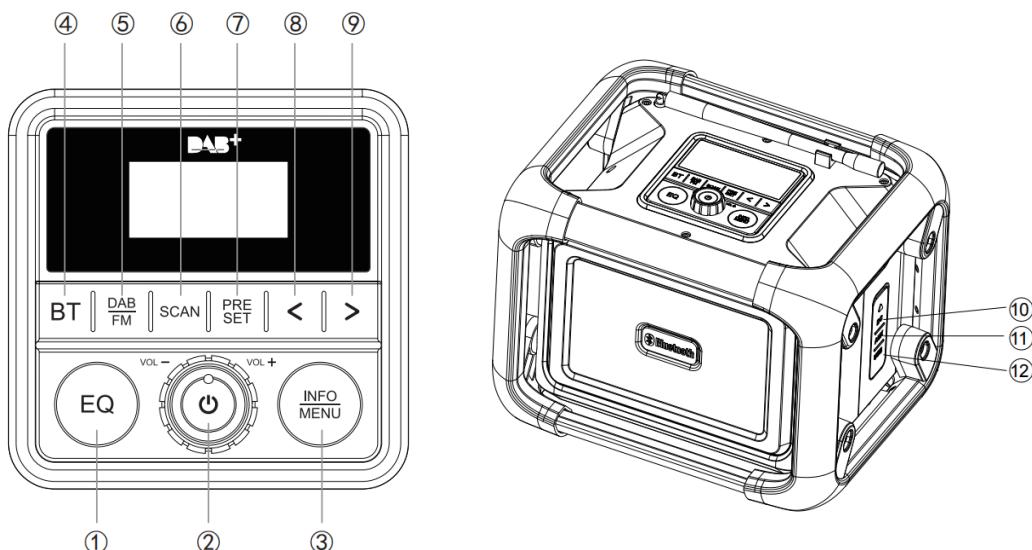

1.EQ

2.Power button/Volume buttons +/-

3.Info/MENU (press and hold to return to the previous menu)

4.Bluetooth button

5.DAB/FM button


6.SCAN

7.PRESET

8.Previous

- 9.Next track
- 10.DC Interface
- 11.AUX input
- 12.USB
- 13.Battery bracket

**To Install the Battery Pack into the Speaker**

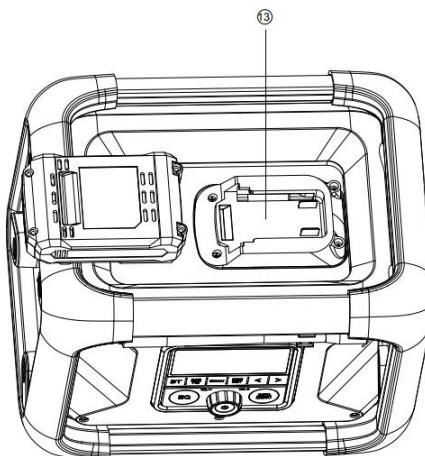

- 1) Align the battery pack with the guides inside the speaker battery port.
- 2) Slide it in until the battery pack is firmly seated and ensure that you hear the lock snap into place. Be sure that it does not disengage.

**IMPORTANT SAFETY INSTRUCTIONS**

**WARNING:**

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Use in accordance with the manufacturer's instructions.
8. Do not use near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. Only use attachments/accessories specified by the manufacturer.
11. Unplug this apparatus during lightning storms or when unused for long periods of time.

12. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the power-supply cord or plug is damaged, liquid has been spilled, or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
13. Apparatus shall not be exposed to dripping or splashing, and no objects filled with liquids, such as vases, shall be placed on the apparatus.
14. Do not use under wet conditions or in the presence of flammable liquids or gases.
15. Do not keep ears close to this appliance.

#### **Safety Instructions for Speakers**

1. To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
2. Do not abuse the cord. Never carry the speaker by its cord. Never pull the cord to disconnect from the socket. Keep the cord away from heat, oil, and sharp edges.
3. Remove the battery pack. Switch off the device before leaving it unattended. Remove the battery pack when not in use, before changing accessories or attachments, and before servicing.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
5. Children should be supervised to ensure that they do not play with the appliance.
6. No exposed flame sources, such as lighted candles, should be placed on the speaker.
7. To reduce the risk of hearing damage, do not place ears too close to the speaker.
8. The mains plug is used as the disconnect device; the disconnect device (plug) shall remain readily operable.

#### **Attention: Using Supplied AC Power Adaptor**

##### **CAUTION:**

1. Always disconnect the AC power adaptor completely before moving the speaker. If the AC adaptor is not removed, it may cause an electric shock.
2. Never pull and/or drag the cord of the adaptor. If not, the speaker may accidentally fall down, causing injury to you or someone around you.
3. **IMPORTANT:**
4. The mains adaptor is used as the means of connecting the speaker to the mains supply. The mains socket used for the speaker must remain accessible during normal use.
5. In order to disconnect the speaker, the mains adaptor should be removed from the mains outlet completely.
6. Do not hold the power supply cable and plug by your mouth. Doing so might cause an electric shock.
7. Do not touch the power plug with wet or greasy hands.

8. Damaged or entangled cords increase the risk of electric shock.
9. After use, always store the AC power adaptor out of the reach of children. If children play with the cord, they may suffer injury.

**NOTE:**

Ensure the specification of your external device, such as a mobile phone or player, is compatible with the speaker. Please read the instruction manual of your external device before charging.

**IMPORTANT:**

The charger may not supply power to some USB devices.

When not using or after charging, remove the USB cable and close the cover.

Do not connect a power source to the USB port. Otherwise, there is a risk of fire. The USB port is only intended for charging lower voltage devices. Always place the cover onto the USB port when not charging a lower voltage device.

Do not insert a nail, wire, etc., into the USB power supply port. Otherwise, a circuit short may cause smoke and fire.

Do not connect this USB socket with your PC USB port, as it is highly possible that it may cause a breakdown of the units.

**FCC Statement**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**FCC Radiation Exposure Statement**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body