



01 开机动画

A. 首次开机时候有动画进行, 并且有开机音乐;
B. 首次开机用触摸操控开启;
C. Hello 图标预先选择语言和主题风格选择;

(开机动画) (锁屏设置) (语言选项)

02 表盘设置

A. 在的界面下, 长按 3S 进入表盘选择;
B. 表盘界面可以显示耳机的电量百分比, 充电情况; (耳机在仓内充电时候, 耳机的图标显示的是黄色, 平常充满显示白色, 在仓内休眠显示灰色的百分比);
C. 表盘界面可以显示耳机的电量百分比, 还有充电情况; (外部充电线连接到充电时候, 耳机仓显示的图标是黄色, 平常充满显示白色);

(待机界面选择) (6款待机界面选择)

03 连接符号说明

B. 耳机已经连接仓未连接手机:

C. 耳机已经连接仓并连接手机:

04 锁屏功能

A. 锁屏效果:
B. 锁屏选择: 1. 左右按键选择锁屏画面;
2. 停留在当前图片, 点击图片即为选择了当前图片;

(锁屏设置) (共有 5 张图片, 其中一张动态图)

05 音乐控制功能

A. 控制上下曲, 播放暂停;
B. 音量控制功能: (在音乐界面最下方的喇叭界面按钮进入)
C. 歌词同步显示功能: (可以看到手机设备播放软件播放的歌曲的歌词, 这里请注意的一点, 是需要设置播放器的“车载 play”或者是上传歌词功能, 请针对不一样播放器做一定的设置, 方可使用);
E. K 歌模式: 点击歌词可以进入歌词的滚动 K 歌模式, 全屏歌词显示, (进入 K 歌模式, 歌词可以单次显示 5 分钟时间)

06 均衡器功能

■注: 耳机连上了仓才能选择
A. 可以选择开关均衡器功能; (在右上角有个开关);
B. 可以通过显示屏按钮选择不一样的 6 种特定 EQ 音效;

POP (流行) — ROCK (摇滚) — CLASS (经典) — JAZZ (爵士) — VOICE (人声) — DISCO (舞曲)

07 ANC 降噪功能

A. ANC 打开; B. 透明模式打开; C. ANC 关闭

ANC 打开 | ANC 关闭 | 透明模式打开

08 空间音频功能

A. 看剧模式; B. 音乐模式; C. 游戏模式;

09 控制界面风格选择

总共有三款 (左右滑动、万花筒、齿轮三种控制模式; 滑动选择后, 点击选择项“厂牌”即可切换);

English | 万花筒 | 齿轮

10 屏幕亮度控制/查找耳机功能

A. 总共 5 档的亮度调节 (通过+和-进行调节)
B. 可以选择 L 左耳, R 右耳
D. 进入了 L 或者 R 后, 进入查找响应界面
(注: 图标按钮要在耳机不在耳朵上使用此功能, 避免不适感)

(屏幕亮度调节) (耳机查找)

11 通话界面功能

A. 电话提醒功能: 当耳机连上手机, 仓内显示, 此时来电话显示如图;
B. 电话呼出显示界面;
C. 通话中显示界面;

(电话提醒功能) (电话呼出中显示界面) (通话中显示界面)

12 耳机按键功能

开/关机
开机: 长按触摸 1.5 秒
关机: 长按触摸 3 秒; 主/副耳
音量调节
音量加: 三击右声源加音量
音量减: 三击左声源减音量
播放/暂停
单击左/右耳播放暂停音乐
ANC 降噪模式
长按左声源切换, 降噪、透明、关闭三个模式相互切换
来电状态
接听/挂断: 单击接听, 通话中单击挂断电话
拒接来电: 长按右/左声源 2 秒拒接电话
中英文切换
连续 touch 手机双击功能键可切换中英文

LED 灯闪烁
■亮红灯: 1. 关机
■亮蓝灯: 1. 开机
■红灯闪烁: 1. 低电

14 参数展示

配对名称	LX-30	产品类型	ANC 降噪耳机
芯片版本	V5.4	播放时长	约 4-5H
喇叭尺寸	φ10	频率响应	20Hz-20kHz
耳机电池容量	40mAh	充电时间	0.5-1H
充电方式	顶针接触	待机时间	约 120H

15 耳机注意事项

- 请勿以任何理由拆卸、维修或改装耳机, 否则可能会导致起火、电子击穿等安全隐患损坏本产品。
- 请勿将本产品置于温度过低或过高 (0°C 以下或 45°C 以上) 的环境下。
- 请勿在雷雨天气使用本产品, 雷雨天气可能会导致设备的静电放电。
- 请勿使用非原厂充电器, 避免造成设备充电设备损坏。
- 请勿将设备靠近热源或明火, 如电暖器、电炉、烤箱、热水器、炉灶等或其他可能产生高温的地方。
- 请勿长时间高音量听音乐会造成听力损伤, 使用设备时应调整到适当音量。
- 请勿自行更换电池, 本设备配有不可拆卸的内置电池, 以免损坏电池或设备。
- 请勿私自改装。
- 若无法修复, 请停止使用本设备, 关闭所有应用, 并断开与其他设备的所有连接或线缆。

16 禁止

- 禁止拆机、撞击、挤压或投入火中、插入异物, 以免引起电池漏液过热、起火爆炸。
- 本设备并非玩具, J 类应在成人监护下使用本设备配件。
- 若出现严重故障禁止继续使用。
- 禁止在潮湿环境下使用, 避免受潮。
- 请勿将水或其他液体倒入, 并避免设备受到外部压力或碰撞影响。



01 Boot animation

B. Short press the button to turn on the device for the first time;
C. After playing Hello, choose the language and theme style first;

(Power on animation) (Lock screen setting) (Language options)

02 Dial setting

A. Under the interface, long press for 3 seconds to enter the dial selection;
B. The dial interface can display the battery percentage and charging status of the earphones; When charging headphones in the compartment, the ear icon of the machine is displayed in yellow, with white displayed when it is normally full, and a gray percentage displayed when it is dormant in the compartment;
C. The dial interface can display the percentage of battery in the headphone compartment and the charging status; (External charging cable to the compartment) When charging, the icon displayed on the earphone compartment is yellow, while it usually shows white when fully charged

(Select from standby interface) (6 standby interface options)

03 Connection symbol description

A. Warehouse not connected to headphones:

B. Headphones already connected but not connected to phone:

C. The earphones are connected to the compartment and the phone:

04 Lock screen function

A. Lock screen effect;
B. Lock screen selection: 1. Press the left and right buttons to select the lock screen drawing
2. Stay in the current image, click on the image to select the current image;

(Lock screen setting) (There are a total of 5 images, including one dynamic image)

05 Music control function

■ Note: Only when the earphones are connected to the compartment and the phone is connected can they be displayed
A. Control up and down tracks, pause playback;
B. Volume control function (accessed from the speaker interface button at the bottom of the music interface)
C. Lyrics synchronization display function (you can see the lyrics of songs played by mobile device playback software, please note here) (The point is that it is necessary to set up the "car play" or upload lyrics function of the player. Please refer to the option not provided Make certain settings for the same player before it can be used).
D. K Song Mode: Clicking on the lyrics allows you to enter the scrolling K Song mode of the lyrics, which displays the lyrics in full screen. (Enter karaoke mode, lyrics can be displayed for 5 minutes at a time)

06 Adaptive equalizer

■ Note: Only when the earphones are connected to the compartment can they be selected
A. You can choose to turn on or off the equalizer function; There is a switch in the upper right corner;
B. You can select 6 different specific EQ sound effects through the display screen buttons:

POP (pop) - ROCK (rock) - Classics (classic) - JAZZ (jazz) — VOICE - DISCO

07 ANC noise reduction function

A. ANC open; B. Open the transparent mode; C. ANC shutdown

ANC Open | ANC shutdown | Transparent mode on

08 Space audio function

A. Watching mode; B. Music mode; C. Game mode;

09 Control interface style selection

There are three control modes in total: default (sliding left and right), kaleidoscope, and gear; After sliding the selection, click to select The item "厂牌" can be used to switch;

(Kaleidoscope) (Gear)

10 Screen brightness control/headphone search function

A. A total of 5 brightness adjustments (adjusted through+and-)
B. You can search for L left ear and R right ear
D. After entering L or R, enter the search response interface; (Note: Don't forget to use this function when the headphones are not on the ears to avoid discomfort)

(Screen brightness adjustment) (Headphone search)

11 Call interface function

A. Phone reminder function: When the earphones are connected to the phone, it will be displayed in the compartment, and the incoming call will be displayed as shown in the picture;
B. Display interface during phone calls;
C. Display interface during call;

(Telephone reminder function) (Display interface during phone calls) (display interface during call)

11 Headphone button function

Power on: Long press the touch button for 1.5 seconds
Shutdown: Press and hold the touch button for 3 seconds, and the main/secondary ears will be turned off

modulation
Volume up: Three clicks on the right channel to increase volume
Volume reduction: Three clicks on the left channel to reduce volume

Switch up/down tracks
Next track: Double click on the right channel to switch songs
Previous track: Double click on the left channel to switch songs

Play/Pause
Click on the left/right ear to play pause music

ANC noise reduction mode
Long press the left channel switch to reduce noise, transparency, and turn off switching between three modes

Call voice assistant
Long press the right channel to wake up Siri

Incoming call status
Answer/Hang up: Click on answer, during call, click on hang up
Reject call: Long press the left/right channel for 2 seconds to reject the call

Switching between Chinese and English
Double click the function key on an unconnected phone to switch between Chinese and English

12 LED flashing

■ Red light on: 1. Shutdown ■ Bright blue light: 1. Power on ■ No light on: 1. Low battery
■ No flashing light: 1. Music playback 2. music pause 3. incoming call 4. in progress 5. low battery 6. fully charged 7. successful connection

13 Parameter display

Pairing Name	LX-30	product type	ANC noise reduction
Chip version	V5.4	Playback duration	Approximately 4-5H
Drive Unit	φ10	frequency response	20Hz-20kHz
Earphone capacity	40mAh	Charging time	0.5-1H
Charging method	Thinbale contact	Standby time	Approximately 120H

14 Earphone precautions

- Do not disassemble, repair, or modify headphones for any reason, as it may cause fire, electronic breakdown, or even complete damage to this product.
- Do not place the product in an environment where the temperature is too low or too high (below 0°C or above 45°C).
- Do not use this device in thunderstorm weather as it may cause equipment malfunction or electric shock hazards.
- Do not use strong chemicals, cleaning agents, or strong detergents to clean equipment or its accessories.
- Do not place the device close to heat sources or exposed sources of fire, such as electric heaters, microwaves, ovens, water heaters, stove candles, or other possible sources A place that generates high temperatures.

15 Screen precautions

- Operate buttons or touch screens: Please follow the instructions in the manual to accurately operate buttons or touch screens and avoid incorrect operations.
- Display content: The screen can display various information, including call notifications, music playback status, battery level, etc. Please make sure to understand the meaning and operation methods of the various information displayed on the screen.
- Screen Protection and Maintenance: To protect the screen from scratches and damage, it is recommended to avoid exposure to dust or humid environments Use headphones. Please use a soft cloth to clean the screen and avoid using cleaning agents containing chemicals.
- Power status indicator: The display screen usually displays information such as battery level and connection status. Please pay attention to the information displayed on the screen. Release indicators or icons to understand the current status of the headphones.
- Avoid prolonged use of the screen under strong light to avoid affecting the display effect. Please lightly press the screen during operation. Avoid excessive force causing damage.
- Storage precautions: When storing or carrying headphones, please be careful not to apply heavy objects or pressure to the display screen Area to prevent screen damage or cracking. And ensure that the screen is not affected by external pressure or collisions.

16 Prohibit

- It is prohibited to disassemble, impact, squeeze the battery, or put it into fire or insert foreign objects to avoid causing battery leakage and overheating light or explode.
- This device is not a toy and children should use it under adult supervision. The accessories for this device are required.
- If there is a severe swelling, it is prohibited to continue using.
- Do not place in a high-temperature environment and keep away from sources of fire.
- Do not use the battery after immersion in water or other liquids.

FCC warning:

1. This device should be installed and operated with minimum distance 0cm between the radiator&your body.
2. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference, and
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
3. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
4. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.