

FULL SPECTRUM SIMULATES SUNLIGHT

SOCKET FAN LIGHT

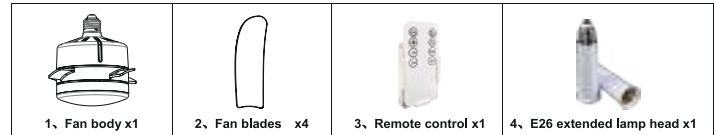


Image for finished product(LFSD-A002)

Specification:

Input Voltage	AC100-240V 50/60Hz	
Wattage	30W	
CCT	3000K-6000K	
Luminous flux	1200 lumens	40 pcs High-brightness SMD LEDs
Wind Speed	low wind speed / Mid-range wind speed / high wind speed	
Control Method	Remote control / wall switch	
Installation Interface	Suitable for E26/27 base	

Parts List:




Installation Procedures:

(Please disconnect the wall switch power supply before installation)




1. As shown in the photo to the right, insert each blade into the tab until it clicks. The blades can only be inserted in one direction.(Figure 1)

2. Remove the protective cap. (Figure II)

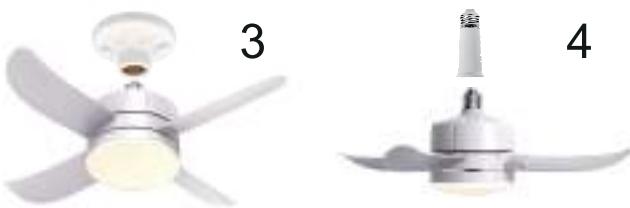

3. Hold the device as shown in the picture above and turn the socket fan light clockwise to install. Don't over-tighten, but make sure the fan is fully seated. (Figure 3)

4. If necessary, use an E26 lamp extender. Tighten clockwise. Don't over-tighten, but make sure the fan is fully seated. Then, follow step 3 to install the fan assembly. (Figure 4)

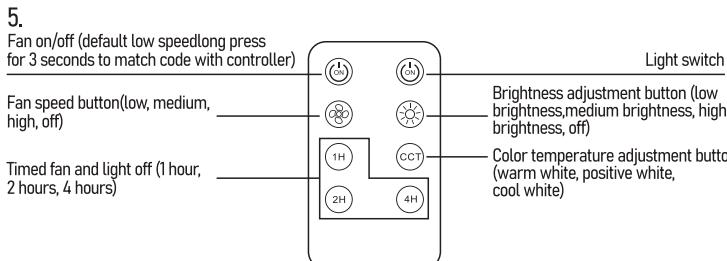

Remote Operating Distance with Remote Control: up to 17 feet (5.2 meters)
NOTE: The fan light and remote control have been matched by default; to re-match, press and hold the "ON" button on the remote control continuously for 3-5 seconds to complete the match.

6. The remote control bracket is installed using the included 3M tape:

- 6-1. Tear off the backing, place it with the sticky side down on the back of the stand, and press for a few seconds;
- 6-2. Tear off the other side and place it on the desired smooth surface, press the stand firmly on the surface for a few seconds;
- 6-3. Use the included screws: Insert each screw into the opening of the remote control bracket and tighten to secure;



(Keep the remote control in case it is lost or misplaced.) E26 The fan light can be operated from the wall switch (default setting).

1. If you turn off the fan and light via the wall switch or the remote control, when the wall switch is turned on again, the default setting (Strong Light On / Fan Off) will be used.
2. Note: In the unfortunate event that the remote control is lost, please call the Customer Service Center for a replacement.
3. Replacement of the remote control requires re-matching the pairing code with the fan light, please press and hold the "ON" button on the remote control continuously for 3-5 seconds to complete the matching.

WARNING (IMPORTANT SAFEGUARDS):

1. KEEP FAN OUT OF REACH OF CHILDREN.
2. WARNING: TO REDUCE THE RISK OF PERSONAL INJURY, DO NOT BEND THE BLADE BRACKETS WHEN INSTALLING THE BRACKETS, BALANCING THE BLADES, OR CLEANING THE UNIT. DO NOT INSERT FOREIGN OBJECTS IN BETWEEN ROTATING FAN BLADES.
3. CAUTION: TO REDUCE THE RISK OF INJURY TO PERSONS, INSTALL UNIT AT LEAST 8 FEET (2.43 M) ABOVE THE FLOOR.
4. CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR.
5. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
6. THIS DEVICE CAN ONLY BE INSTALLED ON STATIONARY LIGHT SOCKET, CANNOT INSTALL ON ANY NON STATIONARY OR LOOSE SETTING LIGHT SOCKET.
7. TO REDUCE THE RISK OF ELECTRIC SHOCK, THIS UNIT MUST BE INSTALLED WITH AN ISOLATING WALL CONTROL/ SWITCH.
8. DUE TO SOCKET FANLIGHT HIGH INTENSITY LED BULBS, DO NOT STARE DIRECTLY INTO THE LED LIGHT.
9. RISK OF ELECTRIC SHOCK - USE IN DRY LOCATION ONLY.
10. SWITCH OFF THE POWER BEFORE INSTALLING THE UNIT.
11. NEVER PLACE ANYTHING OVER THE FAN OR INTO THE UNIT BLADES WHEN IT'S RUNNING.
12. USE IN OPEN LUMINAIRE ONLY.
13. DO NOT USE WITH DIMMERS.
14. DO NOT PLACE OBJECTS NEAR THE UNIT.
15. ADDED WEIGHT OF THE DEVICE MAY CAUSE INSTABILITY OF A FREE STANDING PORTABLE LUMINAIRE.
16. THIS DEVICE IS NOT INTENDED FOR USE WITH EMERGENCY EXITS.
17. DO NOT OPERATE ANY APPLIANCE AFTER IT MALFUNCTIONS, OR IS DROPPED, OR DAMAGED IN ANY MANNER. RETURN APPLIANCE TO THE NEAREST AUTHORIZED SERVICE FACILITY FOR EXAMINATION, REPAIR OR ELECTRICAL OR MECHANICAL ADJUSTMENT.
18. UNIT SHOULD BE TURNED OFF WHEN NOT IN USE OR DURING CLEANING. FAN HAS TO COME TO A COMPLETE STOP BEFORE HANDLING IT.

THE LEDS ARE NON REPLACEABLE FOR INDOOR USE ONLY

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

The device has been evaluatec to meeel general RF exposure requirement. The device can be used in porlable exposure condition without restriction.