


Model : M60

M60 Spaceship Bluetooth Sound System

Our company reserves all patents, trademark copyrights and other intellectual property rights. If the functional parameters of the product are changed without prior notice, please subject to the entity.

Product parameters:
Product name: spaceship BT sound Model: M 60 Product material: ABS+PC+silicone
Audio frequency output power: 2*5W (RSM) Stereo channel: 2.0
Frequency response range: 50Hz to 16KHz BT version: Jerry 5.1+EDR
Frequency: 2.4-2.48GHz Charging output voltage: DC4-8.5V/700mAh
TF card support format: MP3 WAV Charging input voltage: DC 5V ---1A
Battery capacity: 3.7V/1850 lithium battery /3000mAh Color: white
Product specification: 148*125*182MM
Product functions: Wireless BT playing, BT hands-free calling, clock display
Alarm clock setting, RGB night lamp, TF card playing, FM radio playing, USB sound card
Reception distance: 5M-15M (barrier-free reception distance, reception distance a little difference due to different environments and equipment)
(Note: the above configuration data will be continuously improved according to the master control upgrade, the details are subject to the entity)

Packaging accessories
The package include:
Spaceship BT sound User manual*1, Maintain warranty card*1, Qualified certificate*1
TYPE-C---USB power supply data wire x 1



Chapter 1: Product function keys instruction

1. Function key introduction and operation:

1. Button on/off:
Long time press **[M]** key to turn on. After hearing the start machine remind sound, the product starts up, and the default BT mode. If the BT search does not pairing the mobile phone within 10 minutes, BT will enter lower power consumption mode, and you need to singly click **[M]** key to activate the BT search state. Long time press the **[M]** key to shut down. (Double click **[M]** key to shift between Chinese and English voices)

Key on/off RGB atmosphere lamp (four gears color regulating)
Under the power on status, short time press the **[V]** key and shift to the RGB color change, long time press the button **[V]** key to turn on/off the backlight

Clock setting key
Long time press the **[V]** key to enter the clock adjustment. When the number on the screen flashes, adjust the clock number by short pressing **[+/-]** keys, then short time press the **[V]** key to enter the minute setting, short time press **[+/-]** or **[M]** key to adjust the minute number, and long time press **[V]** hold to confirm the setting.

Alarm clock setting key
Long time press the **[V]** key to enter the clock settings interface, then short time press (twice click key **[V]**) to enter the alarm clock adjustment mode. The alarm symbol will flash. At this time, the clock number on the left is flashing. Through short time press **[+/-]** or **[M]** key to adjust the clock number, then short time press the key again **[V]** to the right to adjust the number of minutes **[+/-]**, and long time press the alarm clock key to confirm the setting.

Alarm clock off settings: when the alarm clock is turned on, quickly double click the alarm clock key, and the alarm clock icon disappears, that is, the alarm clock mode is turned off.

(This product is set to wake up the alarm clock twice. When the alarm clock sounds, if you don't turn off the alarm clock manually, it will alarm again within 5 minutes)

The ampersand + key --
Long time press **[+]** the volume up, long time press the **[=]** volume down, and short time press the key to **[=]** go up a step. Short time press key to **[+]** next song

2. TF card extends MP3 music playing
The first step is to confirm that the memory card is 1-32G (the memory format is preferably FAT32 bit format, the built-in songs are in MP3 format), insert the TF card into the card slot, and when turned on, it will automatically recognize and play songs

3. Wireless BT Playing:
After start machine, the default state without a TF card is BT mode, you also can shift to BT mode manually through short time pressing the M key Connection: open the mobile phone and open the phone's BT search and select the BT device "M60 Smart BT Sound" for pairing. After successful pairing, a connection prompt will sound, indicating that the BT connection is successful and music on the BT device can be played normally.

4. FM radio settings
Short time press **[M]** key to shift to radio mode, then short time press **[V]** (alarmclock key) to enter the FM automatic search station, automatically save the radio after the search is complete, and press the **[+]** and **[=]** keys to select the radio station when the station cannot be searched, please plug in the charging cable, use the charging cable as an FM radio antenna)

5. TWS coupling mode: If two devices are turned on at the same time, they will automatically connect, and a prompt will be displayed if the connection is successful (connected to the box)

6. Charging indicate lamp: when charging, the battery icon normally lighting: when fully charged, the battery icon turns off.

Chapter III Troubleshooting
1. Multiple connections and unsuccessful pairing
Turn off the sound box and turn the mobile phone on, and make sure the connection name is: M60 Smart BT Sound
2. The sound is interrupted when playing music
a. Whether the connection distance is out of range or there is an obstacle between the sound box and the mobile phone;
b. Whether the mobile phone network is smooth and whether the sound box battery power is low.

3. Play silently
Check if the sound box is at its lowest volume (long time press the **[+/-]** key to adjust the volume)
4. Unable to start machine
Check if there is electricity, plug in the USB charging cable, charge for 2 hours and try again
6. Occurred dead machine
Find a pin and gently plug it into the audio port to reset and restart to solve the **dead machine** problem

Chapter 4: Charging Instructions
Please use a standard configuration or equivalent parameters power adapter to charge the sound box


b. When the power level of the product is low or insufficient during use, it should be charged as soon as possible.
c. Do not use this device under high temperature and pressured.
d. When not in use for a long time, it is recommended to charge the sound box once a month to ensure sufficient battery power and normal use of the sound box when needed!

Chapter 5: After-sales Service Instructions

Dear users, thank you very much for using our products. In order to effectively protect your rights and interests, make it clear that disputation agents and companies should assume responsibility for product maintenance, replacement, and return (simply called three guarantees), please read the following matters:
1. According to the three-guarantee principle of who sells and who is responsible for product quality issues, contact the dealer with a (warranty card), and the dealer provides service to the customer, while our company provides service support to the dealer.
2. The company promises that from the date of sale (the date is subject to the valid receipt and order date on the online platform), if there is a quality problem within 7 days, the customer can choose to return the product for replacement and repair, the customer can choose to replace it for three months (no damage to the appearance), and within one year, the customer can enjoy free maintenance (the customer bears the corresponding transportation costs). If the warranty exceeds the scope of the warranty and quality problems occur, each after-sales service network will only charge component materials and transportation costs.
3. You will not be eligible for the three guarantee service in the following situations.
A. Which exceeds the three-guarantee period
B. Which not used in accordance with the requirements of the instructions and is damaged due to improper operation
C. Disassembles by itself, making it unusable
D. Caused by force majeure

Chapter 6: Safety Guidelines
1. If consumers use a power adapter for power supply, they should also use a power adapter that has obtained conventional certification and meets the requirements of relevant standards.
2. The product has a built-in lithium battery, which is not replaceable, and should not be thrown away or placed in a fire to avoid danger.

The final interpretation of the above content belongs to the Company




M60 太空船AI智能蓝牙音箱

我司保留所有专利、商标版权及其它知识产权
产品功能参数如果变更，恕不另行通知，产品以实物为准

产品参数:
产品名称: 太空船AI智能蓝牙音箱 频响范围: 50Hz-16KHz TF卡支持格式: MP3 WAV
型号: M 60 版本: 杰瑞 5.1+EDR 充电输入电压: DC 5V ---1A
材质: ABS+PC+硅胶 频率: 2.4-2.48GHz 蓝牙版本: 5.1+EDR
蓝牙输出功率: 2*5W (RSM) 充电输出电压: DC4-8.5V/700mAh
蓝牙频率: 2.4-2.48GHz 蓝牙容量: 3.7V/1850锂电池 /3000mAh
立体声: 2.0
产品材质: ABS+PC+硅胶 蓝牙版本: 杰瑞 5.1+EDR 充电输入电压: DC 5V ---1A
F频音: USB 接收距离: 5M-15M (无障碍接收距离, 因环境及设备不同, 接收距离有所不同)
注意: 以上配置数据将根据主控升级而不断改进, 具体以实物为准)

包装配件
太空船蓝牙音箱*1 用户使用手册*1 保修卡*1
合格证*1 TYPE-C---USB电源数据线*1



第一章: 产品功能键说明

1. 功能键介绍与操作:

[M] 键开/关机:
长按 **[M]** 开机, 听到开机提示音后产品开机, 并默认蓝牙模式。蓝牙搜索10分钟内不对手机, 蓝牙将进入低功耗模式, 需单击 **[M]** 键激活蓝牙搜索状态。长按 **[M]** 键关机。(双击 **[M]** 键可以切换中英文语音)

[V] 键开/关RGB氛围灯 (四档颜色)
开机状态, 依次短按 **[V]** 键切换RGB变色, 长按 **[V]** 键开/关背光灯

时钟设定键
长按 **[V]** 键进入时钟调节, 当屏显数字闪烁时, 通过短按 **[+/-]** 键调节时钟数字, 再短按 **[V]** 键进入分钟设置, 短按 **[+/-]** 键调节分钟数字, 长按 **[V]** 键确认设定。

闹钟设定键
长按 **[V]** 键进入时钟设置介面后, 再短按 (两下 **[V]** 键) 可进入闹钟调节模式, 闹钟符号会闪烁, 此时左边时钟数字在闪烁, 通过短按 **[+/-]** 键调节时钟数字加减, 再短按一下 **[V]** 键跳到右边调节分钟数字加减, 长按 **[V]** 键闹钟确认设定。

闹钟关闭设定: 在开机状态下, 快速双击闹钟键, 闹钟图标消失, 即为闹钟模式关闭。
(本产品设定了闹钟二次唤醒功能, 当闹钟响起, 若不动关闭闹钟会在5分钟内再响一次)

与一号键: 长按 + 键音量加, 长按 - 键音量减, 短按 - 键上一曲, 短按 + 下一曲

2. TF卡扩展MP3音乐播放: 第一步, 请确认内存卡是1-32G (内存格式最好是FAT32位格式), 内置是MP3格式歌曲) 将TF卡插入卡槽, 开机后会自动识别并播放歌曲


3. 无线蓝牙播放: 开机后, 不插TF卡状态默认为蓝牙模式, 也可以通过短按蓝牙手动切换到蓝牙模式连接: 打开手机并开启手机蓝牙搜索并选择蓝牙设备 "M60智能蓝牙音箱" 进行配对, 配对成功后会发出连接提示音, 表示蓝牙已连接成功, 可以正常的播放蓝牙设备上的音乐。

4. FM收音机设置
短按 **[M]** 键切换到收音模式, 再短按 **[V]** (闹钟键) 进入FM自动搜台, 搜台完成后自动保存电台, 按 **[+]** 键一键选择电台 (备注: 搜不到台时, 请插入充电线, 充电线为FM收音天线来使用)

5. TWS连接模式: 两台同时开机, 会自动连接, 连接成功会提示 (对箱已连接)

6. 充电指示灯: 充电时, 电池图标亮; 充满电, 电池图标熄灭。
本产品是一款AI智能音箱, 下载小云助手APP, 语音唤醒 (你好, 小云) 即可智能聊天及点播。

第二章: 操作说明
关注公众号请用手机微信扫描下方二维码, 关注公众号, 查看教程并获取下载地址 (下载后注册用户并允许权限)
1、蓝牙连接并下载APP
打开手机蓝牙, 找到名称为 "M60智能蓝牙音箱" 的设备并连接, 手机应用商店搜索 "小云助手" 或扫描下方二维码关注微信公众号查看教程并获取下载地址 (下载后注册用户并允许权限)
2 打开APP后等待QQ音乐授权跳转 (如未下载QQ音乐请先下载并登录)
3、进入小云助手APP后唤醒 "你好, 小云" 小云回复后, 您可以说您想听的歌曲及对话;
●海量在线内容
丰富的QQ音乐资源, 版权还在持续入库中; 可满足歌星、歌曲点播及查询; 应场景相匹配的电台播放, 可以说 "你好, 小云" 小云回复后, 您可以说 "播放DJ", "我想听刘德华的歌", "播放新歌榜"
●电台可以说: "你好, 小云" 小云回复后, 您可以说播放中国之声、深圳交通广播、听科技新闻



■新闻拥有海量的音频资源, 包括最新、最热、分类、地域新闻及优质的新闻节目, 一步满足您早、中、晚不同时间获取新闻资讯的所有需求, 可以说: "今天发生了什么大事", "有什么娱乐新闻", "我想听新闻联播"
■天气准确的天气资讯, 涵盖全球各大中小型企业, 可以说: "今天穿什么", "明天热不热", "北京天气质量如何"

●故事、小云, 唤醒后, 您可以说: "我想听儿童故事"

●实用工具
■笑话你好, 小云, 唤醒后, 您可以说: "给我讲个笑话", "来一个搞笑段子"

第三章 故障排除
1、多次连接配对不成功关闭音箱及手机重新开机, 确定连接名称为: M60智能蓝牙音箱
■音箱播放出现断音: a、连接距离是否超出范围或音箱与手机之间有限障碍; b、手机网络是否顺畅, 音箱是否电池低电。
3、播放无声检查音箱是否最小声 (长按 **[+/-]** 键可调整声音大小)
4、无法开机检查是否有电, 插上USB充电线, 充电2小时再试下
5、AI智能无法对话确认蓝牙是否连接, 小云助手APP是否手机后台运行
6、出现死机找一根针轻轻敲击一下音频口就可以复位重启解决死机问题

第四章: 充电说明
■请使用标称或者同等参数的电源适配器给音箱充电b、产品使用中, 电量低或者电量不足时, 应尽快充电c、请勿在高温高压下使用本设备d、长时间不使用时, 建议每个月给音箱充一次电, 以确保在需要使用时电池电量充足及音箱正常使用!

第五章: 售后服务说明
■非常感谢您使用我们的产品, 为了切实保障您的权益, 明确经销代理商和公司应当承担产品的维修、更换、退货 (简称三包) 责任义务, 敬请阅读以下事项:
1、按照谁销售谁负责的三包原则, 产品出现质量问题凭 (保修卡) 与经销商联系, 由经销商对客户提供服务, 我公司则对经销商提供技术支持; 2、公司承诺, 自售出之日起 (日期以有效票据及网络平台订单日期为准), 七日内出现质量问题, 客户可以选择退货更换及维修, 三个月客户可选择换新 (外观无损伤), 一年内客户可享受免费维修 (客户承担相应的运输费用); 超过保修范围, 出现质量问题, 各售后服务网点只收取元器件材料及运输费用; 3、下列情形不属于三包范围: A超过三包期限的B未按说明书要求使用, 因操作不当损坏的C自行拆卸, 造成无法使用的D因不可抗力力造成的

第六章: 安全指引
1、消费者若使用电源适配器供电, 则应配套使用获得CCC认证并满足相关标准要求的电源适配器。2、产品内置锂电池, 不可更换, 请勿丢弃或置入火中, 以免引起危险。
以上内容最终解释权归本公司所有

