


92mm




01 How to wear headphones correctly — 02 Product Introduction — 03 Touch Operation — 04 Item list —— 05 Warranty Statement ----


Take out and pair it


When using for the first time, take out the left and right earphones at the same time. When the white light and ice blue light of the earphones flash alternately, the earphones will enter the automatic pairing mode.

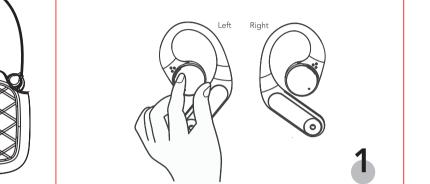


How to wear headphones correctly

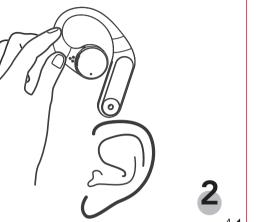

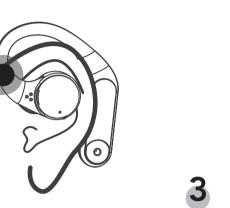

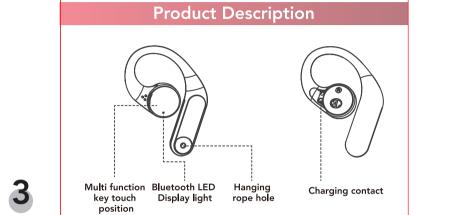

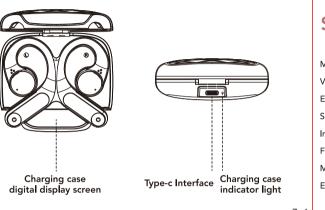

Charging Case Input: 5V 400mA Charging Case Output: 5V 120mA

Effective Distance: Approx. 10m Earphone Battery Capacity: 60mAh Charging Case Battery Capacity: 400mAh

Duration: Approx. 5 H (Earphone)

Frequency Respinse: 20Hz-20KHz Earphone Charging Time: Approx. 2 H Microphone Sensitivity: -38dB±3dB Charging Time of the Charging Case: Approx. 2 H

Open the Bluetooth settings option of the Bluetooth device to be paired, enter the options and find the

powered on, with the prompt sound of "De · When the headset is turned on: the white light and the ice blue light Manual power-on: Long press for 3 seconds, the · When the headset is turned off: After the white light is on, it goes out sound of "Du".

· Pairing status: white light and ice blue light flash alternately

· Headphone Charging: The digital display screen of the charging case is always on, the ice blue indicator light of the charging case is always on, and the white light on the headphones is always on. After being

charged, the headphone indicator light turns off, and at the time, the charging case digital display screen and indicator light

Auto power on: The Earphone are taken out of the charging case, the Earphone will be

power off: Long press for 5 seconds, the Earphone will be powered off, with the prompt

Double press the right ear: Double press the left ear:

Wake up voice assistant When using both ears, press and hold the left ear

Iti-function button for 2seconds to activate the voice sistant. When using one earphone, press and hold the f I(or right) earphone for 2 seconds to activate the voice

Phone mode

Press and hold the left (or right) ear multi-function button for two seconds: call rejection

Music mode Triple press on the left ear: Triple press on the right ear:
Previous song next song

When both ears cannot be paired, you need to clear all connected devices and click the left and right



Wireless pairing mode

and right earphones; the left and right arphones will automatically pair after they a turned on. After successful pairing, there

When the left and right earphones have pairing records, they will automatically connect back when they are turned on, and the prompt will sound "beep"


Press and hold the multi-function Press and hold again for 2 button on the right ear for 2 seconds seconds


Note 1: When using one earphone, you cannot switch between game mode and music mode.


Note 2: The factory setting defaults to music mode





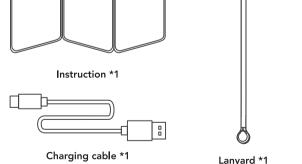

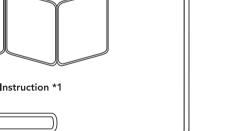

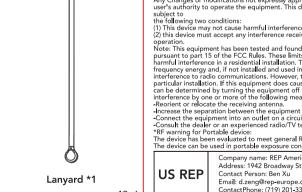

FCC ID: 2BHJR-X81

hanges or modifications not expressly approved by the party responsible for compliance could void the authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is

his device must accept any interference received, including interference that may cause undesired

rning for Portable device: vice has been evaluated to meet general RF exposure requirement.

product warranty card

overation.

To execute the second process of the second process of

Increase the separation between the equipment and receiver.

nnect the equipment into an outlet on a circuit different from that to which the receiver is connected.

"It the dealer or an experienced radio/TV technician for help.

"Ing for Portable device:

ce can be used in portable exposure condition without restriction. Company name: REP America LLC Address: 1942 Broadway St. STE 314C, Boulder, CO 80302, United States

 The validity period of the three guarantees has exceeded: 2. Altering of the warranty cards and product code do not match the product itself;

3. Failure of damages caused by misuse, abuse or improper transportation, use, maintenance or storage;

S. Failure of damages caused by finsuse, abuse or improper transportation, use, maintenance or
 Failure of damages caused by force majeure (such as earthquake, war, fire, etc.) or accident;
 S. Zippers and tower buckles are damaged due to excessive force;
 Off-line or tear caused by overloading;

e product's original logo or label is changed or damaged,this warranty will be invalid.

The completeness and appearance of the product and accompanying materials are not covered by the warranty. You should inspect the product on site when receiving it and raise objections to any complete and clearly filled out.

MINISO Prodict service policy

If you encounter a problem, please contact our customer service to solve it. After-sales email: 7@hifi-earphone.com

This manual does not come with any form of warranty position expression or other implication. The products, specifications and information mentioned inthis manual are for reference only, and the

ontent will be updated on the website at any time without prior notice. The following guarantee is made for the products attached to this document: If the product is damaged

due to quality defects under normal use within twelve(12) months from the date of your purchase (the "Warranty Period"),and if it can be repaired, it will be repaired free of charge; If the manufacturer confirms that it cannot be repaired, it will be replaced free of charge; the repaired product will continue

to be covered by the warranty for the remaining warranty period(a minimum of not less than 30 days). he purchase date shall be based on the sales invoice date; if the purchase date cannot be determined, arranty period shall be calculated as thirteen(13) months from the product production date. you want to apply for warranty, please call the product service hotline first and follow our instructions.

Placement: It is recommended that when you are not using the Bluetooth headset, place it in a place When applying for a warranty, you are required to provide a valid sales invoice that is accurate,

attendant's instructions. It is strictly prohibited to use Bluetooth headsets during flight to avoid interference with the aircraft communication system.

may be swallowed and cause danger.

Guidelines for safe and effective use

where it will not be squeezed. Squeezing may cause damage to the product or personal injury. Children:Do not let children play with Bluetooth headsets. Some of the small parts are detachable and

Important safety tips

• Except for the operation methods specifically marked in the manual, please do not attempt to disassemble or replace any parts in the product. modifications or modifications to this Bluetooth headset without permission, the user will lose the right

to continue to enjoy the services included in the device ctronic devices: To avoid the effects of electromagnetic interference or configuration atibility, please turn off your Bluetooth device in accordance with regulations in places with

▶/▶I Play/Pause Call Answer/End

Enjoy the company of MINISO





Copyright@2024 MINISO Group affiliated companies and its licensors.
All rights reserved