

R7-2nd-Gen说明书

材质：80g书纸


尺寸：125×90mm 翻页

印刷：单色印刷

Reacher

R7-2nd-Gen

User Manual

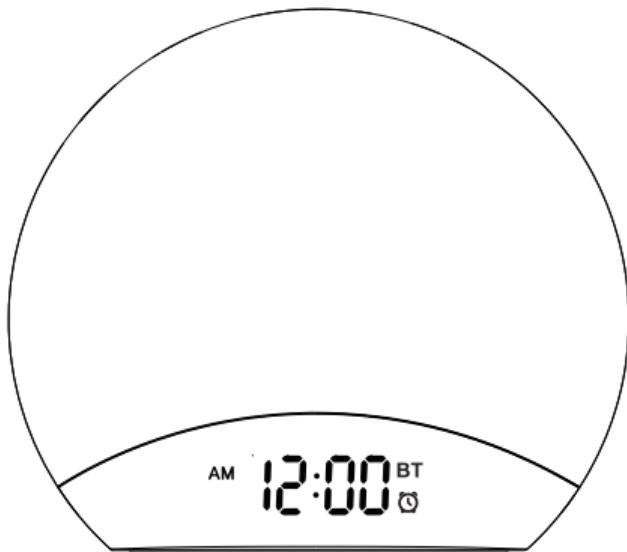

12 Months Warranty
If a faulty product is found when setting up
*please Email us at **customer@reachershop.com***

instructional video

You can get our Reacher product instructional video when you scan the QR code below and input item model R7-2nd-Gen.

Link: https://www.youtube.com/channel/UCv-pUg6_WyxzmEFQebi7FFVw




Attention

Please use Original Power Adapter ONLY. Over-voltage may shorten machine life to cause malfunction.

Battery backup is for saving TIME/ALARM settings only, not for running the clock.


Quick Getting Started

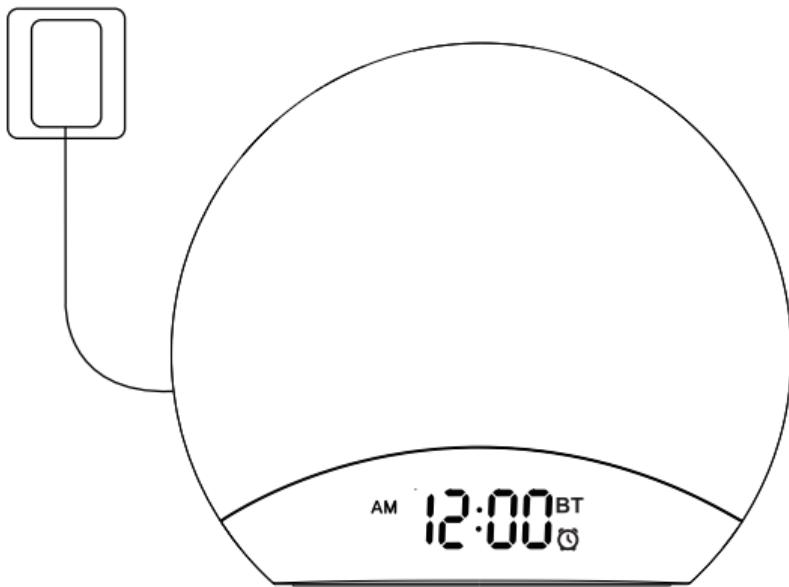

Pay attention


The corresponding icon on the display disappears when a setting is turned off.

Overview of Button Functions

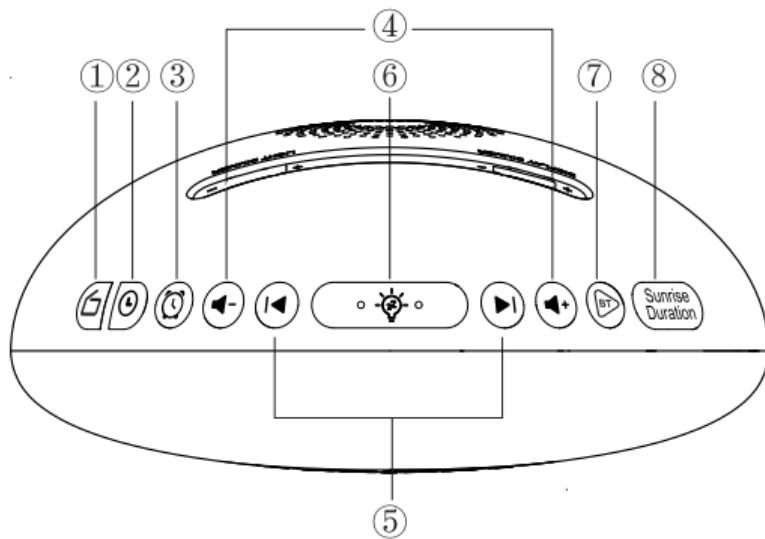


- ① Enter radio mode
- ② Enter time setting
- ③ Enter alarm setting
- ④ Volume down/up
- ⑤ 1. Increase/decrease the time
/alarm time/radio channels
- ⑥ 1.Turn on/off/switch night light
2.Enter snooze mode
- ⑦ Enter wireless speaker mode
- ⑧ Set the sunrise duration

Front Panel

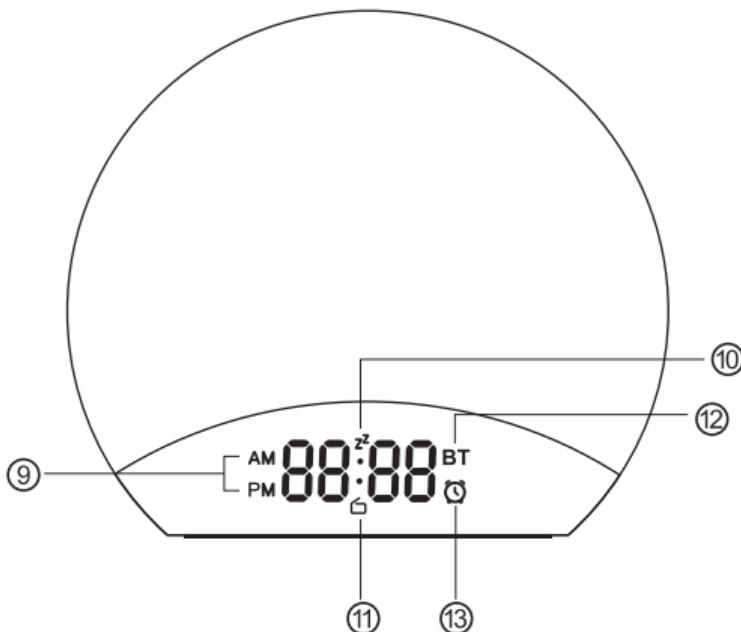

- ⑨ AM/PM Appear in 12Hour Mode
- ⑩ Snooze-Flashing Icon
- ⑪ Radio Indicator
- ⑫ Wireless Speaker Indicator
- ⑬ Alarm On Indicator

Back Panel

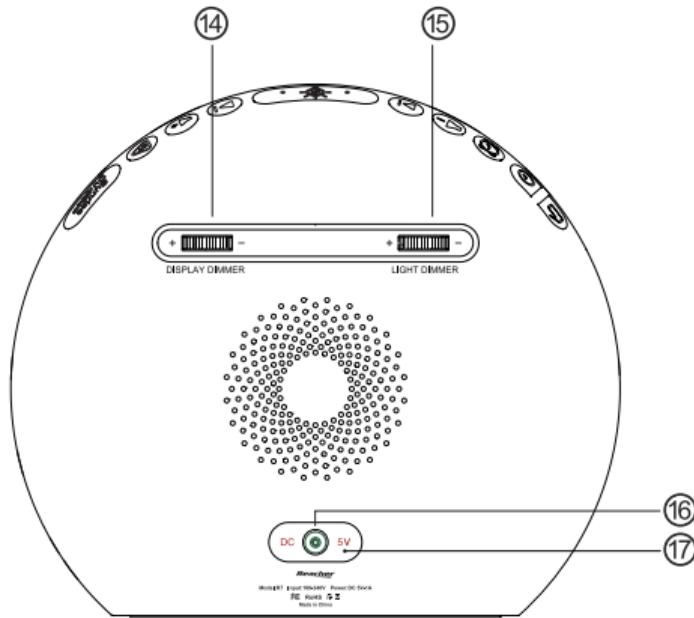

- ⑭ LED Display Brightness Control
- ⑮ Nightlight Brightness Control
- ⑯ Power Cord Interface
- ⑰ FM Radio Antenna

Time Setting

- ① Press “ 

Example: The default time is “AM 12:00”, but the correct time is “AM 12:30”.

Correct the minute as below.

1. Press “ 

5

Alarm Setting

- ① Press “

Wake Up Radio Alarm Setting

When setting the alarm ringtone, make sure you select P04.

After turning off the radio, the last saved channel will automatically default to the P04 ringtone

Alarm Volume Setting

It will sound when ringtone selected, press the “

Attention:

1. Alarm setting is similar to time setting
2. When radio/wireless speaker is OFF, press “

6

Alarm On/Off & Snooze

Alarm On/Off:

Alarm will be turned on after you set the alarm time. Long press “” for 2 seconds to turn on or turn off the alarm.

Stop the Alarm of the Day:

- ① Press “” to stop the alarm of the day when the alarm goes off.
- ② If you do not press any button, the alarm will last 60 minutes.

SNOOZE:

When the alarm goes off, press the “” to snooze for a while, the alarm will go off again 9 minutes later.

Blink when snooze



Setting the Sunrise Duration

Short press “” to adjust Sunrise Duration (OFF-0-5-10-15-20-30-45-60minutes)

Note:

The sunrise light will light up gradually before the alarm goes off (the default setting is 30 minutes). When the set alarm time arrives, the sunrise light will be on the maximum brightness level.

For example: your alarm clock is AM6:30, the time of the sunrise duration is set to 30 minutes, and the light will gradually come on at AM6:00.

Nightlight Setting

1. Press “” to turn on .
2. Press “” to cycle through colors.
3. Slide the “” to brighten / dim the night light.
4. Long press “” for 2s to turn off

FM Radio Play Setting

Please extend the FM antenna on the back of clock

Turn ON: Press "  "

Adjust Radio Volume: Press "  - " / "  + "

Turn OFF: Press "  "

Attention:

When the radio is playing, it automatically jumps back to the time display without any operation.

Manual Tune FM Channel

Press "  " / "  " to choose FM channels and long press to quickly adjust.

Auto Search FM Channel

- ① Hold "  " 2 secs to scan and autosave the scanned stations.
- ② During the scan, Channels are saved automatically.
- ③ Once the station search is completed, press "  " / "  " to select the saved radio station

Attention:

Once auto scanning is completed, if you want manual tuning FM Channel, please RESTORE FACTORY SETTING first.

Wireless Speaker Setting

Turn ON: Press “”.

Connect: When “” flashes, search and select R7-2nd-Gen from the device list to connect.

Music Switching : Press “” / “”.

Adjust Volume : Press “” / “” (The phone can also adjust the volume)

Play/Pause: Press “”.

Turn OFF: Long press “”.(“ BT ” will disappear)

Attention:

1. Only for music play.
2. Unable to produce various notification ringtones or alert sounds, and doesn't support cell phone calling.

Display Dimmer

+  - :Slide the wheel toward “ +/- ” to increase /decrease the brightness of the display.

Restore Factory Setting

Simultaneously hold “ |◀| ” / “ |▶| ” for 2 seconds to restore factory settings

Safety Instructions

- To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture.
- To avoid damage, never place the unit near radiators, in front of heating vents, under direct sunlight, or near water.
- When disconnecting the power supply, pull the plug first. Do not pull the cord by itself. Never handle the power plug with wet hands, as this could cause fire or electric shock.
- Do not open the housing.
- Do not twist or pinch the power supply cord. If the plug or power supply cord needs to be replaced, ensure that it complies with the manufacturer's recommendation.

Battery Warning

WARNING

- **INGESTION HAZARD:** This product contains a button or coin cell battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours.



Please note the following about the battery:

- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- The machine has a built-in CR2032 battery.
- The nominal voltage of a CR2032 battery is 3 volts.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.
- Batteries are not replaced by the consumer.

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference.
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.