

DO NOT USE LOW RESOLUTION PDF FILE FOR PRINTING. ONLY USE THE HIGH RESOLUTION AI FILE

这是一个低分辨率的PDF文件,绝对不能用来做印刷，只能用高分辨率的AI

MERKURY
INNOVATIONS

MERKURY INNOVATIONS **CONFIDENTIAL**

FILE INFORMATION

DATE: 07/24/24
MODEL NUMBER:
MI-BT135-101 (MANUAL)

PRINTER SPECIFICATIONS

FILE NAME: MI-BT135-101_Manual_072424_OL.ai
SCALE: 100%
SIZE: Trim: W 202mm x H 140mm
PAPER STOCK: 80g Art Paper
INKS: 1/1
Grayscale
PRESS WORK / NOTES: Trim to size, score, fold,
& glue in specified areas.
Trim
Score

DO NOT print Comments or Dielines.
Physical sample according to specs must be approved
by MERKURY before proceeding to production.

CONTACT

MERKURY CHINA:
Perry
perry@merkuryinnovations.com.cn

COMMENTS (Internal reference only)

File created by Kim
- Include this manual in all packaging
- Grayscale
- Double-sided printing, 1 Fold

DO NOT PRINT
COMMENTS

RECONNECT TO BLUETOOTH®

- You only need to pair your Bluetooth® device with the speaker once.
- With your previously paired device's Bluetooth® turned on and in range, power on the speaker.
- The speaker will automatically reconnect to the last Bluetooth® device it was connected to.
- If you have a previously paired device that does not auto-reconnect, navigate to the Bluetooth® settings menu on your device, turn on the Bluetooth® feature, and select "MERKURY BT135" from your list of paired Bluetooth® devices and select "Forget." Repeat Pair & Connect steps stated above.

TROUBLESHOOTING

- | | |
|--|---|
| No power | Recharge your ENCORE LED Speaker and Microphone using the included USB type C charging cable. Try using a different cable. |
| Music is not playing over Bluetooth® | Make sure your Bluetooth® device has A2DP profile. Check if both devices are paired and connected over Bluetooth®. Restart the speaker to reconnect your Bluetooth® device. |
| Bluetooth® device will not reconnect with the speaker | Navigate to your Bluetooth® settings menu on your Bluetooth® device, tap "MERKURY BT135" and select "Forget". Now follow the steps to pair your device again. |

SPECS

- | | |
|---|---|
| Speaker Specifications:
Output Power: 2 x 8W | Power Information:
Input: DC 5V
Battery Capacity: 3000 mah
Playback time: Up to 5 hrs *
Charging time: Approx. 2.5 hrs * |
| Bluetooth® Information:
Bluetooth® Version: 5.3
Operating Distance: 30-ft.
System Requirements: Bluetooth® enabled device | *Depends on personal use and may vary from the estimated play time. |
- Please do not attempt to fix the product by yourself. If you are experiencing any problems with the product, please do not return it to the store you bought it from. You can contact our technical support representatives and they will assist you with any questions you might have.
- For assistance operating your product, please consult the User's Manual first, then feel free to contact Merkury Innovations technical support:
- Merkury Innovations,
45 Broadway, 3rd Fl
New York, New York 10006
www.merkuryinnovations.com
E-mail: support@merkuryinnovations.com
- Made in China
- ©2024 Merkury Innovations, LLC.
To explore our full selection of products, visit us at:
www.merkuryinnovations.com
- The illustrated product and specifications may differ slightly from those supplied. All other trademarks and trade names are those of their respective owners.

MERKURY
INNOVATIONS



ENCORE
Bluetooth® Speaker & Lyrics Display



ENCORE LED Speaker / Wireless Microphone / USB-C Charging Cable / User Manual

USER MANUAL FOR MI-BT135

See details inside before use.

OUTSIDE

CHARGE

- Plug the USB type C charging cable into the USB-C port on the back of the speaker and connect the other end of the cable into any compatible charger or USB AC wall adapter.
- When charging, the small LED indicator will glow red. When fully charged, the LED indicator will turn off.
- Charge speaker for 3 hours before first use.
- Use the USB charging cable to plug into the charging port at the bottom of the microphone to charge.

TURN ON & OFF

- Power on the speaker by pressing the power button located on the top of the speaker.
- Speaker automatically starts in Bluetooth® pairing mode and will connect with previously connected Bluetooth® devices if in range.

PAIR & CONNECT

- Make sure the speaker is turned off and your device's Bluetooth® setting is enabled.
 - Turn the speaker on; press and hold the ((M)) button for 2 seconds, the LED will flash.
 - On your Bluetooth® enabled device, navigate to the Bluetooth® settings menu, turn on the Bluetooth® feature, and search for new devices.
 - Wait a few seconds and select "MERKURY BT135" the speaker will emit a tone when successfully paired.
- NOTE:** If your device's Bluetooth® version is below version 2.1, you may need to enter the password "0000."
- AUX-IN:** The speaker will switch to wired mode automatically once an AUX cable is inserted into the AUX-IN port.
- NOTE:** Insert a USB thumb drive or MicroSD card for direct music playback.

PLAY

- Connect your device to the speaker via Bluetooth® (see "Pair & Connect with a New Device").
- Open your favorite music app and press play.
- Control the music, track and volume from your device, or control them from the onboard controls on the speaker.
- Adjusting Volume : Adjust the volume using the volume control knob on the speaker or through your device.
- Press the ((P)) button to play/pause music.
- Press and hold the ((M)) or ((M)) button to skip/return to the next/previous track.
- All audio, including music, games, videos, and notifications will be played through the speaker.

USING THE WIRELESS MICROPHONE

When the speaker is turned on, the wireless microphone is connected to the speaker by default; after turning it on. Turn on the wireless microphone by pressing and holding the power "ON/OFF" button on the wireless microphone to begin using the microphone. To adjust the volume/reverb affect on the microphone, simply press the + button on the microphone to increase the volume/reverb or press the - button to decrease the volume/reverb.

Press the microphone ((I)) button to rotate through the various special voice effects built into the microphone. Press and hold the microphone ((I)) button to reset the special voice effects feature of the microphone and return to normal voice mode.

Please note: When the blue light of the wireless microphone is flashing, it indicates that the microphone battery is running low and needs to be charged.

ON-BOARD CONTROLS (TOP OF SPEAKER)

 


- Press the ((M)) button once to increase the volume. Press and hold the button to return to the previous track.
- Press the ((M)) button once to decrease the volume. Press and hold the - button to skip to the next track.
- With the speaker is powered off, press & hold the power ((P)) button for 3 seconds to turn on the speaker.
- Press and hold the ((M)) button to switch between the various LED lighting effects on the volume knob.
- Press the ((M)) button to switch between clock mode and Bluetooth® mode.
- Press the ((M)) button twice quickly to have the LED display dance to the rhythm of the music.
- In TF card and U disk mode ,press and hold the ((M)) button to eliminate the single loop/sequential play feature.

ON-BOARD CONTROLS (MICROPHONE)

- | | |
|--|---|
| | • Press and hold the button to switch to the power On / Off.
• Press the button once to between volume control and reverb control. |
| | • Press the button once to increase the volume or reverb. |
| | • Press the button once to decrease the volume or reverb. |
| | • Press and hold the button to switch to the special voice effects feature.
• Press the button once to toggle between the various special voice effects. |

SPEAKER INPUTS (BACK OF SPEAKER)



- | | |
|-------------------------|------------------------------|
| 1. USB drive input port | 4. USB-C charging input port |
| 2. AUX input port | 5. MicroSD / TF card port |
| 3. LED indicator light | |

INSIDE

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.