


SPEED PIONEER


STUNT CROSS-COUNTRY INSTRUCTION MANUAL

REMOTE CONTROL FUNCTION

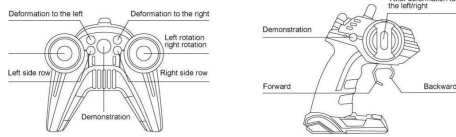


REMOTE CONTROL BATTERY INSTALLATION

1. Remove the battery cover from the back of controller.
2. Install 2 "AA" batteries into the controller, make sure to install batteries to their correct polarity.
3. Replace the battery cover

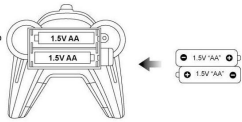


CAR CHARGING INSTRUCTIONS

 1. Open the battery cover on the back of the remote control car and remove the battery pack from the battery compartment (Figure 1)
2. Connect the USB charging cable to the corresponding socket. When charging, the LED light is always on. When the charging is finished, the LED light is off, and the charging time is about 120 minutes (Figure 2)
3. Install the battery pack into the battery case, connect it, replace the battery cover, and secure it with a screwdriver.




GESTURE CONTROLLER FUNCTION

 Press the function key to switch three modes.
The first one: forward + backward + left and right sideways.
The second kind: forward + backward + left and right twist.
The third one: forward + backward + left and right twist.
(Hold the gesture remote control as horizontally as possible)




GESTURE CONTROLLER BATTERY REPLACEMENT

 The gesture controller uses a button battery. Please open the battery cover on the back of the controller and replace the button battery of the corresponding model, then close the battery cover.




GESTURE CONTROLLER OPERATION

 1. Press and hold the power button on the controller, then turn on the power switch of the remote control car. The code will be automatically completed at this time




2. Gesture remote control operation diagram illustration (Hold the gesture remote as horizontally as possible)

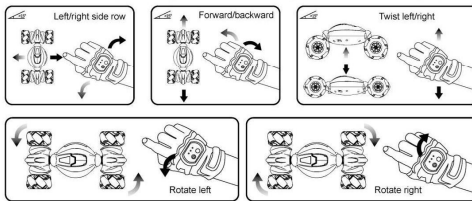

SPEED PIONEER


STUNT CROSS-COUNTRY INSTRUCTION MANUAL

REMOTE CONTROL FUNCTION

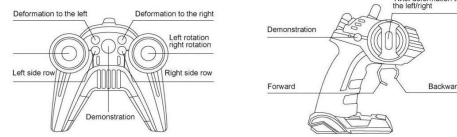


REMOTE CONTROL BATTERY INSTALLATION

1. Remove the battery cover from the back of controller.
2. Install 2 "AA" batteries into the controller, make sure to install batteries to their correct polarity.
3. Replace the battery cover

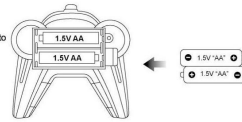


CAR CHARGING INSTRUCTIONS

 1. Open the battery cover on the back of the remote control car and remove the battery pack from the battery compartment (Figure 1)
2. Connect the USB charging cable to the corresponding socket. When charging, the LED light is always on. When the charging is finished, the LED light is off, and the charging time is about 120 minutes (Figure 2)
3. Install the battery pack into the battery case, connect it, replace the battery cover, and secure it with a screwdriver.




GESTURE CONTROLLER FUNCTION

 Press the function key to switch three modes.
The first one: forward + backward + left and right sideways.
The second kind: forward + backward + left and right twist.
The third one: forward + backward + left and right twist.
(Hold the gesture remote control as horizontally as possible)



GESTURE CONTROLLER BATTERY REPLACEMENT

 The gesture controller uses a button battery. Please open the battery cover on the back of the controller and replace the button battery of the corresponding model, then close the battery cover.




GESTURE CONTROLLER OPERATION

1. Press and hold the power button on the controller, then turn on the power switch of the remote control car. The code will be automatically completed at this time




2. Gesture remote control operation diagram illustration (Hold the gesture remote as horizontally as possible)

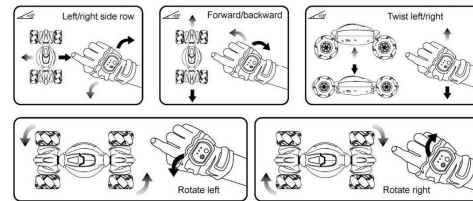

SPEED PIONEER


STUNT CROSS-COUNTRY INSTRUCTION MANUAL

REMOTE CONTROL FUNCTION

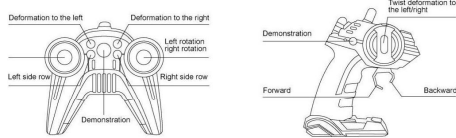


REMOTE CONTROL BATTERY INSTALLATION

1. Remove the battery cover from the back of controller.
2. Install 2 "AA" batteries into the controller, make sure to install batteries to their correct polarity.
3. Replace the battery cover

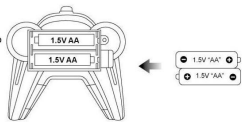


CAR CHARGING INSTRUCTIONS

 1. Open the battery cover on the back of the remote control car and remove the battery pack from the battery compartment (Figure 1)
2. Connect the USB charging cable to the corresponding socket. When charging, the LED light is always on. When the charging is finished, the LED light is off, and the charging time is about 120 minutes (Figure 2)
3. Install the battery pack into the battery case, connect it, replace the battery cover, and secure it with a screwdriver.




GESTURE CONTROLLER FUNCTION

 Press the function key to switch three modes.
The first one: forward + backward + left and right sideways.
The second kind: forward + backward + left and right twist.
The third one: forward + backward + left and right twist.
(Hold the gesture remote control as horizontally as possible)



GESTURE CONTROLLER BATTERY REPLACEMENT

 The gesture controller uses a button battery. Please open the battery cover on the back of the controller and replace the button battery of the corresponding model, then close the battery cover.




GESTURE CONTROLLER OPERATION

1. Press and hold the power button on the controller, then turn on the power switch of the remote control car. The code will be automatically completed at this time




2. Gesture remote control operation diagram illustration (Hold the gesture remote as horizontally as possible)

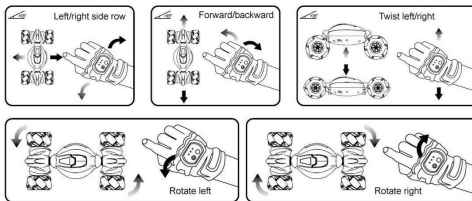

SPEED PIONEER


STUNT CROSS-COUNTRY INSTRUCTION MANUAL

REMOTE CONTROL FUNCTION

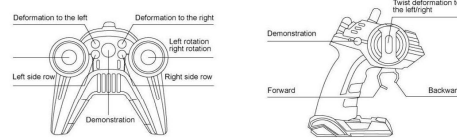


REMOTE CONTROL BATTERY INSTALLATION

1. Remove the battery cover from the back of controller.
2. Install 2 "AA" batteries into the controller, make sure to install batteries to their correct polarity.
3. Replace the battery cover

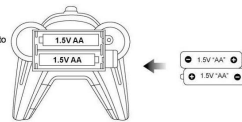


CAR CHARGING INSTRUCTIONS

 1. Open the battery cover on the back of the remote control car and remove the battery pack from the battery compartment (Figure 1)
2. Connect the USB charging cable to the corresponding socket. When charging, the LED light is always on. When the charging is finished, the LED light is off, and the charging time is about 120 minutes (Figure 2)
3. Install the battery pack into the battery case, connect it, replace the battery cover, and secure it with a screwdriver.




GESTURE CONTROLLER FUNCTION

 Press the function key to switch three modes.
The first one: forward + backward + left and right sideways.
The second kind: forward + backward + left and right twist.
The third one: forward + backward + left and right twist.
(Hold the gesture remote control as horizontally as possible)



GESTURE CONTROLLER BATTERY REPLACEMENT

 The gesture controller uses a button battery. Please open the battery cover on the back of the controller and replace the button battery of the corresponding model, then close the battery cover.




GESTURE CONTROLLER OPERATION

1. Press and hold the power button on the controller, then turn on the power switch of the remote control car. The code will be automatically completed at this time



2. Gesture remote control operation diagram illustration (Hold the gesture remote as horizontally as possible)

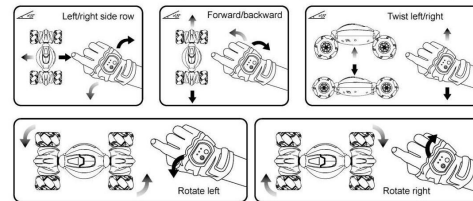

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.