
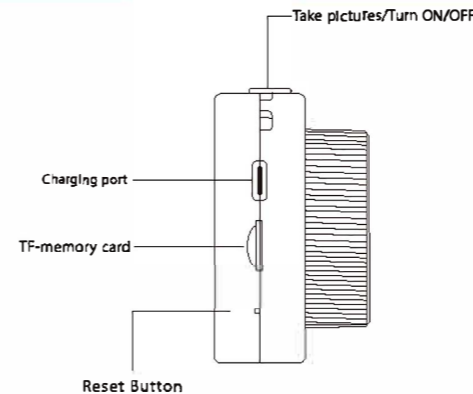


## Product Manual

Please read this manual carefully and keep it properly before using this product

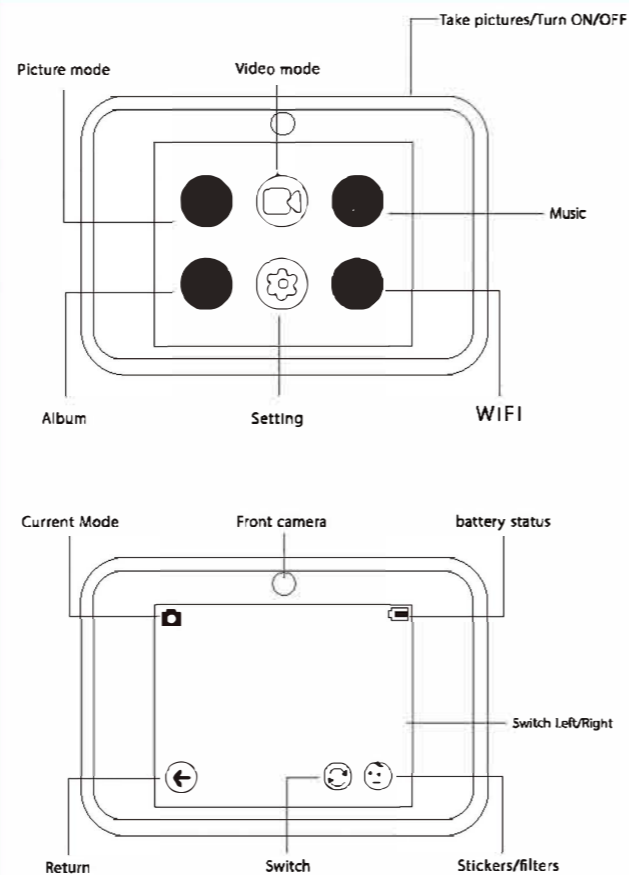

Maintenance :this product contains electronic components, do not use in water or in a humid environment use a dry, cloth and a soft cloth to wipe the surface stains of the toy.

## Troubleshooting

fault	The type of failure	Work something out
A	Won't turn on	Please try to replace the charger before turning it on
B	A memory card error is displayed	Please format the memory card, or replace the memory card
C	Freezes, can't turn on	Press the reset button and turn it back on
D	The image download is abnormal	Please reconnect the app and download it again

## Qualified inspection

## Brief introduction of function

### Switch machine

- 1.Press and hold the power button to turn it on or off.

### Photo mode

- 1.Touch the photo icon in the upper left corner of the interface to enter the photo mode, and press the photo button briefly to take photos.
- 2.Touch the switch lens icon in the lower right corner of the interface to switch different cameras.
- 3.Touch the icon of the photo mode in the lower right corner of the interface to enter the interface for selecting photos.
- 4.Tap the direction icon on the left or right of the interface in the photo mode to switch different photos.
- 5.Touch the back icon in the lower left corner of the interface to return to the main interface.

### Video recording mode

- 1.Touch the video icon in the main interface to enter the video mode. Press the camera button briefly to record, and press it again to stop recording. (No video recording without memory card)
- 2.Touch the switch lens icon in the lower right corner of the interface to switch different cameras.
- 3.Touch the back icon in the lower left corner of the interface to return to the main interface.

### Playback file

- 1.Enter the photo album to view photos and videos.
- 2.Touch the left and right icons to switch between different files.
- 3.Touch the delete icon in the lower right corner to delete the currently browsed file.(Note, please handle it with care, it cannot be restored after deletion.)
- 4.Touch the back icon at the bottom left of the interface to return to the main interface.
- 5.Touch the video blank when browsing the video file. It can be played or paused.

### System setup

- 1.Touch the setting icon in the main interface to select and set the desired setting state.
- 2.Touch the back icon at the bottom left of the interface to return to the main interface.
- 3.The following options can be modified: photo size, timed photo taking, video format, date label language setting, etc. (Formatting will empty all files, so please be careful.)

### WIFI settings

Touch the WIFI icon on the main interface to enter the WIFI mode, scan the code to download the software, and then connect to WIFI according to the prompts.

Charging and transferring files to the computer:

- 1.When the voltage is low or the battery is low, it will be automatically turned off, and it can only be used by charging with DC5V/1A adapter. This product is not sold as a standard charger. Please use a regular 3C charger to charge this product. Using other adapters at will may conflict with this product.
- 2.Connect the USB interface of the computer to read the photos and videos taken.

## WARNING

- 1.The built-in 3.7V lithium battery cannot be disassembled or replaced. If it is damaged, please contact the service and repair it.
- 2.Regularly check whether the wires, plugs, housings and other parts of the charger are damaged. If found damaged, stop using the charger until it is completely repaired.
- 3.The charger is not a toy. Only the recommended charger (5V=1A) can be used for toys.
- 4.The charger is used by or under the supervision of adults.
- 5.This product contains small parts and is not suitable for children under 3 years old.
- 6.Discarding the toy at will may have an impact on the environment, so please recycle it properly.
- 7.This manual contains important information, please keep it for later use. This manual contains important information, please keep it for later use.

SPORTS DV

APP Name: SPORTS DV

Licensee: Shenzhen Whale Bean Technology Co., Ltd  
Address: Vanke Yuncheng Design Commune, Xingke Road, XIII Community, XII Street, Nanshan District, Shenzhen  
Zone B6 - B613a

Contact number: 0755-86574765

## User Warranty Card

- ① Consumers who experience product quality issues during normal use within one year from the date of purchase, please bring your purchase records and warranty card to your local sales outlet or official after-sales platform to enjoy warranty service (rechargeable battery warranty for three months)
- ② Users are not allowed to disassemble the machine without permission, otherwise they will not enjoy free service.
- ③ Any product damage caused by improper use, poor storage, or force majeure is not covered by the warranty.
- ④ After the warranty period expires, the local sales outlets will continue to provide services and charge service fees and the cost of replacing components as appropriate.
- ⑤ The services provided by this warranty card do not include transportation and on-site service fees
- ⑥ The columns listed in this warranty card should be filled out truthfully and must be stamped or signed by the local dealer before it can take effect. If there is any alteration, it will become invalid. Please keep it properly.

### The user fills in the information

Purchase model		Purchase date	
customer	Name		
	Phone	Zip:	
	address		
dealer	Name		
	Phone	Zip:	
	address		

### FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.