 
 


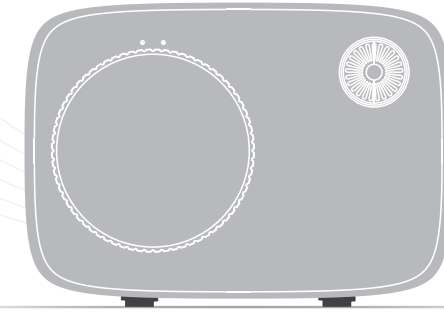


User Manual

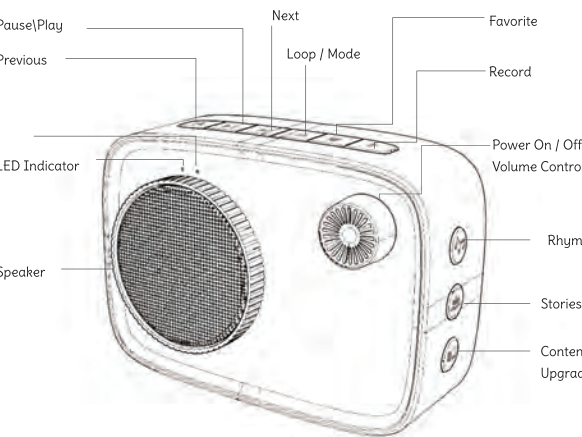

Know the Product



 Know the Product

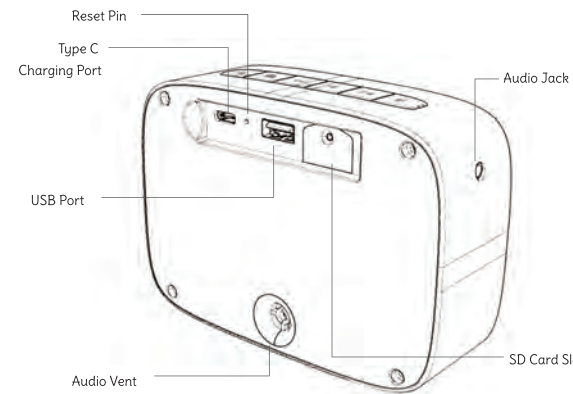

Key Functions

Rhymes
Enter Rhymes Playlist: Press the button briefly.
Next Playlist: Press the button briefly.
Previous Playlist: Press the button twice.

Stories
Enter Stories Playlist: Press the button briefly.
Next Playlist: Press the button briefly.
Previous Playlist: Press the button twice.

Content Upgrade
Enter Personal Playlist: Press the button briefly.
Next Playlist: Press the button briefly.
Previous Playlist: Press the button twice.

Note: Users can add their preferred content to their Personal Playlist.

Functions

Power ON/OFF & Volume Control
Power ON / Volume Increase: Rotate the knob clockwise.
Power OFF / Volume Decrease: Rotate the knob counter-clockwise.

Playback Controls
Previous Track: Press the button briefly.
Skip 5 Previous Tracks: Press and hold the button.

Pause: Press the button briefly.
Play: Press the button briefly again.

Next Track: Press the button briefly.
Skip Next 5 Tracks: Press and hold the button.

Loop and Mode Settings
Loop ON/OFF: Press the button briefly.
Mode Change (Bluetooth & USB Modes): Press and hold the button.

Functions

 
Favorite Function
Add Track to Favorite Playlist: Press and hold the button.
Play Tracks from Favorite Playlist: Press the button briefly.
Delete Track from Favorite Playlist: Press the button twice during playback.

Recording Function
Start Recording: Press and hold the button.
Stop Recording: Press the button briefly.
Play a Recorded File: Press the button briefly.
Delete a Recorded File: Press the button twice during playback.

NOTE:
If USB is inserted in the device while recording, the recorded tracks will get saved on the USB in a separate folder titled 'RECORDING'.

LED LIGHT INDICATOR

- Blue flash for 2 seconds: Power ON
- LED off: Playback
- Fast blinking blue: Recording
- Red and blue flashing: Bluetooth Connecting
- Solid blue: Bluetooth Connected
- Solid red: Charging

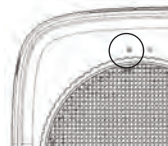

Device Pairing

- Long press the Mode key to enter Bluetooth mode.
- The LED will blink red and blue.
- Turn on Bluetooth on your smartphone/laptop.
- Select "WonderBuddy W11" from the list.
- Enter password 0000 if prompted.