



www.wonderbuddyworld.com

Woo! Innovations Private Limited

6501 10th Floor, Lohia Supernova, Sakhi Vihar Road, Sakhi Naka, Andheri East, Mumbai-400072, Maharashtra, India.

Consumer Complaints & Feedback

Contact our Support Buddy at the Merchant's address or

email at : Help@wonderbuddyworld.com.

Designed by Woo! Innovations Private Limited

FCM

Model Number: W71

FCC ID: 2ABAX-W71

Content Playlist

500+ Stories & Rhymes curated across 10 magical playlists.

Stories Playlist:

- Domestic Fairy Tales
- Fairytale Tales
- Tales from Around the World
- Heroic Tales
- SpineBiting Stories
- Spooktacular Stories
- Sci-Fi Thrillers

Music Playlist:

- All Time Favorites
- Sing Along Rhymes
- Learn Along Rhymes



How To update content?

1. Connect your device to the computer using a Type-C USB data transfer cable.

2. Open the WonderBuddy memory drive under "My Computer".

3. You will see multiple folder categories as below:

■ MUSIC_1	■ STORIES_1
■ MUSIC_2	■ STORIES_2
■ MUSIC_3	■ STORIES_3
■ PERSONAL_1	■ STORIES_4
■ PERSONAL_2	■ STORIES_5
■ PERSONAL_3	■ STORIES_6
■ RECORDING	■ STORIES_7

4. The folder names Personal_1, Personal_2, Personal_3 are designate to update new content.

5. By default, these personal folders are empty for you to update with your own content.

How To update content?

6. Please do not change any of the folder names.

7. Add new tracks by selecting any personal folders per space availability.

8. Alternatively, you can drag and drop your content directly into any of the personal folders.

9. Close the WonderBuddy Drive on your computer and disconnect the data cable to start playing content on your WonderBuddy device normally.

Note

Use a Type-C USB cable with data transfer capability.

The device should be in Power On mode during data transfer.

A voice message "Data Transfer Mode" will confirm a successful connection.

Caution

• Always supervise children aged 3 and under while using the product.

• The battery's charger should be handled by adults or under adult's supervision.

• Regularly check the charger for damage.

• Do not use a damaged charger.

• Do not rename folders on the SD Card: Music, Stories, Recording, and Personal.

• Avoid charging for more than 4 hours continuously.

• The device will auto-shutdown when the battery is nearly depleted. Ensure the power switch is off before charging.

• Clean the product with a soft cloth. Avoid water exposure as the product is not waterproof.

• Keep the product away from direct sunlight and extreme temperatures.

Limited Warranty

The manufacturer warrants that the Audio Storybox will be free from defects in workmanship and materials for 6 months from the date of retail purchase.

During this period, repairs will be provided free of charge for both parts and labor.

Visit www.wonderbuddyworld.com for more details.

FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and;

(2) This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

• Increase the separation between the equipment and the receiver.

• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

• Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restrictions.



If you love what we do,
follow us on social media for more fun and updates!

Let's turn every day into a
magical storytelling adventure together!