




Precautions	Limited 18-Month War
lote on static electricity	
tatic electricity accumulated in the body may cause mild tingling in your ears. To minimize the	What this warranty covers?
ffect, wear clothes made from natural materials.	NOUUI warrant to the original pu
	of defects in design, assembly, m
Nthers	
. Do not place this headphones in a place exposed to humidity, dust, soot or steam, or subject to irect sunlight. Do not leave the headphones in a car for a long time. It may cause a malfunction.	What the period of coverage is?
neet sumight. Do not leave the headphones in a car for a long time. It may cause a manufiction.	NOUUI warrant the product for 18
. Listening with this headphones at high volume may affect your hearing. For traffic safety, do not	What will we do to correct prob
se this headphones while driving or cycling.	NOUUI will repair or replace, at it
	shipping charges for the product
. Do not use the headphones in places where it would be dangerous if you are unable to hear	
mbient sound,such as at railroad crossings,train station platforms,pedestrian crossings,and	What is not covered by this warr
onstruction sites.	All above warranties are null and
	our request at the sole expense of
. Do not put weight or pressure on this headphones as it may cause the headphones to deform	improperly installed, altered in a
uring long storage.	The NOUUI Product Warranty doe
Denote which the head above to every inclusion	war, vandalism, theft, normal-use
. Do not subject the headphones to excessive shock.	to low Voltage disturbances(e.g.b
. Clean the headphones with a soft dry cloth.	modification or alteration.
	How to claim the warranty?
. Do not expose the headphones to water. The headphones is not waterproof. Remember to follow	Please contact retailers or visit <b>n</b>
he precautions below.	extend the warranty period, plea
	of purchasing the product.
. Be careful not to drop the headphones into a sink or other container filled with water.	
	Disclaimer
. Do not use the headphones in humid locations or bad weather, such as in the rain or snow.	Every effort has been made to en
0. Do not get the headsheare wet if you tauch the headsheares with wet hands, or put the	accurate and complete, no liabilit
0. Do not get the headphones wet. If you touch the headphones with wet hands, or put the eadphones in a damp article of clothing, the headphones may get wet and this may cause a	the right to make any changes wi
nalfunction of the headphones.	
ianunction of the headphones.	
1. If you experience discomfort after using the BLUETOOTH device, stop using the BLUETOOTH	
evice immediately. Should any problem persist, please contact us.	
2. If you have any questions or problems concerning this headphones that are not covered in this	
nanual, please contact us by email at: mynouui@outlook.com	

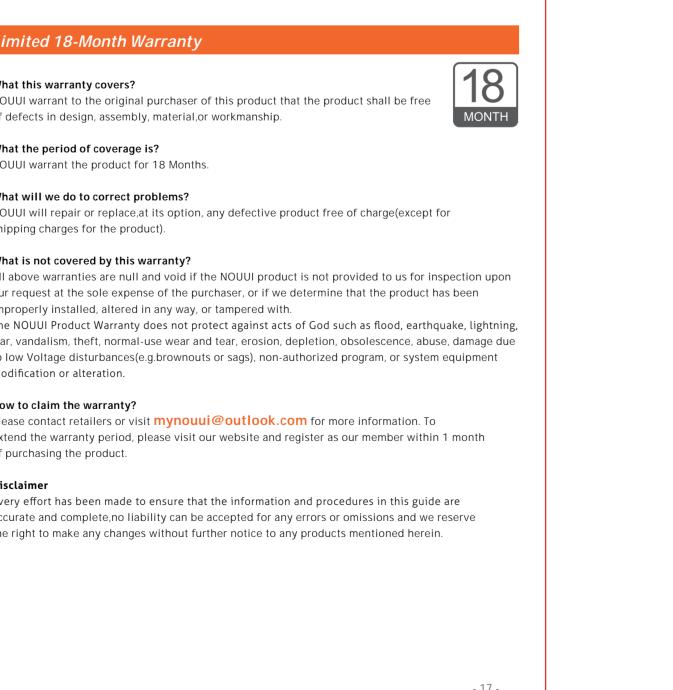

- 18 -

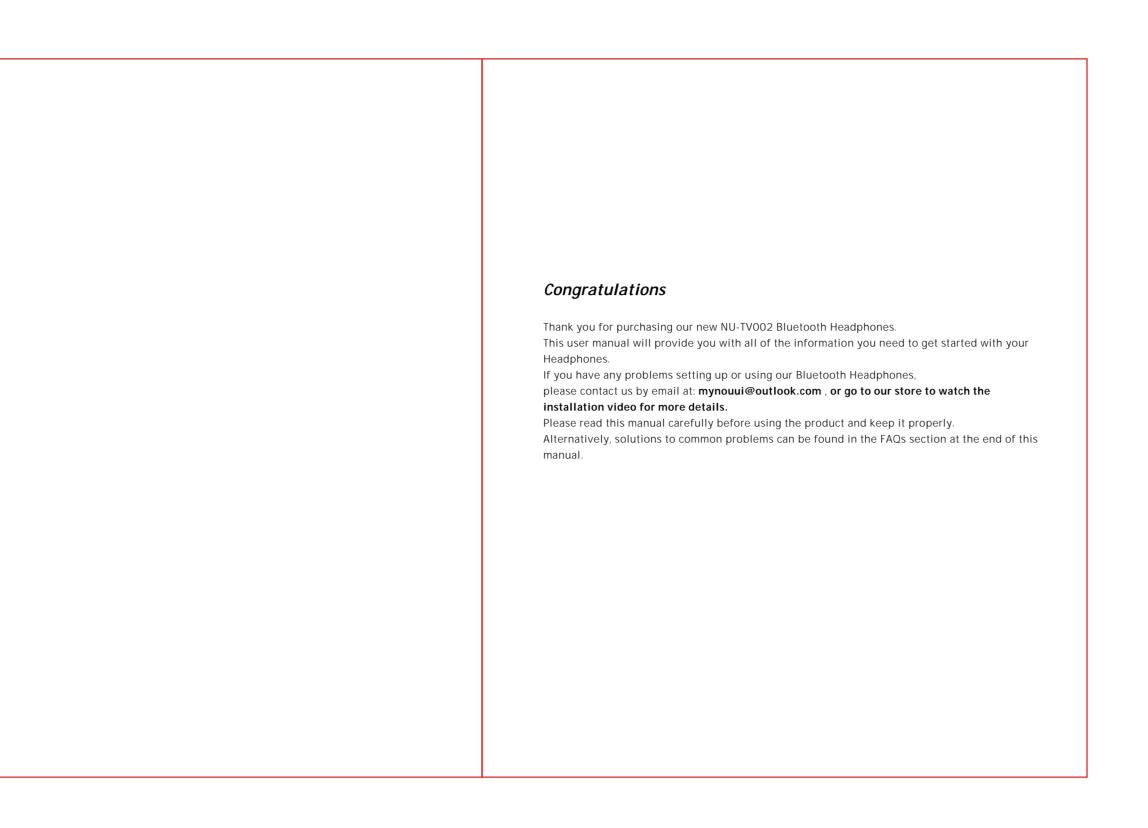

Package Contents	01
Product Specification	02
Product Overview	03
Button Functions	04
LED Indicator	05
Voice Prompt	05
How to Connect the Transmitter to Your TV	06
TV Sound Output Setting	08
Using the Headphones with Your Phone / Tablet	
Charging Method 1	10
How to Charge Your Headphones Properly After Use?	11
Switch Between Transmitter and Bluetooth	11
How Does the Transmitter Rebind to A New Headphones?	12
FAQs	13
Precautions	
Limited 18-Month Warranty	17
FCC Statement	

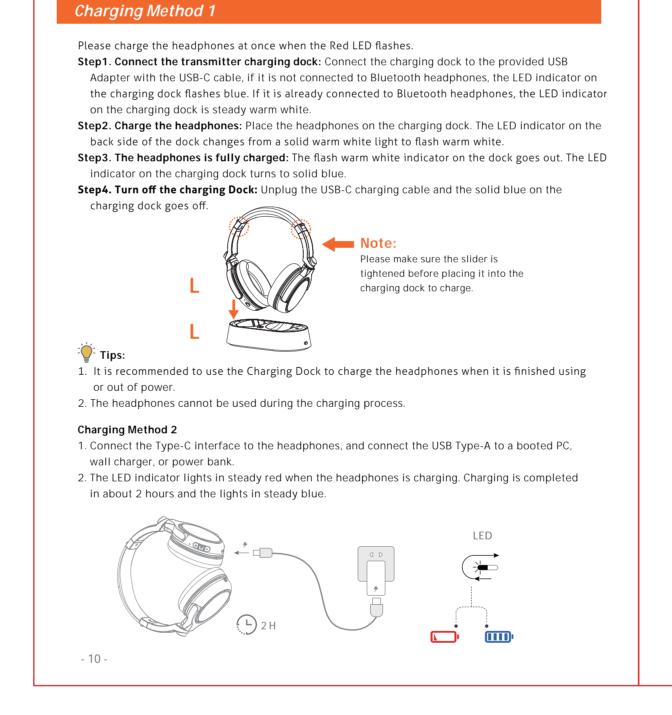

CC Statement	
lote:	
his equipment has been tested and found to comply with the limits for a Class B digital dev bursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protec gainst harmful interference in a residential installation. his equipment generates uses and can radiate radio frequency energy and, if not installed a	tion
used in accordance with the instructions, may cause harmful interference to radio communic dowever, there is no guarantee that interference will not occur in a particular installation. If equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the	this
nterference by one or more of the following measures:	
Reorient or relocate the receiving antenna.	
Increase the separation between the equipment and receiver.	
Connect the equipment into an outlet on a circuit different from that to which the receiver onnected.	is
Consult the dealer or an experienced radio/TV technician for help.	
his device complies with part 15 of the FCC Rules. Operation is subject to the following two onditions:	j
1)This device may not cause harmful interference, and	
2)this device must accept any interference received, including interference that may cause indesired operation.	
Caution!	
hanges or modifications not expressly approved by the party responsible for compliance co	ould
oid the user's authority to operate the equipment.	
he device has been evaluated to meet general RF exposure re quirement.	
The device can be used in portable exposure condition without restriction.	
Bluetooth°	
The Bluetooth word mark and logos are registered trademarks owned by the Bluetooth SIG,In any use of such marks by SKY WING Communication Electronics Co., Ltd is under license. Oth	




## SIZE:160x190mm 双面40印刷, (中间大两颗钉) 装

٦	
$\mathbf{\wedge}$	


		urn it off. When you want t ly turn on and reconnect t	-
indicator will be solide b This indicates that you h charging process is comp 3. If the following two inco	or is solid red. If the he olue, and the transmitte ave correctly placed th olete. rrect states appear whe	adphones is fully charged, r's LED indicator will be so e headphones on the dock en you place the headphon	the headphone's LED lid blue. for charging, and the
adjust the placement of Status	the headphones to avo Headphones Indicator	id affecting your next use. Transmitter Indicator	Charging Correct / Fail
Charge	Solid Red	Flashes Warm White	✓
Fully charged	Solid Blue	Solid Blue	✓
Headphones Connected	Flashes Blue	Flashes Warm White	×
Headphones Charging Failed	Flash Red & Green Alternately	No Display	×
Switch Between Tr	ansmitter and B	luetooth Headpho	nes
on the transmitter, then t 2. When connecting with Tr	you need to turn off the he transmitter will auto ransmitter, if you want g the transmitter first, a	e device's Bluetooth functi omatically connect to the h	on first, and then turn eadphones. et connection, you
3. If the headphones is first refer to page 9 <b>Using the</b>			ed connection steps


/ to Charge Your Headphones Properly After Use?

1. In order to facilitate your next use, the headphones can be directly placed in the transmitter

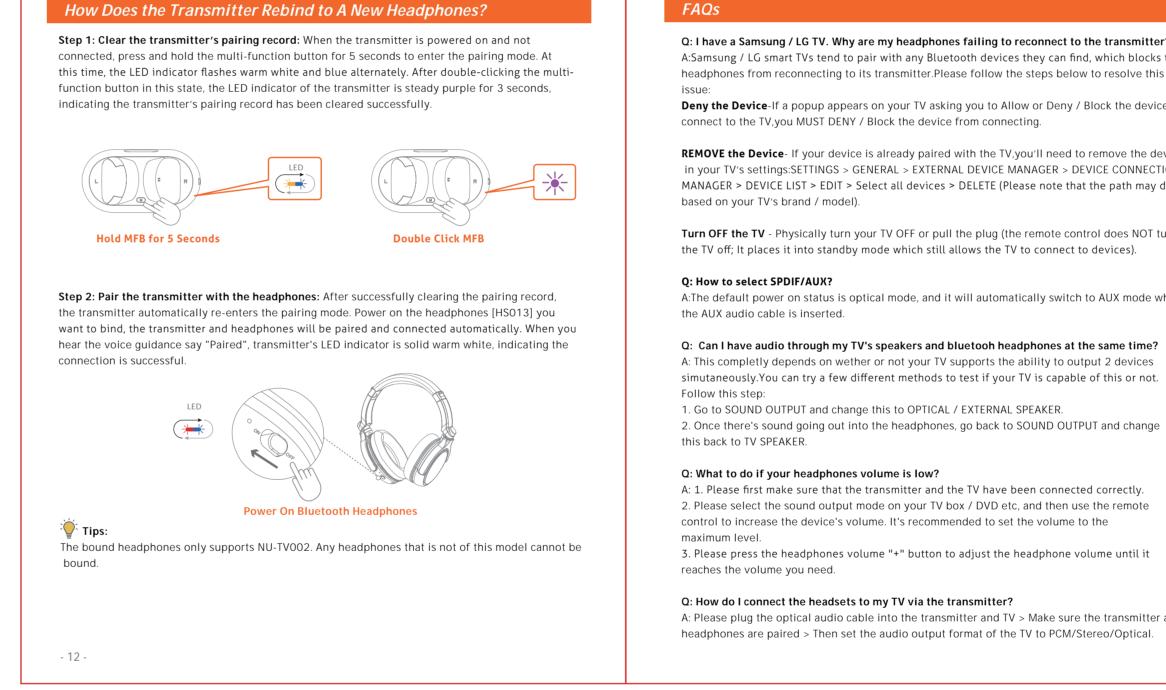


FAQs	
A:Samsun	a Samsung / LG TV. Why are my headphones failing to reconnect to the transmitter? g / LG smart TVs tend to pair with any Bluetooth devices they can find, which blocks t es from reconnecting to its transmitter.Please follow the steps below to resolve this
	<b>Device</b> -If a popup appears on your TV asking you to Allow or Deny / Block the device of the TV, you MUST DENY / Block the device from connecting.
in your T MANAGER	<b>he Device</b> - If your device is already paired with the TV,you'll need to remove the dev /'s settings:SETTINGS > GENERAL > EXTERNAL DEVICE MANAGER > DEVICE CONNECTIONECTION = DEVICE LIST > EDIT > Select all devices > DELETE (Please note that the path may disport TV's brand / model).
	the TV - Physically turn your TV OFF or pull the plug (the remote control does NOT turn lt places it into standby mode which still allows the TV to connect to devices).
O: How to	select SPDIF/AUX?
A:The defa	ult power on status is optical mode, and it will automatically switch to AUX mode what udio cable is inserted.
A: This co	ave audio through my TV's speakers and bluetooh headphones at the same time? npletly depends on wether or not your TV supports the ability to output 2 devices busly.You can try a few different methods to test if your TV is capable of this or not.
	DUND OUTPUT and change this to OPTICAL / EXTERNAL SPEAKER.
	ere's sound going out into the headphones, go back to SOUND OUTPUT and change o TV SPEAKER.
Q: What t	o do if your headphones volume is low?
A: 1. Pleas	e first make sure that the transmitter and the TV have been connected correctly.

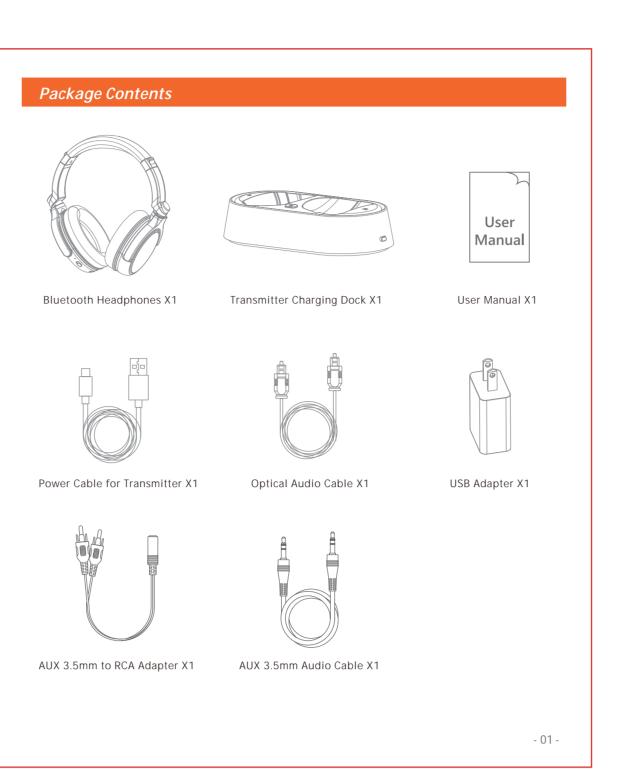

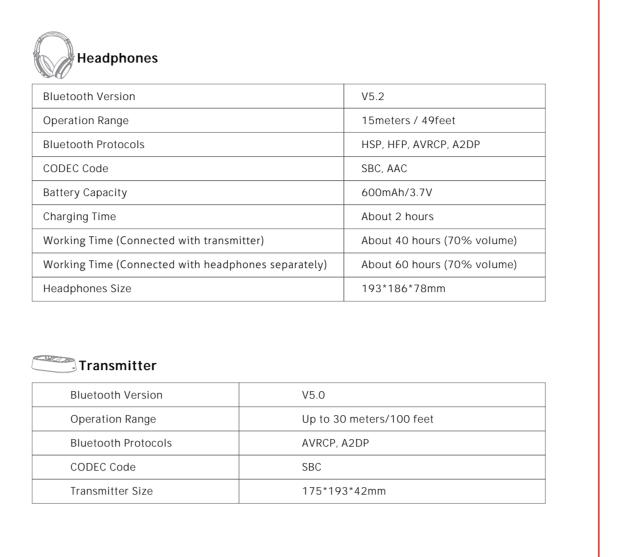

Product Specification

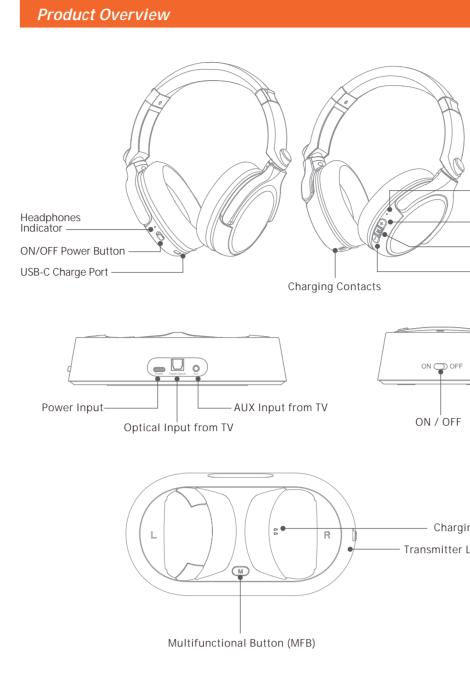

X	
H	
Microphone	
)//	
/ Volume +	
Multifunctional	
Button(MFB)	
Volume -	
OFF	
OFF	
honging Dies	
harging Pins	
itter LED Indicator	
- 03 -	

He	adphones	
Button	Function	Operation Instruction
ON/OFF Power Button	Power On	In off status, slide the switch to the ON side to power on, and it will automatically enter pairing mode, with the prompt sound "Power On".
	Power Off	In on status, slide the switch to the OFF side to power off, with the prompt sound "Power Off".
	Enter Pairing	In off status, slide the switch to the ON side, and it will automatically enter pairing mode, with the prompt sound "Pairing".
	Mode Play / Pause	In on status, put the headphones into the transmitter to charge, lift it from the transmitter, and the headphones will automatically power on to enter the pairing mode.
		Single click the MFB to play / pause audio from the headphones.
MFB -		The headphones is powered on, the headphones automatically reconnect to the transmitter by default.
	Reconnect	Single click the MFB button or manully click [HS013] on the Bluetooth pairing list to reconnect the device directly (When used separately with phone / tablet).
	Resetting	Press and hold the multi-function button for 10s to reset and restart.
	Volume Up	Single click Volume +
Volume + Next Song	Long press Volume + for 1 second (This function is only supported when using Phone/Tablet alone ).	
	Volume Down	Single click Volume -
Volume -	Previous Song	Long press Volume - for 1 second (This function is only supported when using Phone / Tablet alone )
Mute Button	Mute the Microphone	Long press the "Volume -" button for 2 seconds to mute or unmute the Microphone.
MFB & Volume	Clear pairing record	Long press the MFB button and "Volume -" for 5 seconds to clear the pairing record in the headphones, the light indicator steady purple 2 seconds.
C, Tr	ansmitter	
Button	Function	Operation Instruction
OFF/ON	Bluetooth OFF/ON	Slide the switch to turn the transmitter's Bluetooth On / Off.
MFB	Clear Pairing History	In the unconnected state, press and hold the multi-function button for 5 seconds to enter the pairing mode, and the LED indicator will flash warm white and blue alternately. Then double-click the multi-function button, and the LED indicator lights up purple for 3 seconds, indicating that the transmitter's pairing history has been successfully cleared.

\_\_\_\_\_

Туре	Function	LED Indicator
	Power On	Blue LED flashes 2 times
	Power Off	Red LED flashes 2 times
	Pairing Mode	Red & Blue LED flash alternately
	Connected standby mode	Blue LED flashes once every 10 seconds
	Playing Music	Blue LED flashes 2 times every 10 second
Headphones T C	Talking	Blue LED flashes once every 10 seconds
	Clear the pair record	Purple LED flashes once 2 second
	Charging	Steady Red LED
	Fully Charged	Steady Blue LED
	Low Battery	Red LED flashes
	Pairing Mode	Warm white & Blue LED flash alternately
	Reconnect Mode	Blue LED flashes once every 1 seconds
Transmitter Charging Dock	Connected	Warm White
	Charging	Warm white flash slowly
	Fully Charged	Steady Blue LED
oice Prom	Status	Voice Prompt
	orarus	reiser reinpt
	Dower On	Deuter Op
	Power On	Power On
Cote	Power Off	Power Off
	Power Off Pairing Mode	Power Off Pairing
Bluetoo	Power Off er Pairing Mode th connect success	Power Off Pairing Your headset is connected
Bluetoo Bluet	Power Off       er Pairing Mode       th connect success       ooth disconnect	Power Off Pairing Your headset is connected Your headset is disconnected
Bluetoo Bluet Low	Power Off       er Pairing Mode       th connect success       ooth disconnect       power prompt	Power Off Pairing Your headset is connected Your headset is disconnected Low battery, please charge
Bluetoo Bluet Low Micro	Power Off       er Pairing Mode       th connect success       ooth disconnect	Power Off Pairing Your headset is connected Your headset is disconnected

