



Let's ROC!

[REGISTER](#) [LOG IN](#) [WISHLIST \(0\)](#)[SHOPPING CART \(0\)](#)[MENU](#)

Instruction

How to use the ROC with our Mobile App

- **Congratulations and Package Check**

Congratulations on your purchase of ROC! Brought to you by Fun Time Pickleball.

Let's ROC and enjoy more Pickleball.

Your ROC package includes two ROC devices, four wristbands, and one dual charging cable. Each ROC device features a ball button, a paddle button, and an indicator light.

- **Charging (Video)**

Take your ROC device out from the wristband. Flip it over and see the magnetic charging port. Attach the magnetic head from the charging cable to the charge port. It can only be attached in one direction.

A flashing green light indicates that the device is charging, while a stable green light shows that it is fully charged.

Your ROC should be fully charged in approximately 30 minutes.

- **ROC App Download (Screen Capture, in progress)**

Go to the App Store, download TestFlight, and then open it to install the ROC app.

- **Registration (Screen Capture)**

When you open the Let's ROC app for the first time, it will ask you for permission to use Bluetooth and get location information. Grant the permissions as you normally would. It is also necessary to register a new account. Click the "Register" button on the initial screen, Enter your name, email, and password.

Our app will automatically log in for you going forward.

- **Connecting Both ROC Devices to Your Phone (Overlay Video)**

Now you are ready to connect your ROCs to the app.

Press any button on both of your ROCs. The light should start blinking in Blue. This indicates the ROC is in binding mode. Login to your app and just wait a few seconds. It should automatically connect both of the ROCs. The app will announce "Red Team Connected" for the first ROC and "Blue Team Connected" for the second ROC.

- **Rename the ROC in the App to match the color you chose.**

You might have chosen specific color combinations when you ordered your ROC. You can rename it in the app to match your choice.

Once ROCs are connected, click "Let's ROC" button from the main menu to Go to the Game screen. From there, click the button at the bottom right to get to ROC settings screen.

Now, press either button on a ROC, the app will announce the default ROC name and the corresponding ROC display in the app will flash green once. Click the color selection dropdown and select the color of the ROC or the team name you would like. Press any button on the ROC to verify that the app is now announcing the name of your choice. Repeat the same for the other ROC.

Click okay when you are done to go back to the app game screen.

- **Connect Your Phone to a Bluetooth Speaker (Screen capture)**

For an enhanced experience, pair your phone to a portable Bluetooth speaker to broadcast ROC's announcements.

- **Starting the Game and Restarting the Game (Overlay Video)**

Once both ROC devices and a Bluetooth speaker are connected, give one ROC to each team. Place the speaker toward the center of the net or next to the net post for best results. Keep your phone at least several feet away from the speaker. Adjust the volume so that you can hear the audio clearly.

To start the game, the serving team presses the ball button on the ROC before the serve. The app will announce the name of the team who is serving.

During the game, simply press the ball button on the ROC whenever your team has won a rally point. The app will announce the score from the speaker.

Press the paddle button on either ROC to have the app recall the current score. Press the paddle button again and the app will announce who is serving from where.

To correct the last point, press both the ball and paddle buttons on either ROC at the same time.

- **Starting the next Game (Screen capture)**

The app will announce Game Over when a team has won. If no correction is needed for the last point, press any button on either ROC to start a new game.

Players for the next game can wear the backup wristbands first. The outgoing players simply take the ROC off from their wristbands and give it to the incoming players, who would then put it in their wristbands.

If you need to start a new game in the middle of the current game, press the "restart" button on the top of the game screen.

- **Change Game Settings**

You can change many settings of the game. Click the settings button at the top of the Game screen, you can change the maximum points, points to win by, whether change ends is needed, and many other system settings. Make your selections and click save to go back to the game screen. The new settings will take effect next game.

- **Tips**

First, try to keep your phone away from metal and magnetic fields which can interfere with the system.

Second, keep your phone away from the speaker to avoid signal interference.

For best results, we recommend placing your Bluetooth speaker at the center or either end of the net.

Please remember to put your phone in Do Not Disturb mode while playing.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Information

Customer service

My account

Follow us

Newsletter

Enter your email here...

SUBSCRIBE

Copyright © 2024 Referee On Court. All rights reserved.