



* Please read the attentions before use.

FAQS:

- After inserting the USB Disk, it cannot be played:**
 - First confirm whether the machine is in USB mode;
 - Please confirm whether the music format is MP3/WAV/WMA/FLAC/APE;
 - Make sure the music files are stored in the root directory, not in a subfolder.
- After inserting the Micro-SD Card, it cannot be played:**
 - First confirm whether the machine is in Micro SD card mode;
 - Please confirm whether the music format is MP3/WAV/WMA/FLAC/APE;
 - You can format the SD card and try again. (SD card, inserted into other machines, will bring some hidden documents and affect compatibility)
- Bluetooth can't be paired:**
 - You can press M button to switch to Bluetooth mode first;
 - Make sure the Bluetooth distance is not too far away, and try to adjust the distance between the karaoke machine and the phone;
 - The karaoke machine already paired with other phones. First turn off Bluetooth of other phones and restart the machine, and try to pair with the phone again.
- There is no sound when connecting to the computer:**

Make sure you have selected the correct computer audio output port.
- The microphone has no sound:**
 - Check for low battery, try to charge the microphone and use it;
 - The speaker and microphone are not connected successfully, you can restart them and turn up microphone volume to try again.
- The machine has no sound or is quiet when playing music:**
 - Check whether the Bluetooth is connected successfully;
 - Long press "+" of the speaker to turn up speaker's volume;
 - Check if the volume down via mic end, if yes, short press the button "power" of the mic to change mode to "music voice" and short press to turn the volume up;
 - Check if the phone volume is turned up.
- There is no response to the buttons or the function is in disorder:**

Try again after shutting down.

Technical Specifications:

Wireless standard: 5.3
 Transmission distance: 10 meters
 Output power: 20 w
 Playing time: 4-6 hours (Volume at power is 70%-80%),
 2-3 Hours (Maximum Volume)
 Frequency effect: 20Hz~20KHZ
 Speaker size: 78mm 20W
 Input power: 5V=1A
 Maximum current consumption: 2A
 Battery type: 2400 mAh
 Power charging interface: TYPE-C charging cable

Features:

- Wireless connection.
- Memory function: breakpoint resuming.
- Support U disk/Micro-SD card/AUX playback mode.
- Built-in lithium-ion battery.
- High-fidelity speakers: the sound is more natural and delicate.
- 1+1 device serial connection function.
- Support MP3/WAV/WMA/FLAC/APE music format.

Directions for Use:

- Wireless pairing:**

Turn on the wireless device and search for the Bluetooth pairing name: "Vigorfun" Connect and pair.
- Play instructions:**
 - Bluetooth search status: the blue light flashes about 0.5 second/time;
 - Bluetooth pairing status: the blue light is always on;
 - Playback status: the blue light flashes slowly for about 1 second/time.
- Charging instructions:**
 - Plug TYPE-C end of the cable into the machine or microphone, another USB end into normal USB charging adaptor/PC Port;
 - Red light is on when charging, off when fully charged.
- Voice prompt:**
 - There is a voice prompt when turning on/off;
 - When the volume is increased to the maximum volume, there is a voice prompt, and the minimum volume has no voice prompt;
 - When 3.4V low battery is detected, it will shut down after prompting 3 times.
- Mode switching:**
 - Bluetooth mode by default after power on;
 - Mode switching sequence: Bluetooth mode, Micro-SD card mode, U disk mode, AUX mode;
 - Post-insertion mode priority.
- Volume requirements:**

The default volume at power-on is 70%.
- Power saving function:**
 - Automatic shutdown within around 15 minutes without working;
 - When the battery power is low, the battery protection will be turned on automatically, please charge for 4 hours before use.
- Please note, keeping the microphone head too close to the speaker may cause sharp and strange sounds due to sound reflection.**

Speaker Button :

- ▶|| Play/Pause
- ⏻ Power
- ⊕ Volume Up / Next Song
- ⊖ Volume Down / Previous Song
- ☀️ / M Light Button / Function Mode Conversion
- 🔌 TYPE-C Charging Port
- TF Slot
- USB Port
- 🔊 AUX Input

Speaker Button Instruction:

- Short press "▶||" for Play/Pause
- Long press "⏻" for power on/off
- Button ⊕ /Single click:
Long press: Volume up / short press: Next song.
- Button ⊖ /Single click:
Long press: Volume down / Short press: previous song.
- Click to switch light mode, double-click to turn off light, and long press to switch function mode.
- TYPE-C Charging Port:
 - Charging cable port, when inserting the TYPE-C charging cable, the device is charged by default.
 - When using the radio function, you need to insert the charging cable as a radio antenna and the radio function can be used normally.
- TF Slot: When inserting a Micro-SD card, the default is Micro-SD card playing mode.
- USB Port: When inserting a USB flash drive, the USB playback mode is set to USB by default.
- AUX Input: You can plug one end of the cable into the output port of your computer or phone.

Microphone Button:

- ⏻ Power
- ⊕ Volume Up / Next Song
- ⊖ Volume Down / Previous Song
- ☀️ Magic Sound Effect
- 🔌 Indicator
- 🔌 TYPE-C Charging Port

Microphone Button Instruction:

- Power: Long press to turn on/off; Short press to switch between different modes (reverb volume/music volume/mic volume).
- Button ⊕/Single click: Short press: Volume up / Long press: next song
- Button ⊖/Single click: Short press: Volume down / Long press: previous song
- Magic sound effect conversion: Short press to switch in 4 kinds of magic voices.
- Indicator: The blue light flashes quickly when the wireless microphone is connected. The blue light remains on when the wireless microphone is successfully connected. The red light remains on when the wireless microphone is charged, goes off when fully charged, and flashes twice every 5 seconds when the battery is low.
- TYPE-C charging port: Plug type-C end of the cable into the mic, another USB end into normal USB charging adaptor/PC Port.

Note: When the microphone is turned on, it defaults to being connected back to the previous device. If the previous device is not found within 10 seconds, a new pairing connection will be entered.

FCC ID: 2BKTQ-VFKAGN01 Model No: VFKAGN-01

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.



* If there are any questions about the use or functions, please don't hesitate to contact us at support@vigorfun.com.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

The device has been evaluatec to meel general RF exposure requirement. The device can be used in porlable exposure condition without restriction.