

产品的问题	解决的方法
Product Problem	The Solution
挖掘机无法启动 Excavator cannot start	1. 电源开关关闭,请打开。
	The power switch is off, please turn it on.
	 电池安装不正确,请检查电池正负极确保电池安装无误 The battery is not installed correctly, please check the positive and negative poles of the bettery to ensure that the battery is installed correctly.
	电池已耗尽,请给电池充电成更换新电池。 The battery is exhausted, please charge the battery or replace with a new battery.
逼控器无法使用 The remote control cannot be used	1. 溫拉器电池已耗尽,请更换新电池。
	The remote control battery is exhausted, please replace it with a new one.
	2. 挖掘机不在遥控器控制范围,请保持在可操控的范围。
	The Excavator is not in the control range of the remote control, please keep it in the controllable range.
	用边有电磁波干扰、请将玩具拿到宽敞的场地使用。 There is electromagnetic interference around, please take the toy to a spacious place for use.

注:周围的电磁波干扰可能造成遥控车故障,可重启遥控车再次进行操作。

lote: The surrounding electromagnetic wave interference may cause the E you can restart the remote control car to operate again.







- 非充电电池不能充电;
 充电电池长能在成人起炉下充电;
 充电电池在东电前应从玩具中取出;
 如何取出放入电池;用螺丝刀松汗螺丝钉,揭开电池盖,按正确极性放如的取出放入电池;用螺丝刀松汗螺丝钉,揭开电池盖,按正确极性放
- 入和取出电池;取出和放入电池应按玩具电池室上的标识进行;
- 只能使用与推荐电池一样或相同的电池;
 不可混用新旧或不同类型的电池;
- 电池应以正确的极性放入; 用尽的电池应从玩具中取出,若长期不使用,请将玩具中电池取出;

损坏时应停止使用, 直至修复完好.

- ・用や密切に超近が以来で本紙は、41×mではm、用やが火火で心思域は; ・电源調子不管理路。 ・不能注解多于推荐数量的电源上; ・US充免线技能受力调音由家大規信。 ・本产品只能使用配送的USB充电线进行充电,不得使用不被推荐的USB充电
- 线, USB充电线不是玩具; USB充电线必须定期检查其电线、插头、外壳和其他部件是否损坏, 发现

- Enhanced batteries are to be removed from the toy. If it is not used for a long time, because take out to the taking in the bigs, or ideal to the control of the contr

安全注意事项 Flight Safety Guidelines

- 本产品含有小零件,请将其置于小孩不能触及的地方,以免发生误食或窒 息危险,禁止3岁以下儿童使用。
 - ories away from kids to avoid accident not suitable for children



将电池的电源接头插入以8克电线,再将U8克电线连接至适配器被者电脑上的以8接口。电池克 电时,红灯常亮、充满电时,红灯熄灭、电池充满电时间的3~4个时。

Insert the power connector of the battery into the USB charging cable, and then connect the USB charging cable in the adaptive or the USB port on the computer. When charging is preceding, the red light keeps sold on when charging is freished, the red light is off. The charging time is about 3-4 hours.




- ♠ 充电前请先检查适配器输入电压与当前使用电压是否一致;
- 充电时,必須在成人监护下进行。充电时必须远离易燃物,充电时要有成年人在一旁看管。
- Please check whether the adapter input voltage is consistent with the current voltage before charging:

The output voltage of the adapter should be consistent with the battery

voltage;

When charging, it must be done under adult supervision;

Keep away from flammable materials when charging, and have an adult

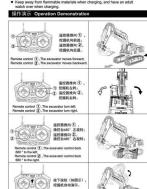





使用完本产品,请用干抹布擦拭表面污迹,避免部件损坏, 延长产品使用寿命。 After using the product, risesse wipe the surface stains with a day cloth to avoid damage to the components and prolong the service life of the product.

电池注意事项 Battery Precautions

 玩具使用电池类型:挖掘机使用1节3.7V可充电电池;遥控器使用2节 1.5V "AA" 非充电电池(需另购);













[4] Battery compartment

电池安装和使用 Battery Installation And Use

1. 選控器电池安装 Remote Control Battery Installation 将遥控器电池盖上的螺丝松开,按照遥控器 指示的正负极, 正确装入2节1.5V "AI" 非充电电池(需另购), 再重新盖上电池盖。

中ア化セルS (用フ/ps) - P東無照上化の版 けり接線は Unscrew counter clockwise to open the battery compartment cover/install 2X1.5°AA' batteries (batteries not included) into the battery compartment accroding to the given polarity, screw clockwise to close the battery

挖掘机×1



- 请勿在公共道路等危险的地方以受、选择安全的地方操作、避免危险。
- to avoid dangerous.

 請勿在桌子或相台写高架处使用本产品,避免高空坠高或重排。

 Don't use this product on slevated places such as tables or counters, and avoid falling or favor lab.
- 请你将本产品效量在阳光重射或增气设备等温度过高的地方,避免回高温 引起变形。甚至被坏。
- Con't place this product in direct nurlight or high temperature places is avoid deformation or even farrage caused by sun exposure and high temperature.
 不要在將天在衛水(第2)故上班景,即之被水东湖。红兔引起城障,若不惟君逝,接那些大种经验水水。如
- NOT pisp on tailty days or relate (truct) piss. Prevent being welfed by water, so as not to cause mathematic, if you accidentally get wet, please use a cloth with good water shootyfor to about the water.

 玩耍时注意不要让手傷、头发、衣服等碰到能子、以及受伤。
- on cernar rox to stuch the wheels with lingers, hair, clothes, etc., is exaid injury.
 他區校车或运校器电池电量不足时,區校车速度会转器减慢,课更换电池或及时免电。

- Fig. exception.

 ii 的磁环接股天线。以免造成损坏。
 Con'l break the remote control antenna to
 ii 指导保养: 用干铁布擦拭表面污染。

注意 NOTE 本款产品的液压杆,履带等容易损坏与股落,如零件损坏或丢失,可向制造 商或投销商购买同盟号的零件,自行进行更换安装,确保产品的结构完整。 请勿使用不同型号或不同品牌的零件进行安装,以确保产品的结构安全。

The hydraulic rods and crawlers of this product are easy to damage and fall off. If the parts are damaged or lost, you can purchase the same model parts from the

To the other control of the ot

This device complies with Part 15 of the ECC Rules. Operation is subject to the following two

Changes or modifications to this unit not expressly approved by the party responsible fo

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limbs are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no instructions, may case harmful interference to radio communications. However, there is no guarantee that inference will not occur a particular installation. If the equipment does cases harmful interference to radio or talevision reception, which can be determined by turning the equipment of and on, the sure is consultaged to try to correct the interference by one or more of the following measures:

— Resonant or robotate the receiving antenna.

- notconent or relocate the recovering internal.
 norcease the separation between the equipment and receiver.
 Connect the equipment into an outlet on a circuit different from that to which the receiver is
- Consult the dealer or an experienced radio/TV technician for help

compliance could void the user's authority to operate the equipment.

Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement in portable exposure