

Selfie stick user manual.



 
1. Take out the wireless remote control and turn the switch to ON to unlock. The LED indicator light flashes, indicating that the wireless Bluetooth of the selfie stick is turned on.

2. Turn on the Bluetooth of your phone to find or search the Bluetooth Selfie, and pair it with this Bluetooth connection. After the connection is successful, the LED light will stop flashing. After turning on the phone's camera, you can take a selfie. Every time you take a picture, the LED indicator light will flash once.


3. Turn the switch of the wireless remote control to OFF. If the LED indicator light does not flash, turn off the wireless remote control.

Battery replacement manual


1. Loosen the screws and open the battery cover

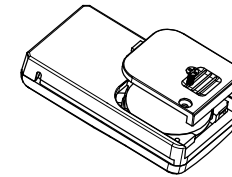

 2. Remove the original battery and replace it with a new one

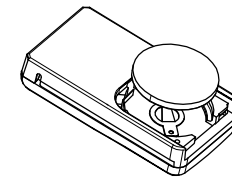

 3. Close the battery cover and lock the screws

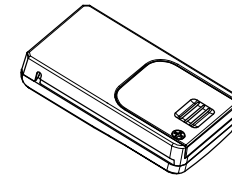

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.