



## Product Instruction Manual

 
(Please read in detail before using the product)

### Product Parameters


Product Name: Karaoke Machine  
 Product Model: S16  
 Product Size: 260mm\*100mm\*170mm  
 Net Weight: 2.0kg  
 Nominal Speaker Power: 20w  
 Signal-To-Noise Ratio: >80db  
 Bluetooth Module: 5.0 + Edr  
 Bluetooth Transmission Distance: ≥10 M  
 Battery Specification: Built-in 4000mah Li-ion Battery  
 Input Voltage/Current: DC 5V/1A  
 Charging Time: 2-3 Hours  
 Usage Time: 6~8h (Music Mode)

### Packing List


Karaoke Machine With Handheld Belt \*1  
 Wireless Microphone \*2  
 Type-C Charging Cable \*1  
 3.5mm Audio Cable \*1  
 User Manual \*1

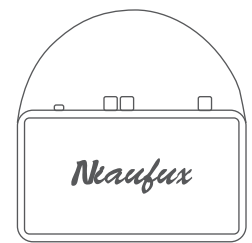

Karaoke Machine

 

Type-C Charging Cable

 

3.5mm Audio Cable




User Manual



Wireless Microphone

### Product Parameters

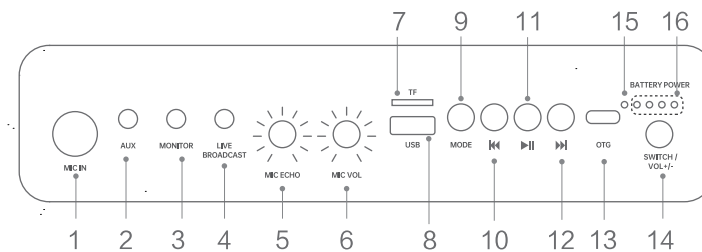 

- 1, MIC Interface: The wired dynamic microphone or condenser microphone into the 6.5mm MIC interface, can be used directly.
- 2, AUX Interface: Use the included 3.5mm audio cable to connect the phone or computer audio interface, you can play audio, such as background music.
- 3, MONITOR Interface: Headphones connected to the monitor interface, the user can hear the audio played through the headphones, while the speaker does not sound; unplug the headphones, the speaker will automatically sound.
- 4, Live Broadcast Interface: Use a microphone-compatible 3.5mm audio cable, plug one end into the live broadcast interface and the other end into your cell phone to use your cell phone for live broadcasting or recording. It is recommended to use Bluetooth mode or AUX mode to play background music when using live streaming. Tip: The microphone-compatible 3.5mm audio cable needs to be purchased separately.
- 5, MIC ECHO Knob: Clockwise rotation knob, microphone echo volume from small to large.
- 6, MIC VOL Knob: Clockwise rotary knob, microphone volume from small to large. It is recommended that the microphone volume should not be adjusted to the maximum use (80% volume is the best).
- 7, TF Interface: Support TF card songs playback.
- 8, USB Interface: Support for U disk songs playback.
- 9, MODE Button: Click the button once to switch the music input mode between Bluetooth mode, AUX mode, USB flash disk mode, or TF card mode; Double click the button to switch between indoor mode and outdoor mode, the karaoke machine in outdoor mode has louder volume.
- 10, "⏮": Play the previous song.
- 11, "⏸": Short press to enter playback/pause state; long press to turn on/off the internal playback of the operating system.
- 12, "⏭": Play the next song.
- 13, DC 5V Charging Port: When the voice prompt indicates that the speaker power is low, you can use the included Type-C charging cable to charge the device. You can also use the OTG data cable to connect directly to your mobile phone for live broadcasting or recording songs.
- 14, Switch/VOL +/- Knob: Clockwise rotation knob, you can open the device, or, increase the volume of the speaker playback. Counterclockwise rotation knob, you can decrease the volume of the speaker playback, turn off the device when rotated to the limit position.
- 15, Bluetooth Indicator: When Bluetooth is successfully connected, the indicator light flashes; when Bluetooth is disconnected, the indicator light is constant blue.
- 16, Power Indicator: When the device is turned on, the number of luminous indicator light indicates the remaining battery power. When the device power is low, it will issue a voice prompt of low power of the device, and the user can charge in time.

### Instructions for Use:

- Step 1:** Turn on the Karaoke Machine by turning the switch knob clockwise, and you will hear "Music Mode" prompt.
  - Step 2:** Connect the Karaoke Machine via Bluetooth/AUX/TF card/U disk and play. Using Bluetooth Mode as an example, open the Bluetooth on your phone, find the Bluetooth name "Niaufux" and click to connect. You can then play music or accompaniment through any music app on your phone (**Apple Music, Spotify, YouTube**).
  - Step 3:** Take out and long press the microphone button, the microphone will automatically connect to the Karaoke Machine wirelessly after the microphone is turned on, then you can start singing.
- Note: Don't forget to turn the Switch Knob counterclockwise and turn off the karaoke machine after use.**

### Warranty

Thanks for choosing our product! This karaoke machine sports a retro look and comes with two wireless microphones, perfect for gatherings with family and friends. Continuously enhanced, the high-quality stereo speakers deliver an immersive audio experience.

Equipped with the latest Bluetooth 5.0 wireless streaming chip, it ensures instant pairing, stable transmission, and extended range. Moreover, this karaoke machine supports Micro TF card, flash USB, and AUX input connections, making it ideal for parties, family karaoke, weddings, and both indoor and outdoor events.

As we all know, no product is perfect. However, we are confident in our products and we are committed to providing an after-sales service that exceeds your expectations! If you encounter any problems or are dissatisfied during the purchase process, please contact us before returning.

Email: [Karaokemservice@outlook.com](mailto:Karaokemservice@outlook.com)  
 Phone: 1-516-518-4787

### Things to Note

- 1, Always use the correct charging method. We recommend using the provided Type-C charging cable for the initial charge. Avoid using fast charging cables, as they may prevent the battery from charging properly.
- 2, Charge the device promptly when the battery is low. Avoid waiting until the battery is completely drained before recharging, as this may prevent the battery from charging.
- 3, This device features a built-in rechargeable battery. To ensure battery safety, please do not disassemble or attempt to replace the battery yourself. Keep the device away from heat sources and prolonged exposure to sunlight. Avoid subjecting the device to hard impacts.

### FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

