

12 cm

15 cm

蓝牙连接

1.拨动唱臂开关 ①,按压模式按钮,模式指示灯蓝色闪烁。
打开手机蓝牙搜索: **ML520**, 并选择配对连接, 配对成功后即可。

播放CD

1.放入CD碟片,确认正确卡在机芯上。
2.拨动唱臂开关 ①,默认为CD模式 ④,指示灯亮红色。
此时碟片开始转动进入读碟状态,读取数据约5秒后开始播放。
3.可通过面板旋钮或遥控器完成音量调节、暂停播放等功能调节。

U盘播放

 
按M键 ④,模式指示灯亮蓝色,插入U盘,自动播放U盘内容。
*注意:音频文件不可放在文件夹内,建议使用MP3格式音乐。

音频输入

按压模式 ④ 指示灯亮蓝色,将 3.5mm 音频线插入背面音频输入 ⑦ 接口,可以给电脑等设备当音箱使用。(音频线需要自备或者购买),如需转换为其他模式,需拔出音频输入线。

音频输出

本机支持连接有源音箱或者功放。
1.连接有源音响: 3.5mm音频线插入背面音频输出接口。
(音频线需要自备或者购买)
2.接驳耳机:将耳机插头插入

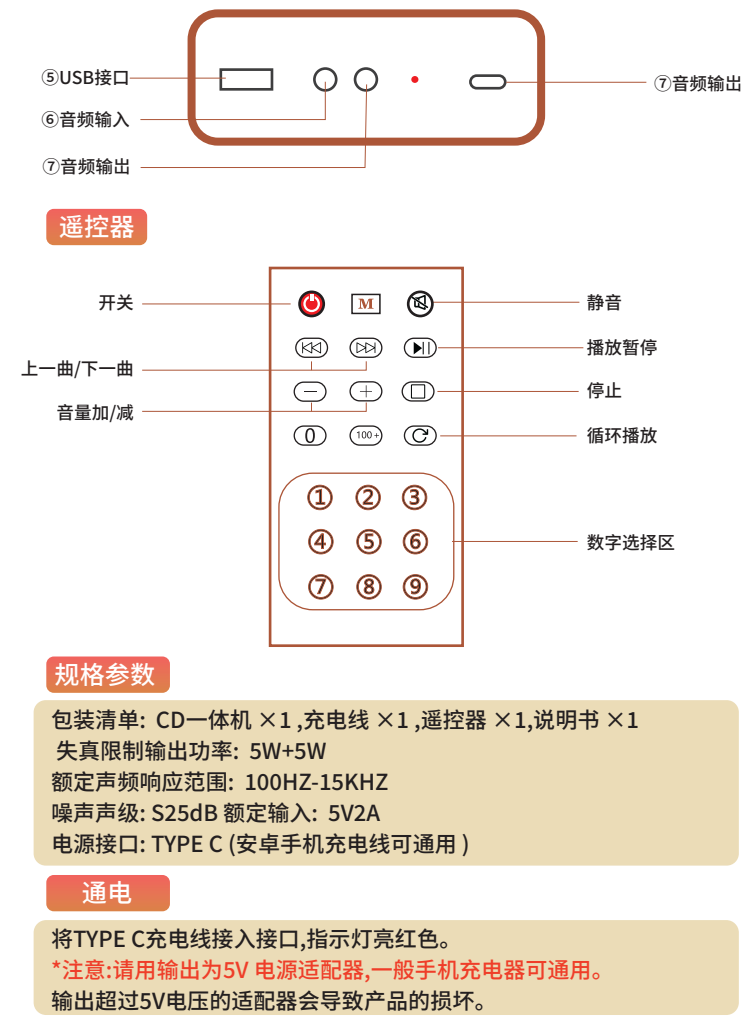


安全提示

- *切勿用手触摸和直视激光头,以避免损坏设备和损伤视力。
- *切勿在阳光下暴晒或在高温、散热器等发热物体旁安装使用。
- *远离浴室、游泳池等环境。切勿在有水、潮湿的环境中使用。
- *为了环保及安全,长时间不使用时,请拔下电源适配器。
- *适配器限定输出电压为5V,使用错误参数的适配器会导致损坏
- *产品请放置幼儿不可接触位置。
- *产品包装和塑胶袋请妥善处理放置。
- *不可幼儿接触玩耍以免窒息或伤害

故障排除

 本机出现故障时,请确认以下内容 1.遥控器无法作用
未取出遥控器电池绝缘片/遥控器电池没电/遥控器未对准主机遥控信号感应位置/遥控器与主机的使用距离超过6米。
2. CD碟片无法播放
碟片装入主机时未将标签面朝上/碟片有污垢或划痕 非标准光碟,光碟种类错误或文件格式错误

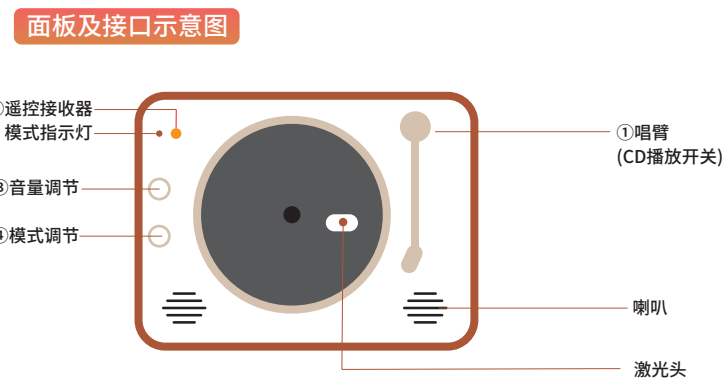

保修卡

产品名称: _____ 型号: _____
销售单位: _____ 销售日期: _____

姓名: _____ 电话: _____
地址及邮编: _____
(以上信息由使用者填写)

故障描述1: _____
处理方案1: _____
故障描述2: _____
处理方案2: _____

用户手册

CD蓝牙一体式播放器.CD PLAYER



12 cm

15 cm

USB playback

Press the M key ④, the mode indicator lights up blue, insert the USB, and the USB content will be played automatically.
*Note: Audio files cannot be placed in folders. It is recommended to use MP3 format music.

Audio Input

Press the mode ④ indicator to light up blue, insert the 3.5mm audio cable into the audio input ⑦ port on the back, and use it as a speaker for a computer or other device. (You need to prepare or purchase the audio cable yourself) If you need to switch to other modes, you need to unplug the audio input cable.

Audio output

This machine supports connecting to active speakers or amplifiers.
1. Connect active speakers: Plug the 3.5mm audio cable into the audio output port on the back. (You need to prepare or purchase the audio cable yourself)
2. Connecting headphones: insert the headphone plug

Specification parameters

Packing list: CD player × 1, charging cable × 1, remote control × 1, manual × 1
Distortion-limited output power: 5W+5W
Rated audio frequency response range: 100HZ-15KHZ
Noise level: S25dB Rated input: 5V2A
Power interface: TYPE C (can be used with Android phone charging cables)

Power ups

 
Connect the TYPE C charging cable to the port, and the indicator light will turn red.
*Note: Please use a power adapter with 5V output, which can be used with general mobile phone chargers.
Adapters with an output voltage exceeding 5V will cause damage to the product.

Bluetooth connection

1. Toggle the tonearm switch ①, press the mode button, and the mode indicator light flashes blue. Turn on the Bluetooth of your phone and search: **ML520**, and select pairing connection. Once the pairing is successful, it is done.

Play CD

1. Insert the CD and make sure it is properly inserted into the movement. 2. Toggle the tonearm switch ①, the default is CD mode ④, and the indicator light is red. At this time, the disc starts to rotate and enters the disc reading state. It starts to play after reading the data for about 5 seconds. 3. You can adjust the volume, pause the playback, and other functions through the panel knob or remote control.

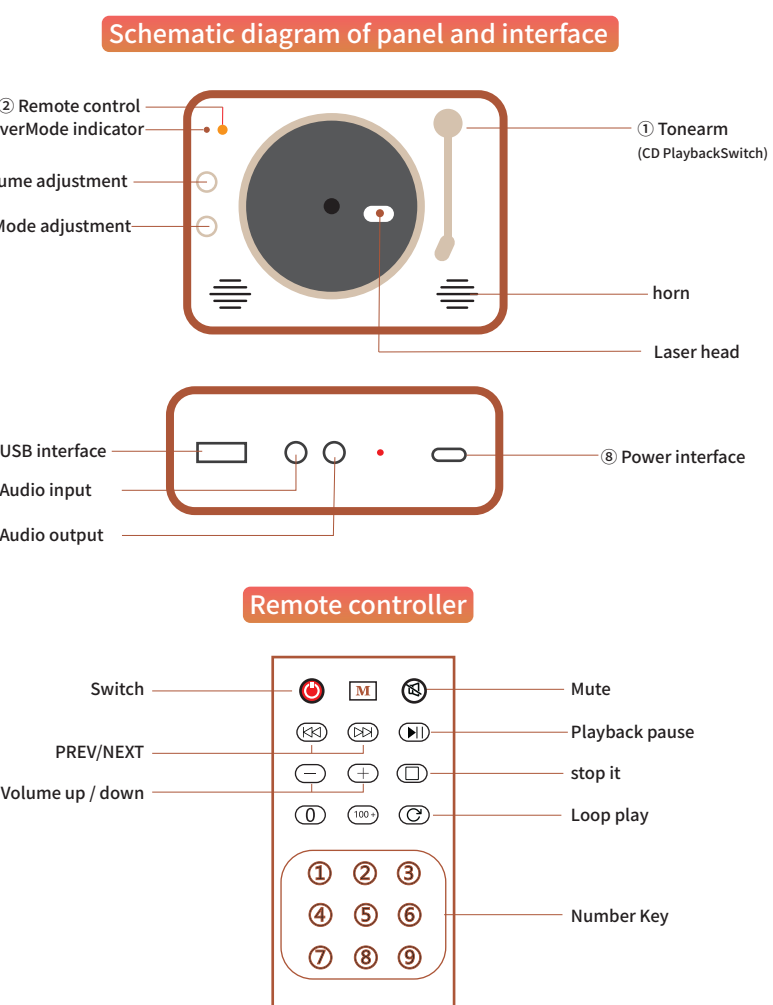

Safety tips

- *Do not touch or look directly at the laser head with your hands to avoid damaging the device and vision.
- *Do not install and use it in the sun or near high temperature, radiators and other heating objects. *Keep away from bathrooms, swimming pools and other environments. Do not use it in water or humid environments.
- *For environmental protection and safety, please unplug the power adapter when not in use for a long time.
- *The output voltage of the adapter is limited to 5V. Using an adapter with wrong parameters will cause damage
- *Please place the product out of reach of children.
- *Please properly dispose of the product packaging and plastic bags.
- *Do not allow children to touch or play with it to avoid suffocation or injury

Troubleshooting

When the unit fails, please confirm the following:

- The remote control does not work
The remote control battery insulation sheet is not removed/ the remote control battery is dead/the remote control is not aimed at the host remote control signal sensing position/the use distance between the remote control and the host exceeds 6 meters.
- The CD disc cannot be played
The disc is not loaded into the host with the label facing up/ the disc is dirty or scratched Non-standard disc, wrong phosphor type or wrong file format

Warranty certificate

Product name: _____ Model: _____
Sales unit: _____ Sales date: _____

Name: _____ Tel: _____
Address and zip code: _____
(The above information is filled in by the user)

Fault description 1: _____
Solution 1: _____
Fault description 2: _____
Solution 2: _____

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures

:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.