


材质: 105克双铜纸
双面印刷 折页
尺寸: 55*90mm

正面

 


Edizard Power Bank User Guide

Model: EZ810201

Product Overview and Introduction: Component Introduction


1. USB-C Input/Output: Two-way charging.
2. Power Switch: Smart Touch On/Off and activates charging.
3. Power Indicator: Shows battery level and status.
4. Magnetic Wireless Output: Charges Qi compatible devices.
5. Foldable Stand: Hold your phone while using.

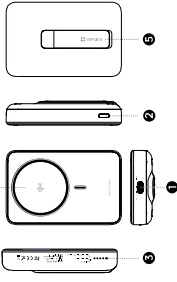

How To Use

This product features a USB-C port with two-way charging capability & 15W magnetic Qi2 wireless charging.

 1. **Charge by power supply:**
Plug the included USB-C cable into the power adapter to charge the power bank (see Figure 1).
2. **Charge by USB-C devices:**
You can also use your own USB-C device like laptop to charge the power bank (see Figure 2).

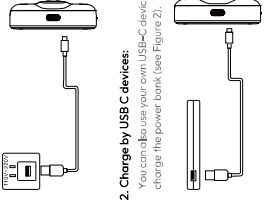

Specifications

Model	EZ810201
Total Capacity	10000mAh
Dimensions	102mm*45mm*21.3mm
Weight	7.76 oz/220g
Input	USB-C: 5V*3A / 9V*2A / 18W Max
Output	USB-C Output: 5V*3A / 9V*2.2A / 12V*1.67A 20W Max

Charge / Discharge Display

Charging Display

Displays the battery level when charging the power bank using an external power supply.

1. The 4 LED indicator lights show the battery level.
2. The full light indicator flashes while charging.
3. Once fully charged, 4 LED indicators light up and a small current continues to maintain the charge.

Discharge Display

Shows the battery level when the power bank is charging devices like mobile phones and tablets.

When the battery level is between 100% and 75%, four indicator lights remain on. When the battery levels are between 75% and 50% three indicator lights remain on. When the battery levels are between 50% and 25%, two indicator lights remain on. When the battery level is between 25% and 15%, one indicator light remains on. The indicator light is always on and the battery is low. The bar light flashes quickly when the battery is fully discharged.

Wireless charging description:

Click the button of power bank, the indicator will flash for 3 times, put your mobile phone in the center of the power bank to start wireless charging. And then the wireless charging indicator will turn on during charging. The maximum wireless output is 15W, compatible with 5W/7.5W & 10W.

Discharge Instructions

When the power bank is in standby mode and a device is connected to its output port, follow these steps for effective discharge:

1. **Automatic Activation:**
The power bank automatically detects the connected device and begins outputting voltage to charge it. For some devices, that do not automatically start charging, press the power button on the power bank to initiate charging.
2. **Battery Level Display:**
The display light shows the current battery level of the power bank. It enters normal discharge mode once active.

Important Notices

1. **Initial Charging:**
The power bank has a low battery upon leaving the factory. Please charge it fully before first use.
2. **Regular Maintenance:**
If not in use for extended periods, charge the power bank at least once every three months to maintain battery health.
3. **Avoid Overcharging:**
To prevent damage from prolonged charging, unplug the power bank when the charging indicator light remains on for an extended period.
4. **Usage Guidelines:**
Place the power bank on a stable surface during use. Limit direct contact with the human body to less than 10 seconds if necessary.
5. **Low Battery Warning:**
During device charging, if the power bank indicates low battery, recharge it promptly to avoid interruption.

3. Charging Completion:

When the connected device (phone or tablet) is fully charged or disconnected, the indicator light will turn off for approximately 30 ± 5 seconds.

4. Power Saving Mode:

If no device is using electricity for 10 ± 5 seconds, the power bank's output will turn off and enter power-saving mode.

5. Pulse Electricity Usage:

During operation, if the connected device uses electricity intermittently (with pulses), the power bank adjusts its output accordingly, with intervals of no more than 15 seconds.

6. Instant Charging:

Devices like mobile phones or tablets can be powered on instantly without needing to press any button on the power bank. The current battery level is displayed in real-time during this process.

Common Issues and Resolutions

The Device is Not Functioning After Being Charged

1. **Low Battery:**
Recharge the power bank as the battery level might be too low.
2. **Voltage Incompatibility:**
Verify that the device's voltage is compatible with the power bank's output.
3. **Incorrect Connection:**
Ensure the device is properly connected to the power bank.
4. **Damaged Cable/Adapter:**
Replace any damaged charging cables or adapters.
5. **Short Circuit Protection:**
Incorrectly connecting output and input terminals can trigger short circuit protection. Disconnect and reconnect to an AC charger or USB to reset.

6. Cleaning Instructions:

Keep the power bank clean and dry. Avoid using chemicals, soap, or a damp cloth for cleaning.

7. Storage Recommendations:

Store the power bank in a dry environment away from moisture and corrosive materials to maintain its longevity.

8. Safety Precautions:

Stop using the power bank immediately if it expands or leaks.

9. Child Safety:

Ensure children do not use the power bank as a toy to prevent accidents.

10. Handling Leaks:

In case of battery leakage, avoid direct contact with skin or eyes. Rinse affected areas thoroughly with water and seek medical attention promptly.

11. Proper Disposal:

Dispose of the power bank in accordance with local environmental regulations to minimize impact on the environment.

ASIA PACIFIC

E-mail: Info@edizard.com
Address: Room A31, 13th Floor, Building A, Vovelsky, Dashi 1st Road, Xili Street Nanshan District, Shenzhen City, China, 518055

MANUFACTURER

Golden Triangle Group Ltd
Address: 4F, No.5 Building, Qingfeng Technology Park, Shouy Community, Shajing Town, Baoan District, Shenzhen, Guangdong Province, China

Charge / Discharge Display

Charging Display

Displays the battery level when charging the power bank using an external power supply.

1. The 4 LED indicator lights show the battery level.
2. The full light indicator flashes while charging.
3. Once fully charged, 4 LED indicators light up and a small current continues to maintain the charge.

Discharge Display

Shows the battery level when the power bank is charging devices like mobile phones and tablets.

When the battery level is between 100% and 75%, four indicator lights remain on. When the battery levels are between 75% and 50% three indicator lights remain on. When the battery levels are between 50% and 25%, two indicator lights remain on. When the battery level is between 25% and 15%, one indicator light remains on. The indicator light is always on and the battery is low. The bar light flashes quickly when the battery is fully discharged.

ASIA PACIFIC

E-mail: Info@edizard.com
Address: Room A31, 13th Floor, Building A, Vovelsky, Dashi 1st Road, Xili Street Nanshan District, Shenzhen, Guangdong Province, China

MANUFACTURER

Golden Triangle Group Ltd
Address: 4F, No.5 Building, Qingfeng Technology Park, Shouy Community, Shajing Town, Baoan District, Shenzhen, Guangdong Province, China

6. Cleaning Instructions:

Keep the power bank clean and dry. Avoid using chemicals, soap, or a damp cloth for cleaning.

7. Storage Recommendations:

Store the power bank in a dry environment away from moisture and corrosive materials to maintain its longevity.

8. Safety Precautions:

Stop using the power bank immediately if it expands or leaks.

9. Child Safety:

Ensure children do not use the power bank as a toy to prevent accidents.

10. Handling Leaks:

In case of battery leakage, avoid direct contact with skin or eyes. Rinse affected areas thoroughly with water and seek medical attention promptly.

11. Proper Disposal:

Dispose of the power bank in accordance with local environmental regulations to minimize impact on the environment.

ASIA PACIFIC

E-mail: Info@edizard.com
Address: Room A31, 13th Floor, Building A, Vovelsky, Dashi 1st Road, Xili Street Nanshan District, Shenzhen, Guangdong Province, China

MANUFACTURER

Golden Triangle Group Ltd
Address: 4F, No.5 Building, Qingfeng Technology Park, Shouy Community, Shajing Town, Baoan District, Shenzhen, Guangdong Province, China

3. Charging Completion:

When the connected device (phone or tablet) is fully charged or disconnected, the indicator light will turn off for approximately 30 ± 5 seconds.

4. Power Saving Mode:

If no device is using electricity for 10 ± 5 seconds, the power bank's output will turn off and enter power-saving mode.

5. Pulse Electricity Usage:

During operation, if the connected device uses electricity intermittently (with pulses), the power bank adjusts its output accordingly, with intervals of no more than 15 seconds.

6. Instant Charging:

Devices like mobile phones or tablets can be powered on instantly without needing to press any button on the power bank. The current battery level is displayed in real-time during this process.

Common Issues and Resolutions

The Device is Not Functioning After Being Charged

1. **Low Battery:**
Recharge the power bank as the battery level might be too low.
2. **Voltage Incompatibility:**
Verify that the device's voltage is compatible with the power bank's output.
3. **Incorrect Connection:**
Ensure the device is properly connected to the power bank.
4. **Damaged Cable/Adapter:**
Replace any damaged charging cables or adapters.
5. **Short Circuit Protection:**
Incorrectly connecting output and input terminals can trigger short circuit protection. Disconnect and reconnect to an AC charger or USB to reset.

Wireless charging description:

Click the button of power bank, the indicator will flash for 3 times, put your mobile phone in the center of the power bank to start wireless charging. And then the wireless charging indicator will turn on during charging. The maximum wireless output is 15W, compatible with 5W/7.5W & 10W.

Discharge Instructions

When the power bank is in standby mode and a device is connected to its output port, follow these steps for effective discharge:

1. **Automatic Activation:**
The power bank automatically detects the connected device and begins outputting voltage to charge it. For some devices, that do not automatically start charging, press the power button on the power bank to initiate charging.
2. **Battery Level Display:**
The display light shows the current battery level of the power bank. It enters normal discharge mode once active.

ASIA PACIFIC

E-mail: Info@edizard.com
Address: Room A31, 13th Floor, Building A, Vovelsky, Dashi 1st Road, Xili Street Nanshan District, Shenzhen, Guangdong Province, China

 
MANUFACTURER

Golden Triangle Group Ltd
Address: 4F, No.5 Building, Qingfeng Technology Park, Shouy Community, Shajing Town, Baoan District, Shenzhen, Guangdong Province, China

How To Use

This product features a USB-C port with two-way charging capability & 15W magnetic Qi2 wireless charging.

1. **Charge by power supply:**
Plug the included USB-C cable into the power adapter to charge the power bank (see Figure 1).
2. **Charge by USB-C devices:**
You can also use your own USB-C device like laptop to charge the power bank (see Figure 2).

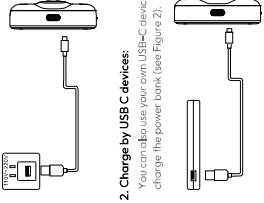

Specifications


Model	EZ810201
Total Capacity	10000mAh
Dimensions	102mm*45mm*21.3mm
Weight	7.76 oz/220g
Input	USB-C: 5V*3A / 9V*2A / 18W Max
Output	USB-C Output: 5V*3A / 9V*2.2A / 12V*1.67A 20W Max

Important Notices

1. **Initial Charging:**
The power bank has a low battery upon leaving the factory. Please charge it fully before first use.
2. **Regular Maintenance:**
If not in use for extended periods, charge the power bank at least once every three months to maintain battery health.
3. **Avoid Overcharging:**
To prevent damage from prolonged charging, unplug the power bank when the charging indicator light remains on for an extended period.
4. **Usage Guidelines:**
Place the power bank on a stable surface during use. Limit direct contact with the human body to less than 10 seconds if necessary.
5. **Low Battery Warning:**
During device charging, if the power bank indicates low battery, recharge it promptly to avoid interruption.

Product Overview and Introduction: Component Introduction

 
1. USB-C Input/Output: Two-way charging.
2. Power Switch: Smart Touch On/Off and activates charging.
3. Power Indicator: Shows battery level and status.
4. Magnetic Wireless Output: Charges Qi compatible devices.
5. Foldable Stand: Hold your phone while using.

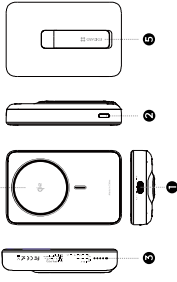

How To Use

This product features a USB-C port with two-way charging capability & 15W magnetic Qi2 wireless charging.

 1. **Charge by power supply:**
Plug the included USB-C cable into the power adapter to charge the power bank (see Figure 1).
2. **Charge by USB-C devices:**
You can also use your own USB-C device like laptop to charge the power bank (see Figure 2).

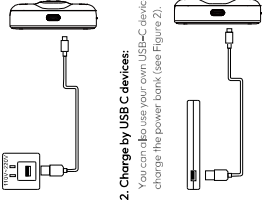

Specifications

Model	EZ810201
Total Capacity	10000mAh
Dimensions	102mm*45mm*21.3mm
Weight	7.76 oz/220g
Input	USB-C: 5V*3A / 9V*2A / 18W Max
Output	USB-C Output: 5V*3A / 9V*2.2A / 12V*1.67A 20W Max

Important Notices

1. **Initial Charging:**
The power bank has a low battery upon leaving the factory. Please charge it fully before first use.
2. **Regular Maintenance:**
If not in use for extended periods, charge the power bank at least once every three months to maintain battery health.
3. **Avoid Overcharging:**
To prevent damage from prolonged charging, unplug the power bank when the charging indicator light remains on for an extended period.
4. **Usage Guidelines:**
Place the power bank on a stable surface during use. Limit direct contact with the human body to less than 10 seconds if necessary.
5. **Low Battery Warning:**
During device charging, if the power bank indicates low battery, recharge it promptly to avoid interruption.

Wireless charging description:

Click the button of power bank, the indicator will flash for 3 times, put your mobile phone in the center of the power bank to start wireless charging. And then the wireless charging indicator will turn on during charging. The maximum wireless output is 15W, compatible with 5W/7.5W & 10W.

Discharge Instructions

When the power bank is in standby mode and a device is connected to its output port, follow these steps for effective discharge:

1. **Automatic Activation:**
The power bank automatically detects the connected device and begins outputting voltage to charge it. For some devices, that do not automatically start charging, press the power button on the power bank to initiate charging.
2. **Battery Level Display:**
The display light shows the current battery level of the power bank. It enters normal discharge mode once active.

ASIA PACIFIC

E-mail: Info@edizard.com
Address: Room A31, 13th Floor, Building A, Vovelsky, Dashi 1st Road, Xili Street Nanshan District, Shenzhen, Guangdong Province, China

 
MANUFACTURER

Golden Triangle Group Ltd
Address: 4F, No.5 Building, Qingfeng Technology Park, Shouy Community, Shajing Town, Baoan District, Shenzhen, Guangdong Province, China

How To Use

This product features a USB-C port with two-way charging capability & 15W magnetic Qi2 wireless charging.

1. **Charge by power supply:**
Plug the included USB-C cable into the power adapter to charge the power bank (see Figure 1).
2. **Charge by USB-C devices:**
You can also use your own USB-C device like laptop to charge the power bank (see Figure 2).

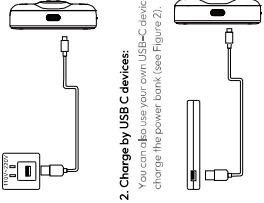

Specifications

Model	EZ810201
Total Capacity	10000mAh
Dimensions	102mm*45mm*21.3mm
Weight	7.76 oz/220g
Input	USB-C: 5V*3A / 9V*2A / 18W Max
Output	USB-C Output: 5V*3A / 9V*2.2A / 12V*1.67A 20W Max

Important Notices

1. **Initial Charging:**
The power bank has a low battery upon leaving the factory. Please charge it fully before first use.
2. **Regular Maintenance:**
If not in use for extended periods, charge the power bank at least once every three months to maintain battery health.
3. **Avoid Overcharging:**
To prevent damage from prolonged charging, unplug the power bank when the charging indicator light remains on for an extended period.
4. **Usage Guidelines:**
Place the power bank on a stable surface during use. Limit direct contact with the human body to less than 10 seconds if necessary.
5. **Low Battery Warning:**
During device charging, if the power bank indicates low battery, recharge it promptly to avoid interruption.

Wireless charging description:

Click the button of power bank, the indicator will flash for 3 times, put your mobile phone in the center of the power bank to start wireless charging. And then the wireless charging indicator will turn on during charging. The maximum wireless output is 15W, compatible with 5W/7.5W & 10W.

Discharge Instructions

When the power bank is in standby mode and a device is connected to its output port, follow these steps for effective discharge:

1. **Automatic Activation:**
The power bank automatically detects the connected device and begins outputting voltage to charge it. For some devices, that do not automatically start charging, press the power button on the power bank to initiate charging.
2. **Battery Level Display:**
The display light shows the current battery level of the power bank. It enters normal discharge mode once active.

ASIA PACIFIC

E-mail: Info@edizard.com
Address: Room A31, 13th Floor, Building A, Vovelsky, Dashi 1st Road, Xili Street Nanshan District, Shenzhen, Guangdong Province, China

 
MANUFACTURER

Golden Triangle Group Ltd
Address: 4F, No.5 Building, Qingfeng Technology Park, Shouy Community, Shajing Town, Baoan District, Shenzhen, Guangdong Province, China

How To Use

This product features a USB-C port with two-way charging capability & 15W magnetic Qi2 wireless charging.

1. **Charge by power supply:**
Plug the included USB-C cable into the power adapter to charge the power bank (see Figure 1).
2. **Charge by USB-C devices:**
You can also use your own USB-C device like laptop to charge the power bank (see Figure 2).

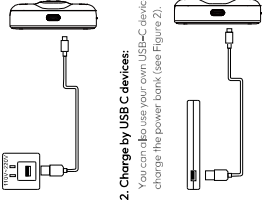

Specifications

Model	EZ810201
Total Capacity	10000mAh
Dimensions	102mm*45mm*21.3mm
Weight	7.76 oz/220g
Input	USB-C: 5V*3A / 9V*2A / 18W Max
Output	USB-C Output: 5V*3A / 9V*2.2A / 12V*1.67A 20W Max

Important Notices

1. **Initial Charging:**
The power bank has a low battery upon leaving the factory. Please charge it fully before first use.
2. **Regular Maintenance:**
If not in use for extended periods, charge the power bank at least once every three months to maintain battery health.
3. **Avoid Overcharging:**
To prevent damage from prolonged charging, unplug the power bank when the charging indicator light remains on for an extended period.
4. **Usage Guidelines:**
Place the power bank on a stable surface during use. Limit direct contact with the human body to less than 10 seconds if necessary.
5. **Low Battery Warning:**
During device charging, if the power bank indicates low battery, recharge it promptly to avoid interruption.

Wireless charging description:

Click the button of power bank, the indicator will flash for 3 times, put your mobile phone in the center of the power bank to start wireless charging. And then the wireless charging indicator will turn on during charging. The maximum wireless output is 15W, compatible with 5W/7.5W & 10W.

Discharge Instructions

When the power bank is in standby mode and a device is connected to its output port, follow these steps for effective discharge:

1. **Automatic Activation:**
The power bank automatically detects the connected device and begins outputting voltage to charge it. For some devices, that do not automatically start charging, press the power button on the power bank to initiate charging.
2. **Battery Level Display:**
The display light shows the current battery level of the power bank. It enters normal discharge mode once active.

ASIA PACIFIC

E-mail: Info@edizard.com
Address: Room A31, 13th Floor, Building A, Vovelsky, Dashi 1st Road, Xili Street Nanshan District, Shenzhen, Guangdong Province, China

 
MANUFACTURER

Golden Triangle Group Ltd
Address: 4F, No.5 Building, Qingfeng Technology Park, Shouy Community, Shajing Town, Baoan District, Shenzhen, Guangdong Province, China

How To Use

This product features a USB-C port with two-way charging capability & 15W magnetic Qi2 wireless charging.

1. **Charge by power supply:**
Plug the included USB-C cable into the power adapter to charge the power bank (see Figure 1).
2. **Charge by USB-C devices:**
You can also use your own USB-C device like laptop to charge the power bank (see Figure 2).

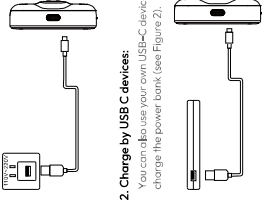

Specifications

Model	EZ810201
Total Capacity	10000mAh
Dimensions	102mm*45mm*21.3mm
Weight	7.76 oz/220g
Input	USB-C: 5V*3A / 9V*2A / 18W Max
Output	USB-C Output: 5V*3A / 9V*2.2A / 12V*1.67A 20W Max

Important Notices

1. **Initial Charging:**
The power bank has a low battery upon leaving the factory. Please charge it fully before first use.
2. **Regular Maintenance:**
If not in use for extended periods, charge the power bank at least once every three months to maintain battery health.
3. **Avoid Overcharging:**
To prevent damage from prolonged charging, unplug the power bank when the charging indicator light remains on for an extended period.
4. **Usage Guidelines:**
Place the power bank on a stable surface during use. Limit direct contact with the human body to less than 10 seconds if necessary.
5. **Low Battery Warning:**
During device charging, if the power bank indicates low battery, recharge it promptly to avoid interruption.

Wireless charging description:

Click the button of power bank, the indicator will flash for 3 times, put your mobile phone in the center of the power bank to start wireless charging. And then the wireless charging indicator will turn on during charging. The maximum wireless output is 15W, compatible with 5W/7.5W & 10W.

Discharge Instructions

When the power bank is in standby mode and a device is connected to its output port, follow these steps for effective discharge:

1. **Automatic Activation:**
The power bank automatically detects the connected device and begins outputting voltage to charge it. For some devices, that do not automatically start charging, press the power button on the power bank to initiate charging.
2. **Battery Level Display:**
The display light shows the current battery level of the power bank. It enters normal discharge mode once active.

ASIA PACIFIC

E-mail: Info@edizard.com
Address: Room A31, 13th Floor, Building A, Vovelsky, Dashi 1st Road, Xili Street Nanshan District, Shenzhen, Guangdong Province, China

 
MANUFACTURER

Golden Triangle Group Ltd
Address: 4F, No.5 Building, Qingfeng Technology Park, Shouy Community, Shajing Town, Baoan District, Shenzhen, Guangdong Province, China

How To Use

This product features a USB-C port with two-way charging capability & 15W magnetic Qi2 wireless charging.

1. **Charge by power supply:**
Plug the included USB-C cable into the power adapter to charge the power bank (see Figure 1).
2. **Charge by USB-C devices:**
You can also use your own USB-C device like laptop to charge the power bank (see Figure 2).

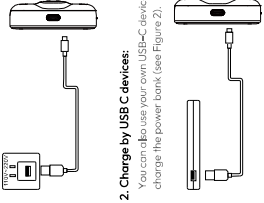

Specifications

Model	EZ810201
Total Capacity	10000mAh
Dimensions	102mm*45mm*21.3mm
Weight	7.76 oz/220g
Input	USB-C: 5V*3A / 9V*2A / 18W Max
Output	USB-C Output: 5V*3A / 9V*2.2A / 12V*1.67A 20W Max

Important Notices

1. **Initial Charging:**
The power bank has a low battery upon leaving the factory. Please charge it fully before first use.
2. **Regular Maintenance:**
If not in use for extended periods, charge the power bank at least once every three months to maintain battery health.
3. **Avoid Overcharging:**
To prevent damage from prolonged charging, unplug the power bank when the charging indicator light remains on for an extended period.
4. **Usage Guidelines:**
Place the power bank on a stable surface during use. Limit direct contact with the human body to less than 10 seconds if necessary.
5. **Low Battery Warning:**
During device charging, if the power bank indicates low battery, recharge it promptly to avoid interruption.

Wireless charging description:

Click the button of power bank, the indicator will flash for 3 times, put your mobile phone in the center of the power bank to start wireless charging. And then the wireless charging indicator will turn on during charging. The maximum wireless output is 15W, compatible with 5W/7.5W & 10W.

Discharge Instructions

When the power bank is in standby mode and a device is connected to its output port, follow these steps for effective discharge:

1. **Automatic Activation:**
The power bank automatically detects the connected device and begins outputting voltage to charge it. For some devices, that do not automatically start charging, press the power button on the power bank to initiate charging.
2. **Battery Level Display:**
The display light shows the current battery level of the power bank. It enters normal discharge mode once active.

ASIA PACIFIC

E-mail: Info@edizard.com
Address: Room A31, 13th Floor, Building A, Vovelsky, Dashi 1st Road, Xili Street Nanshan District, Shenzhen, Guangdong Province, China

 
MANUFACTURER

Golden Triangle Group Ltd
Address: 4F, No.5 Building, Qingfeng Technology Park, Shouy Community, Shajing Town, Baoan District, Shenzhen, Guangdong Province, China

How To Use

This product features a USB-C port with two-way charging capability & 15W magnetic Qi2 wireless charging.

1. **Charge by power supply:**
Plug the included USB-C cable into the power adapter to charge the power bank (see Figure 1).
2. **Charge by USB-C devices:**
You can also use your own USB-C device like laptop to charge the power bank (see Figure 2).

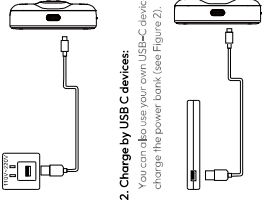

Specifications

Model	EZ810201
Total Capacity	10000mAh
Dimensions	102mm*45mm*21.3mm
Weight	7.76 oz/220g
Input	USB-C: 5V*3A / 9V*2A / 18W Max