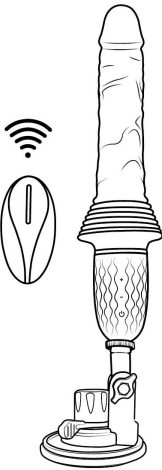 
 
 
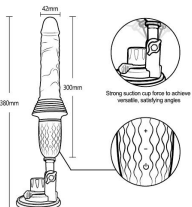 

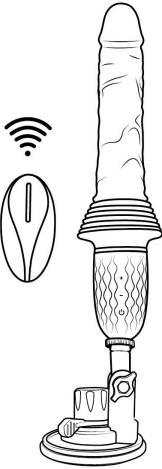 
 
 
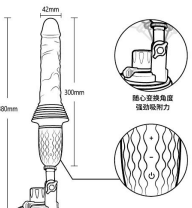 
 


印刷要求: 100克铜版纸 折页 规格: 50*120mm

<h2 style="text-align: center;">User Guide</h2> 	<h3 style="text-align: center;">Product Parameters</h3> <ul style="list-style-type: none"> • Product: Chisa Euphoria Thrusting Vibe • Vibration Frequency: 10 • Thrustion Frequency: 3 • Material: Silicone+Metal • Charging Time: 4 hours • Using Time: 1-2 hours • Waterproof: Dildo shaped shaft only • Size: 380*300*42 mm • Weight: 471g (including suction cup accessory) <h3 style="text-align: center;">Use Instruction</h3> <ol style="list-style-type: none"> 1. Press the  button and hold on for 1.5 seconds to turn on/off the product. 2. Press the  button to change vibration frequency (10 vibration frequencies available). 3. Press the "+" or "-" button to change the expansion frequency (three available frequencies); the expansion distance is 7cm. 4. Press the "*" button for about 1.5 seconds to start the heating mode, the light flashing. 	<h3 style="text-align: center;">Charging</h3>  <ol style="list-style-type: none"> 1. Magnetic rechargeable. Connect magnetic end of charger to magnetic points at the back of handle, then connect to USB port or adapter. 2. Indicator light flashes while charging. 3. Indicator light will be solid when the product is fully charged. Remove from charger promptly once fully charged. 4. Recommended charging time after complete discharge: 4 hours <h3 style="text-align: center;">CLEAN AND STORAGE</h3> <ol style="list-style-type: none"> 1. Please clean the dildo shaped shaft with a clean or slightly wet cloth. (Please avoid directly rinsing this product with water as it is not waterproof) 2. Please put this product into storage bag and keep it dry and clean. 3. Please keep it away from other stuff and kids. <h3 style="text-align: center;">Things You Need To Know</h3> <ol style="list-style-type: none"> 1. This product is only for adults, but it is not a contraceptive product. Please keep it away from your kids. 2. Do not use excessive force when using it to avoid injury. 3. Please do not share this product with others. Please stop using immediately when you feel uncomfortable during use. Avoid use if the skin is injured. 4. This product must be checked regularly for any damage. Stop using when it is found damaged. 5. In any circumstances, do not disassemble the product! <p>If there's any problem or function issues occurs during use, please contact the dealer or our customer service team via customerservice@chisa-toys.com</p>
---	--	---

<h2 style="text-align: center;">使用说明</h2> 	<h3 style="text-align: center;">产品参数</h3> <ul style="list-style-type: none"> • 名称: 珊莎幻爱便捷式强震炮机 • 振动频率: 10频 • 伸缩频率: 3频 • 材料: 硅胶+金属 • 防水等级: 仅阳具部分可清洗 • 充电时间: 4小时 • 使用时间: 1-2小时 • 尺寸: 380*300*42毫米 • 重量: 471克 (含吸盘) <h3 style="text-align: center;">功能</h3> <ol style="list-style-type: none"> 1. 按下  开机键并保持1.5秒启动产品。 2. 短按  开机键改变振动频率(10个振动频率可用)。 3. 短按 "+" 或 "-" 键改变伸缩频率(3个可用频率); 伸缩距离为7cm。 4. 长按 "*" 号键1.5秒进入加热模式, 指示灯闪烁。 	<h3 style="text-align: center;">充电</h3>  <ol style="list-style-type: none"> 1. 磁吸式充电, 将数据线的磁性端连接到手柄背面的充电磁性接口处, 然后将另一端连接到USB端口或电源适配器。 2. 当指示灯闪烁时, 充电开始。 3. 充电完毕时, 指示灯长亮。充电完成后, 请立即断开电源。 4. 彻底放电后建议充电时间: 4小时。 <h3 style="text-align: center;">清洗与保养</h3> <ol style="list-style-type: none"> 1. 使用前本品阳具主体部分请用干净或稍湿的布清洁。(本产品不防水, 请勿直接用水冲洗) 2. 请将本产品装入收纳袋存放, 并保持干燥、清洁。 3. 远离其他物品和儿童。 <h3 style="text-align: center;">你需要知道的事情</h3> <ol style="list-style-type: none"> 1. 本品仅供成人使用, 不属于避孕产品。请让产品远离婴儿和儿童。 2. 使用时不可过度用力, 以免受伤。 3. 请勿与他人交替使用本产品。使用过程中如有不适, 请立即停止使用。请勿在皮肤破损处使用。 4. 本产品需定期检查是否有损坏。如有损坏, 请停止使用。(在任何情况下, 请勿擅自拆解产品!) 5. 如果您购买的产品有问题, 请联系经销商或珊莎客户服务团队。 <p>客服邮箱: customerservice@chisa-toys.com</p>
--	--	--

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction