

Magic Box User Manual



Toy Status and Prompts

Toy Status	Prompt Message
Low Battery	I'm running low on energy, please charge me up!
Battery Too Low, Shutting Down	Out of power! Please charge me up!
Network Configuration Mode	Connect to my hotspot and help me set up the network!
Server Connection Failed	Can't connect to the server, check the configuration and network.
Suggesting a Break	We've been chatting for a while, let's take a break!
Taking a Break	It's been a long conversation, I'm going to rest now.

Step 1: Power On


- Turn the knob of the Magic Box clockwise to the maximum to power on the toy. Wait for the Magic Box to say: "Please configure the network."

To re-enter network configuration mode, press and hold the Switch Character button (MODE button) until the Magic Box makes a sound.

Step 2: Connect to Network

- Open your phone/tablet/computer and connect to the hotspot named "FoloToy-xxxx".
- Open your browser and enter: 192.168.4.1.
- Click the "Configure" button to enter the configuration page.
 - SSID: Your home/company Wi-Fi name.
 - Password: The password for the connected Wi-Fi (cannot be empty).

Only supports 2.4G Wi-Fi, does not support 5G frequency/mixed frequency/Wi-Fi networks requiring web-based login.

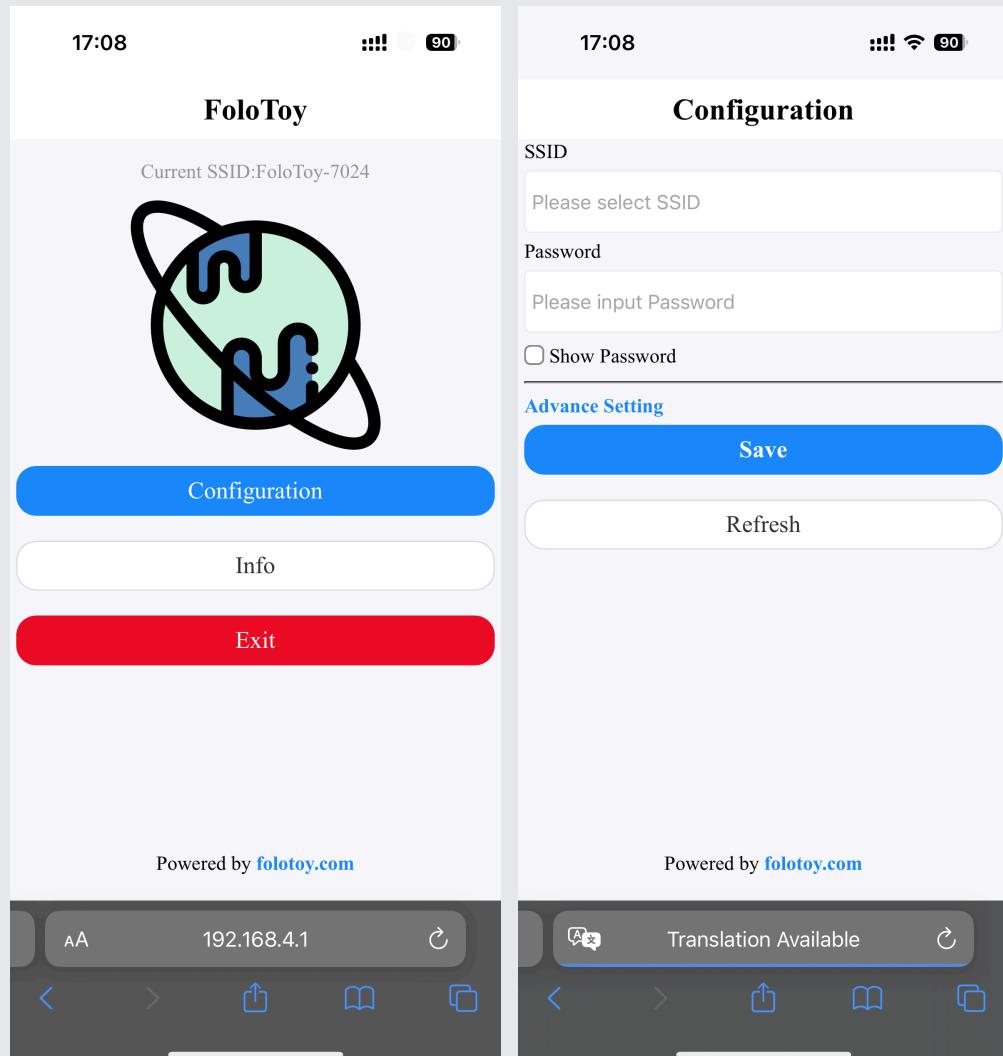

- After entering the Wi-Fi name and password, click save and wait for the page to load. Do not exit the page or close the browser during this time.
- Once loading is complete, click the button to jump to FoloToy.


17:08 1

5G 89


Toy needs to be bound to FoloToy to work normally

Click to jump to FoloToy

Powered by folotoy.com

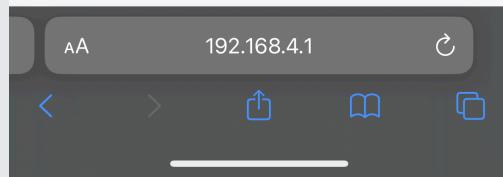

- On the redirected page, log in to your account, and the toy will automatically bind to the account.

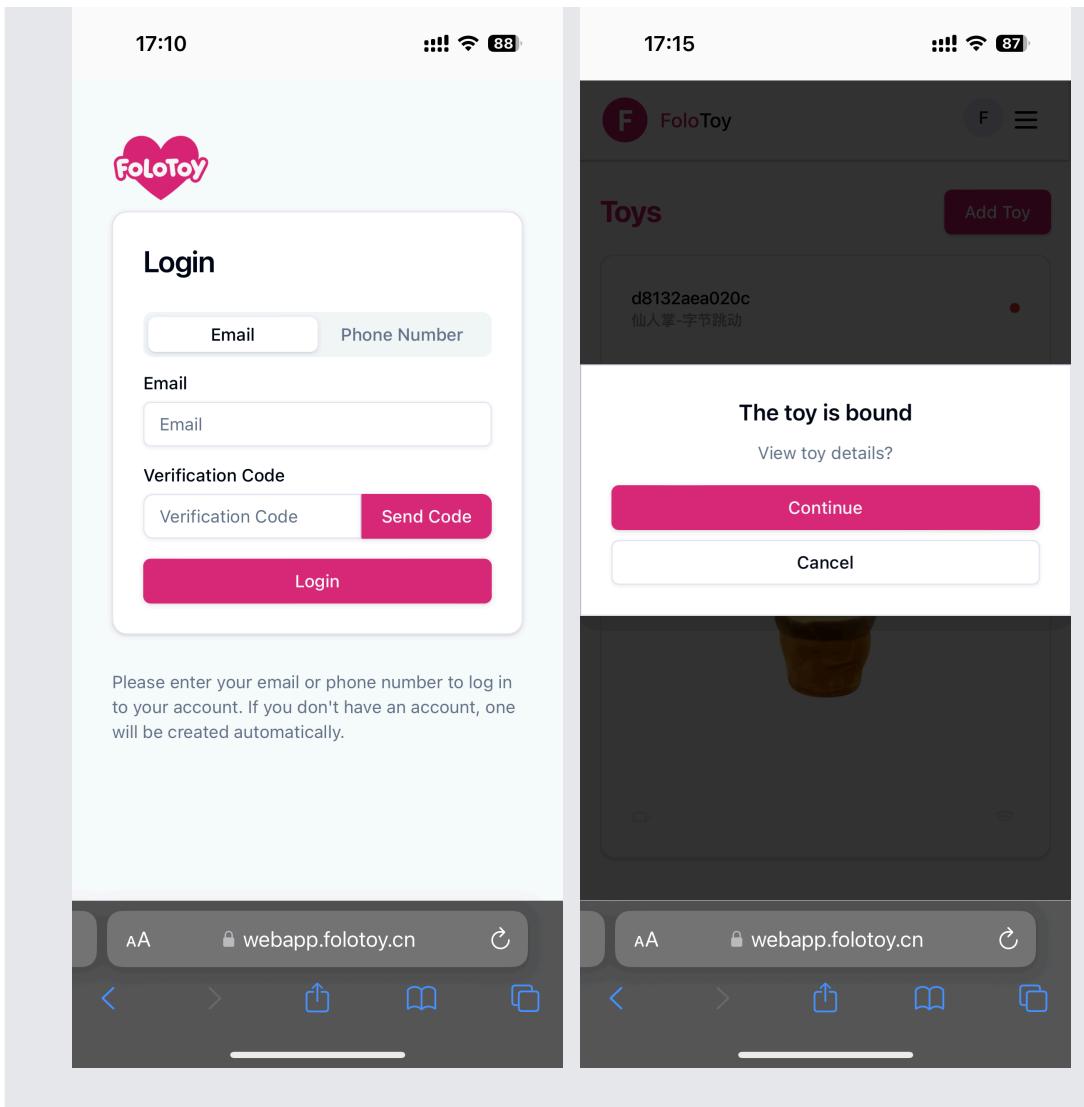


How to Talk

- Press and hold the “Talk” button (VOICE button) to talk. Release it when you’re done speaking.

How to Switch Characters

- Press the “Switch Character” button (MODE button) to switch characters.

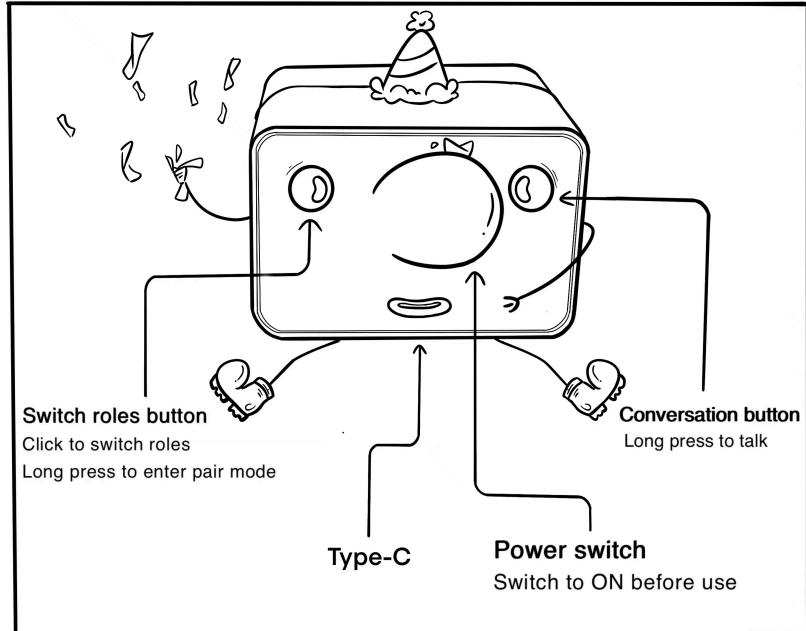

Indicator Light Description

Color	Device Status
Solid White	Standby mode
Solid Green	Recording
Solid Pink	Continuous conversation mode detected voice
Solid Red	File system mount failed / Wi-Fi initialization failed
Flashing Green	Waiting for server to return audio
Flashing Blue	In pairing mode
Rainbow Fade	Powering on / Playing audio
Flashing Red	Low battery
Flashing Yellow	Unable to connect to server

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

The devices has been evaluated to meet general RF exposure requirement , the device can be used in portable exposure condition without restriction