

A	<div style="display: flex; justify-content: space-between;"> <span>修改区域</span> <span>描述</span> </div> <div style="display: flex; justify-content: space-between; margin-top: 10px;"> <span>1</span> <span>XXXXXXXXXXXXXXXXXXXXXXXXXXXX</span> <span>XXXXXXXXXX</span> <span>XXXXXX</span> </div>				<div style="text-align: center; font-size: 2em; color: red; font-weight: bold;">正面</div>	A																				
B	 <p><b>HOPESTAR -PARTYBOX</b> 便携式无线音箱</p> <p><b>无线扬声器说明书</b></p>	<p><b>HOPESTAR</b> 无线扬声器 - PARTY BOX</p> <p><b>技术规格:</b></p> <ul style="list-style-type: none"> <li>无线标准: 5.3</li> <li>传输距离: 10米</li> <li>输出功率: 120W</li> <li>播放时间: 6-8小时</li> <li>频率效应: 40Hz-20KHz</li> <li>扬声器: 145mm 4Ω 80W, 93mm 4Ω 20W*2</li> <li>输入电源: 9V = 2A</li> <li>最大电流消耗: 1A</li> <li>电池类型: 18650 锂离子电池 2200mAh</li> <li>音频信号输入接口: 标准Φ3.5mm耳机插孔(立体声)</li> </ul> <p><b>特点:</b></p> <ol style="list-style-type: none"> <li>无线连接</li> <li>记忆功能, 断点续播</li> <li>支持U盘/TF卡/AUX播放模式</li> <li>内置锂离子电池</li> <li>支持MP3/WAV/WMA/FLAC/APE音乐格式解码</li> <li>使用高保真的扬声器, 发出声音更自然和细腻</li> <li>6级防水</li> <li>1+1 设备串连功能</li> <li>佩戴无线麦克风</li> <li>支持20W快充协议</li> </ol>	<p><b>HOPESTAR</b> 无线扬声器 - PARTY BOX</p> <p><b>按键说明:</b></p> <ol style="list-style-type: none"> <li>按键: 下一曲 单击: 下一曲</li> <li>串联键 单击: 串联/退出串联 长按: 切换功能</li> <li>灯按键 单击: 切换灯光模式 长按: 开关灯</li> <li>双击: 退出/回连蓝牙连接</li> <li>旋钮 旋转往右加音量往左减音量 单击: 播放/暂停</li> <li>EQ键 单击: 切换EQ模式 1.室内模式:语音提示/第1声/EQ按键无灯光。 2.室外模式:语音提示/第2声/EQ按键灯光亮。 3.K歌模式:语音提示/第3声/EQ按键呼吸。</li> <li>开/关机按键 长按开/关机 约3秒/次</li> <li>按键&lt; 单击: 上一曲</li> <li>Type-C 插孔 充电线接口, 插入Type-C充电线时, 默认为设备充电</li> <li>TF插孔 插入TF卡时, 默认为TF卡播放模式</li> <li>USB插孔 插入U盘时, 默认为USB播放模式</li> <li>AUX 插孔 标准Φ3.5mm耳机插孔</li> </ol> <p><b>使用说明:</b></p> <ol style="list-style-type: none"> <li>无线配对 1.1. 使用无线配对前, 请先打开音频电源, 它已经是默认无线模式。 1.2. 打开无线设备, 搜索HOPESTAR-PARTY BOX, 连接配对, 连接成功后, 开始播放音乐体验。 2. 适用于各种手机配件无线技术, 无线适配器, 无线播放器。 3. 语音提示 3.1. 开/关机有语音提示音; 3.2. 音量加到最大音量有语音提示, 最小音量无语音提示。 3.3. 检测到低电提示3次后自动关机;</li> <li>模式切换 4.1. 开机默认进入无线模式。 模式切换顺序: 无线模式-TF卡模式-U盘模式-AUX模式 4.2. 模式: 后插伏充。 5. TWS操作说明 任意两个音箱同时打开, 单击其中一个TWS串联键, 听到“嘟”的一声进入TWS搜索, 当TWS连接成功, 前连接提示音, 主机指示灯闪烁, 副机长亮。 6. 播放指示灯 无线搜索状态: 白灯快闪, 约5秒/次; 无线配对状态: 白灯常亮 播放状态: 白灯慢闪 约1秒/次; 7. 充电指示灯 充电为3颗或水灯从左右至闪烁 电量35%第1颗常亮2.3颗闪烁 电量70%第1-2颗常亮3颗闪烁 电量100%第1-2-3颗常亮</li> </ol>	<p><b>HOPESTAR</b> 无线扬声器 - PARTY BOX</p> <p><b>产品保修</b></p> <p>用户名: _____</p> <p>联系电话: _____</p> <p>购买日期: _____</p> <p>产品编号: _____</p> <p>维护故障: _____</p> <p style="text-align: right; font-size: 0.8em;">注意: 产品保修期为6个月</p>	<div style="text-align: center; font-size: 2em; color: red; font-weight: bold;">反面</div>	B																				
C	 <p><b>HOPESTAR -PARTY BOX</b> Portable Wireless Speaker</p> <p><b>WIRELESS SPEAKER INSTRUCTIONS</b></p>	<p><b>HOPESTAR</b> Wireless speaker - PARTY BOX</p> <p><b>Technical Specifications:</b></p> <ul style="list-style-type: none"> <li>Wireless standard: 5.3</li> <li>Transmission distance: 10 meters</li> <li>Output power: 120W</li> <li>Playing time: 6 - 8 hours</li> <li>Frequency effect: 40Hz - 20KHz</li> <li>Speaker: 145mm 4Ω 80W, 93mm 4Ω 20W*2</li> <li>Input power: 9V = 2A</li> <li>Maximum current consumption: 1A</li> <li>Battery type: 18650 lithium ion battery 2200mAh</li> <li>Audio signal input interface: standard Φ3.5mm headphone jack (stereo)</li> </ul> <p><b>Features:</b></p> <ol style="list-style-type: none"> <li>Wireless connection</li> <li>Memory function, breakpoint resuming</li> <li>Support U disk / TF card / AUX playback mode</li> <li>Built-in lithium ion battery</li> <li>Support MP3/WAV/WMA/FLAC/APE music format decoding</li> <li>Using high-fidelity speakers, the sound is more natural and delicate</li> <li>Level 6 waterproof</li> <li>1+1 device serial connection function</li> <li>Wear a wireless microphone</li> <li>Supports 20W fast charging protocol</li> </ol>	<p><b>HOPESTAR</b> Wireless speaker - PARTY BOX</p> <p><b>Button instruction:</b></p> <ol style="list-style-type: none"> <li>Button&gt; Click: Next</li> <li>Tandem key Click: Tandem/Exit Tandem Long press: to switch functions.</li> <li>Lamp button Click: Switch light mode Long press: Switch light Double click: Exit/connect back to Bluetooth connection</li> <li>Knob Rotate right to increase volume and left to decrease volume Click: Play/Pause</li> <li>EQ key Click: Convert EQ mode 1. Indoor mode: Voice prompt/beep 1 /EQ button without light. 2. Outdoor mode: Voice prompt/beep 2 sound /EQ key light is on. 3. K song mode: Voice prompt/beep 3 sound /EQ key breathing</li> <li>On/Off button Long press on/off for about 3 seconds/time</li> <li>Keys-&lt; Click: Previous</li> <li>Type-C jack Charging cable interface, when inserting Type-C charging cable, defaults to device charging</li> <li>TF jack When inserting a TF card, it defaults to the TF card playback mode</li> <li>USB connector When inserting a USB drive, it defaults to USB playback mode</li> <li>AUX jacks Tandard Φ 3.5mm headphone jack</li> </ol> <p><b>Directions for use:</b></p> <ol style="list-style-type: none"> <li>Wireless pairing 1.1. Before using wireless pairing, first turn on the audio power, it is already the default wireless mode. 1.2. Turn on the wireless device, search for HOPESTAR-PARTY BOX, connect and pair, connect After success, start playing music experience. 2. Suitable for various mobile phone accessories wireless technology, wireless adapter, wireless player. 3. Voice prompt 3.1. There is a voice prompt when turning on/off; 3.2. When the volume is increased to the maximum volume, there will be a voice prompt, and the minimum volume will not have a voice prompt. 3.3. Automatically shut down after detecting the low power prompt for 3 times;</li> <li>Mode switching 4.1. It enters the wireless mode by default when it is turned on. The sequence of mode switching is as follows: Wireless mode-TF card mode-USB mode-AUX mode. 4.2. Mode: Post-insertion priority. 5. TWS Operating Instructions Open any two speakers at the same time, click one TWS serial key, When you hear the "beep" to enter the TWS search, when the TWS connection is successful, the host indicator flashes and the copilot lights up. 6. Play indicator Wireless search status: white light flashing, about 0.5 seconds/time; Wireless pairing status: white light is always on Play status: the white light flashes slowly for about 1 second/time;</li> </ol> <p><b>7. Charging indicator light</b> Charging with 3 running lights flashing from left to right 35% battery, the first one is constantly on, and 2,3 flashes 70% battery, 1st to 2nd constantly on, 3 flashing 100% battery level, 1st -2nd -3rd continuously lit 8. Volume Turn on the default speaker volume at 70%.</p> <p><b>9. Charging and using:</b> This machine has a built-in overcharge protection circuit, which can be connected to a computer or charger for a long time, about four hours Charging is complete. The play time of each battery will vary depending on the volume used rather different. 10. If there is no working state, it will automatically shut down after 15 minutes.</p> <p><b>Troubleshooting:</b></p> <ol style="list-style-type: none"> <li>Automatic shutdown: When the battery power is low, the battery protection will be turned on automatically, please charge it for 4 hours before use.</li> <li>Unable to play music: The music file storage path cannot be recognized by the player. Please store the music file in the root directory of the removable device.</li> <li>There is no sound when connected to the computer: the computer interface is connected incorrectly, please select the correct audio output port</li> <li>There is no response to the keys or the function is disordered: try again after shutting down.</li> <li>When there is an abnormal situation in the machine, a slender round rod can be used to press the reset switch inside the AUX hole</li> </ol> <p style="text-align: right; font-size: 0.8em;">Note: The product warranty is 6 months</p>	<p><b>HOPESTAR</b> Wireless speaker - PARTY BOX</p> <p><b>Product warranty</b></p> <p>Username: _____</p> <p>Contact number: _____</p> <p>Date of purchase: _____</p> <p>Product number: _____</p> <p>Maintenance failure: _____</p> <p style="text-align: right; font-size: 0.8em;">Note: The product warranty is 6 months</p>	<div style="text-align: center; font-size: 2em; color: red; font-weight: bold;">反面</div>	C																				
D	<p><b>PARTY BOX说明书</b></p> <p>成品尺寸: 122.5x70mm</p> <p>材质工艺: 128g双铜, 单张双面四色印刷, 风琴折</p> <p>注:做大货前先打样给业务确认!才可生产</p>				<p style="text-align: center; font-size: 1.5em; font-weight: bold;">深圳品质人生科技有限公司</p>	D																				
					<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 20%;">设计:</td> <td style="width: 20%;">Zep</td> <td style="width: 20%;">2023-08-30</td> <td style="width: 20%;">文件编号:</td> <td style="width: 20%;">000</td> </tr> <tr> <td>业务:</td> <td></td> <td></td> <td>名称:</td> <td>Party Box- 中性 -说明书</td> </tr> <tr> <td>电子:</td> <td></td> <td></td> <td>审核:</td> <td></td> </tr> <tr> <td>结构:</td> <td></td> <td></td> <td>核准:</td> <td></td> </tr> </table>	设计:	Zep	2023-08-30	文件编号:	000	业务:			名称:	Party Box- 中性 -说明书	电子:			审核:		结构:			核准:		
设计:	Zep	2023-08-30	文件编号:	000																						
业务:			名称:	Party Box- 中性 -说明书																						
电子:			审核:																							
结构:			核准:																							

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.