




75X70MM

User Manual

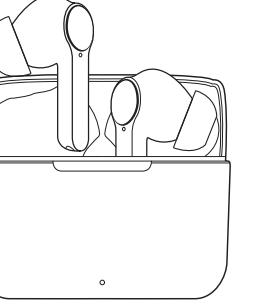


Wireless Earbuds

 Package Contents

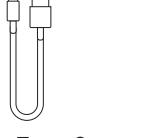	2 x Earbuds
	1 x Type-C Charging Cable
	1 x User Manual


1

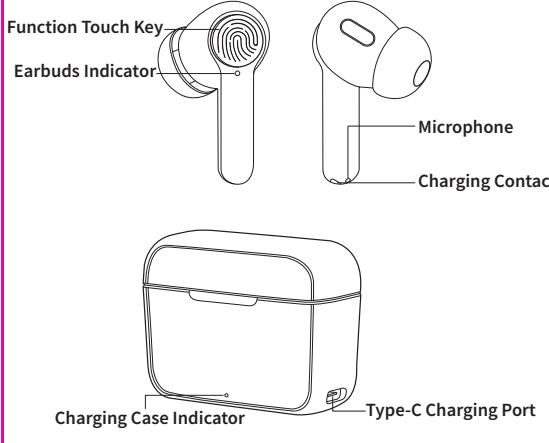

Function Touch Key
Earbuds Indicator
Microphone
Charging Contacts
Charging Case Indicator
Type-C Charging Port


2

Instructions for Use

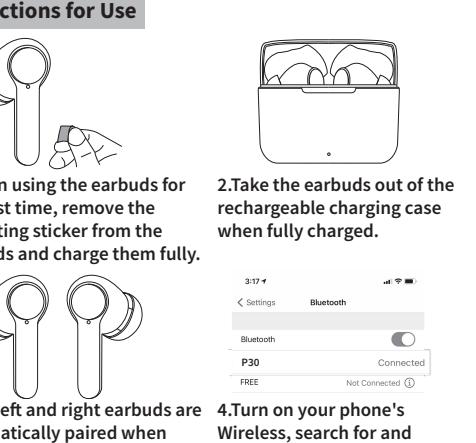

1. When using the earbuds for the first time, remove the insulating sticker from the earbuds and charge them fully.
2. Take the earbuds out of the rechargeable charging case when fully charged.
3. The left and right earbuds are automatically paired when turned on.
4. Turn on your phone's Wireless, search for and connect the earbuds "P30".

3

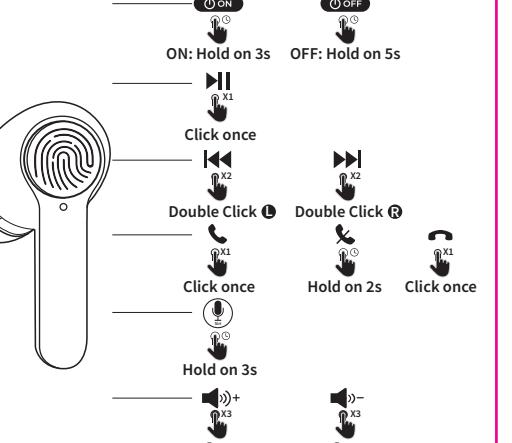

ON: Hold on 3s **OFF: Hold on 5s**
Click once **Double Click ①** **Double Click ②**
Hold on 2s **Click once**
Hold on 3s
Click ① 3 times **Click ② 3 times**

4

Product Parameters

Model No	P30
Wireless Name	P30
Input	DC 5V
Earbuds	2*38mAh
Charging Case Battery	300mAh
Play Time	≥ 4 Hours
Standby Time	80 Hours
Earbuds Waterproof	IPX6
Earbud Weight	4g
Total Net Weight	45g
Bluetooth Range	10m

5

Basic Operation

- Turn On
① The earbuds will turn on automatically when you take out from the charging case after charged.
② Press and hold for 3 seconds on the L or R earbud function touch key to turn on.
- Turn Off
① The earbuds will automatically switch off when placed in the charging case.
③ Press and hold for 5 seconds on the L or R earbud function touch key to turn off.
- Play or pause: Click once on the L or R earbud function touch key.
- Previous song: Click twice on the L earbud function touch key.
- Next song: Click twice on the R earbud function touch key.
- Volume +: Click 3 times on the L earbud function touch key.
- Volume -: Click 3 times on the R earbud function touch key.
- Answering calls: When a call comes in, click once on the L or R earbud function touch key.
- Ending calls: Click once on the L or R earbud function touch key when during a call.
- Refusing calls: Press and hold for 2 seconds on the L or R earbud function touch key when comes a call.
- Turn on Voice Assistant: Press and hold for 3 seconds on the L or R earbud function touch key.
- Auto shutdown: 3 minutes without connection will automatically shut down.
- Memory function: the connection to the last connected device is made automatically after switching on.

Earbuds Indicator

- Turn on: red and blue light flashes.
- Turn off: red light flashes.
- Disconnected: red and blue light flashes in sequence.
- Auto shutdown: red light flashes.

Charging Case Indicator

- Charging: red light flashes, after fully charged, the red light will always on.
- Charging to the earbuds: blue light on.

6

7

8

Warm Tips

- Please charge the charging case before first using.
- Do not place this product in a hot place or near an ignition source.
- Do not immerse this product in water.
- Do not disassemble this product without permission.

Product Recycling Instruction

 Electronic devices are recyclable waste and must not be disposed of in household waste. At the end of its useful life, please dispose of the product in accordance with the applicable regulatory guidelines. This way you can fulfil your legal obligations and contribute to the protection of the environment.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
—Reorient or relocate the receiving antenna.
—Increase the separation between the equipment and receiver.
—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
—Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement. This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or in conjunction with any other antenna or transmitter.

9