

Deia Instruction Manual

6720 The Wearable

21.06.09

Sample

Pantone (2) Colors

Rest of the colors are CMYK



Pantone 533C



Pantone 10148C

Printer Notes

- White Matte Coated Cardstock
- Bleed
- Double sided
- Accordion Fold

= Indicates fold

HOW TO CHARGE



STEP 1:

Attach the remote to the wearable by sliding the remote between the two front prongs.



STEP 2:

Place both components into the charging case so they fit within the mold. The wearable and remote can also be charged separately.



STEP 3:

Plug the charging cable into the port on the back of the charging case. Plug the other end into a 5V power source (standard mobile phone charger). The LED light on the case will pulsate slowly to indicate charging and turn solid when fully charged.

HOW TO CONNECT



STEP 1:

To connect the wearable to the remote, press and hold the power button on the wearable for 3 seconds to turn on. On the remote, press and hold the connect button for 3 seconds to turn on. If the wearable is on, the remote will automatically connect.



STEP 2:

To hold the remote, slide the remote between two fingers. We recommend pressing the buttons with your thumb. Make sure the buttons are facing the inside of your hand and oriented towards the tip of your fingers.



STEP 3:

To wear the wearable, gently slide the back tail into the vagina until the front two prongs rest comfortably on both sides of the clitoris. The remote controls the wearable vibrations from up to 10 feet away.

KNOW A HIGHER LOVE

CLEANING:

Be sure to clean thoroughly before and after each use. Clean using mild soap and warm water.

STORAGE:

Store in a cool, dry place separately from other sexual wellness devices; devices of different material can damage each other if left in contact.

QUALITY:

This product is manufactured using body-safe silicone that is harmless to the human body; free from phthalates, BPA and latex. Use water-based lubricant only.

CHARGING:

Do not turn on while charging and/or cleaning. While charging, the LED light on the charging case will pulsate slowly and turn solid when fully charged. Use only with 5-volt USB wall adapter (standard mobile phone charger). Low battery alert: Light on the wearable and remote flashes rapidly when battery is running low. Allow 50 minutes for a full charge. Total usage time from full battery on highest setting is 50 minutes.

WARNINGS:

Discontinue use if there is any discomfort for you or your partner. Do not expose device to water while charging.

WATERPROOF:

The wearable and remote are waterproof to IPX7 standards and can be submerged in the bath or shower. Do not expose the charging case to water.



WAYS TO USE



WARM UP

Get in the mood with tandem masturbation, each partner using different parts of the device. Use the remote as an independent vibrator on your partner while wearing the wearable.



EXPERIMENT

The remote opens the door to experimental partner play! Give your partner the power by letting them control the remote for an unpredictable and arousing foreplay experience.



GET THERE

Wear the wearable during penetrative sex. Allow the powerful vibrations to create shared pleasure for you and your partner inside and out.

KNOW A HIGHER LOVE

FRONT

Deia™

THE WEARABLE
REMOTE CONTROLLED
STIMULATOR

INSTRUCTION MANUAL



Deia™

For more information:
Visit deialove.com

BACK

FCC COMPLIANCE STATEMENT:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class

B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement.

The device can be used in portable exposure condition without restriction.