

# 1 Safety Instructions

- 2 Your Revive Turntable
  - 2.1 Top View 2.2 Back View

# 3 Setting Up Your Turntable

- 3.1 Installing The Platter And Turntable Mat
- 3.3 Attaching And Adjusting The Counterweigh
- 4 Using Your Turntable
- 4.1.Before playing a record
  4.2. Turntable Operation
  4.3 Bluetooth Operation
  4.4 Bluetooth Trasmitter Operation
  4.5 AUX-IN Operation
- 5 Troubleshooting
- 6 Technical Specifications
- 7 EC Declaration

## Read and understand this entire manual before using this product. Keep these instruc-

- The product shad water water.

  1. Do not use this product near water.

  2. The product should be operated only by the type of power source indicated on the manking label or in this instruction manual.

  3. Do not deteat the safety purpose of the polarized plug, A polarized plug has two blades with one blade wide than the other. This plug will fit into the power order only the power point only the power point only the power p blades with one blade wider than the other. This plug will fit into the power outsit only one way, it you are unable to intent the plug fully into the outset try reversing the plug. If the plug should still fall to fit, contact your electrician.


  4. Protect the power cord from being waited on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the product.
- riscore exceptables, and the point where they exit from the product.

  Do not contributed coulders, extenders contributed convenience exceptables as the contributed convenience exceptables as the contributed con

- service personnel.

  8. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

  9. Do not use attachments not recommended by the product manufacturer as they may
- A product and cart combination should be moved with care. Quick stops, excessive 10. A product and cart combination should be moved with care. Guids large, excessive force, and universe sufficies may cause the product and call combination to overturn.
  11. Billios and openings in the cabinet are provided for ventilation and to ensure realizable operation of the product and to protect it timo understang. To not block or combinating to the control block or call to the product and to protect it timo understang. To not block or 2.0. Upsiguit per pools during lightning storm or when unused for long periods of time.

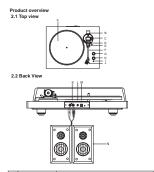

#	ITEM	DESCRIPTION
Α	Turntable Platter	Aluminum Alloy Turntable
В	Counter Weight	Turn To Adjust The Needle Pressure
С	RPM Selector Switch	Turn To Select The Record Type (33 or45) Speed Of Your Turntable
D	Tone Arm Lifter	Push Forward And Pull Back To Raise And Lower Tone Arm
Е	Tone Arm Rest Holder	Place The Tone Arm On This Holder When Not In Use

#	ITEM	DESCRIPTION
F	Tone Arm	Hole The Stylus That Produces Sound From The Record
G	Function Control	Turn The Control To Select BT/Line In/Phone/BT Transmitter
Н	Power/Volume Control	Turn The Control To Power ON/OFF Unit And Control Dial To Adjust The Volume
ı	Indicator Light	Phone Mode: RED Light Solid Bluetoch Mode:Blue Light Quickly Flash Bluetoch Pairing Blue Light Solid Line IN Mode: RED And Blue Light Solid Bluetoch Transmitting Blue Light Quickly Flash Bluetoch Transmitting Pairing: Red Light Slow Flash
J	Stylus	Generates Sound From A Playing Record
К	Line Out Jack	Plug The Included Speakers RCA Cable Into This Jack
L	Line In Jack	Connect To An External Audio Device And Play Music
м	DC In Power Jack	Connect The DC Plug Into DC IN Power Jack
N	Speakers	An External Amplifer For Music Play

 
#	Accessory	Quantity		
1	Line in cable	1 pcs		
2	Power adapter	1 pcs		
3	Counter weight	1 pcs		
4	45 RPM adapter	1 pcs		
5	Turntable mat	1 pcs		
6	Two belts	2 pcs (one installed and one spare)		
7	User guide	1 pcs		
8	Install dust cover	1 pcs		

Install the metal platter(the belt is pre-installed on the bottom of the metal platter) and a turntable mat on the metal platter.
 Install dust cover.
 Attach and adjust the counterweight.





IN A SAFE PLACE FOR FUTURE REFERENCE www.ARKROCKET.com

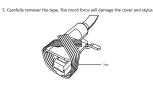


### Installing the platter and turntable mat



1. Place the belt on the motor pully.

 
Align one of the platter openings with the motor pulley, and while pulling both ends of the red ribbon that comes attached to the belt, place the belt on the motor pulley, as per the diagram. When doing this, be careful not to twist the belt

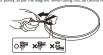





 
3. Align the round hole in the platter with the pulley and use your finger to hook the

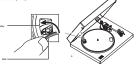

Note: When you want to take out the platter from the turntable, remove the mat first, then grasp the platter and pull it upward. This is especially important if you are shipping your

Installing the Lid



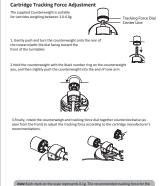



MaterBluetooth version:5.1

## 4.4 Bluetooth Trasmitter Operation

- \*\*\* OBJECTION IT ASSISTANCE UPER AUDIT

  Connect the included power adaptor to the turntable.

  2. Switch her record player on, then set the volume on both devices to low to begin with.

  3. Set them does electron dual on the record player to PHONO to play

  4. Long press the play bother (IVI) to begin the pairing process, the operation indicator light flather in red core the connection has been absoluted.

  5. Figs the music from the turntable to a media device, if you along only played, long press the 0 bushess gain(FV) to declarate the transmitter function.

### 4.5 AUX-IN Operation

This turntable includes an auxiliary audio signal input jack for connecting external audio devices like MP3 players, CD players, and older nondockable iPods so you can listen to your external source through the curntable's speakers.

1. Use an audio cable included with one 3.5 mm stereo connection on each end of the manner.

## 5.Needle Replacement

# Removing Needle 1. Gently pull down the front edge of the needle. 2. Pull readle forward.

- Installing Needle

  1. Position the needle with its tip facing down.

  2. Line up the back of the needle with the cartridge.

  3. Insert the needle with its frort end at a downward angle and gently lift the frort of the needle upward until a range into place.

## Troubleshooting

Potential Incorrect Use and Fault Conditions:
These turnishes are manufactured to the highest standards and undergo strict quality controls before leaving the factor.
Faults that may possibly occur are not necessarily due to material or production faults but can scendings be caused by incorrect use or reformate desynathrops. Therefore the Ethiosis for its deport on fault system is labeled.

- rower is on, but the platter does not turn

  Turntable's crive balt is not installed or has alipped off.
- Furniable is spirming, but there is no sound, or sound not loud enough.

  Styles protector is still on.

  Tone arm is lift up by the lever.
- is the belt placed on the motor pulley? Check that the belt is placed on the motor
- correcty Has the belt been damaged? Replace it with a new belt.

6 Technical Specifications

Model number	AR-PH68
Bluetooth version	JL5.1
Input	AC 100-240V ~50/60Hz
Power supply	12V==2000mA
Speaker driver	4 INCH
Speaker power	2 X 20W
Dimensions	lid closed H119 X W 448 X D351MM lid open H180 X W 448 X D351MM
Wainht	9.05km

## Information on Waste Disposal for Consumers of Electrical & Electronic

paid,
for proper treatment, recovery and recycling, desact balls of WEET marked water to
your Local Authority Givic waste sits, where it will be accepted free of chargos.
If all consumers despose of Waste Esternal & Electrice Europente correctly, they will
full consumers despose of Waste Esternal & Electrice Europente correctly, they will
you human health and the environment, of any hazardous materials that the waste
may contain.

## FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two

connected.

Consult the dealer or an experienced radio/TV technician for help.

403-T003000-00-0002

尺寸: 148\*210mm

材质: 128 G铜板纸, 单黑印刷,