TWS无线蓝牙耳机使用说明书

在使用本产品时请仔细宣读说明书

熟悉您的蓝牙耳机

十回 4夕 72 8土 公丁

Specifications and Features Bluetooth Version: V5.0 + EDR

Bluetooth Protocol: A2DP, AVRCP, Headset, Handsfree Frequency Range: 2400.0-2483.5 MHz Working Scope: 10 meters Charging Time: about 2 hours

状态	操作	LEDĄT	声音/语 音提示	备注
充电仓电量显示		四蓝灯电量比例显示		
充电仓充电		当前电量比例蓝灯闪亮		输入5V1
充电仓充满电	充满约3小时	四蓝灯长亮		#ID/DAT
充电仓放电		充电仓当前电量监灯长亮		
耳机充电		耳机紅灯长亮		
耳机充满电	充满约2小时	耳机与充电仓指示灯全 熄灭		
开机	长按功能键2秒	蓝灯闪亮	语音提示	
关机	长按功能键4秒	红灯闪亮	语音提示	
左右耳机配对	耳机从充电仓取出,耳机红蓝灯交替 闪烁,(主耳机红蓝灯交替闪烁,副 耳机蓝灯闪烁时)打开手机蓝牙搜索 到耳机点击配对,配对成功后语音提 示"已连接"。	主耳机红蓝灯交替,副 耳机蓝灯闪烁。	语音提示	
对耳配对完成		蓝灯闪亮	语音提示	
来电			来电报号	
接听电话	短按一下功能键			
挂断电话	短按一下功能键			
拒接电话	长按功能键2秒			
语音控制功能	长按功能键			手机支持 此功能
音乐播放	短按一下功能鍵			
音乐暂停	短按一下功能键			
上下一曲	双击右耳功能键下一曲,双击左耳功 能键上一曲			
三击右耳功能键加 三击右耳功能键减			最大音量 提示音	

- 與於此月#解 若您未能將耳机和移动电话连接上,请尝试以下步骤; --确保耳机已被启动及已完全充电。 --确保耳机已与移动电话配接。 --确保移动电话的固弦对的能已被启动。

- ---确保百机在移动并没有障碍物阻隔 一辆床斗机在停动开及有牌号物阻隔。 者以上步骤仍未能排解疑难,请将耳机充电,或将您的移动电话再次重新 开机。

保养及维修



产品保修卡 该卡为产品保修赁证、请妥善保管

以下707 邮件净几层,用关目外面		
产品名称:	产品型号:	
购买日期:	客户名称:	
联系方式:		

立中继统治国

7 military re-mark				
日期	不良现象	解决方案		

保修卡

产品型号:	购买日期:
用户姓名:	联系电话:
退换货原因:	

保修条款,

- 1、保修服务只限于正常使用情况下的有效保修期内,由于产品本身质量问题 引起的非人为损坏的故障
- 2、自购买日起30天内,如果有发生性能故障(非人为损坏),免费退换货; 3、产品主体自该购买日起。一年内给予保修;
- 4、超过保修期或不在保修范围内仍需要本公司维修的,我方酌情收取维修费;
- 注意: 当您将保修卡撕毁或丢失时, 您将失去保修机会, 我司拥有资料的最终

TWS Wireless Bluetooth Headphone Usage Manual

Please read the instructions carefully when using this product

Pairing Method	Switch on	Power off	Long press 1 5s	Switch on	Pairing ethod:continous long press Function key fo 5 seconds until the red an
	Power off	Switch on	Long press 2.5s	Power off	blue lights are flashing the headphones are in pairing status open the Bluetooth
Function Key	Pairing	Power off	Long press 5s	Access to pairing status	of phone and select J26 to complete pairing.
	Paired and Connected	Switch on		Complete pairing	
	Connected	Switch on		Du(short voice)	
	Refuse call	Standby(calls)	Long press1.5s	Du(short voice)	Or press the hang up botton of mobile phone
	Next song	listen to music	Double-click		
	The last number redial	Standby	Long press 2s		
	Stop dialing	Dial number	Short press	voice)	Or press the hang up botton of mobile phone
	Reconnect	Switch on (disconnect status)	Long press1.5s	Du(short voice)	
	Play	pause/stop	Short press	None	
	Pause	play	Short press	None	
	Lacking power	Switch on		None	
The charging box is out of charge	Blue light of	oen			
Charge the charging box	The red ligh	t flashes when ch	arging and tun	ns on when charg	ing Charging time: 1 hou
Charge the bluetooth headset	When the bluetooth is charged, the red light is turned on After the bluetooth charging is completed, the blue light is turned on After the bluetooth charging box lamp. Charging time: 1 to 2 hour charging loss lamp.				
Connect 2 cellphones at the same time	2.connect to 3.turn on the 4.continuous	cellphone 1 and to cellphone 2 and to bluetooth of both press Multifunction on both cellphone	urn off the blue cellphones on key for 5s ur	tooth of cellphone	

- Troubleshooting
 If you are unable to connect your headset with mobile phone, please by the obligation.

 The control of the connect your headset with mobile phone, please by the obligation.

 The control of the control

Care and Maintenance Headset

- Consider turning your headset off before placing it in your pocket or bag. If the MBF is accidentally activated, your mobile phone may place an unintended call.
- Do not expose the headset to liquid, moisture or humidity as it is not waterproof.
- Do not use abrasive cleaning solvents to clean the headset. Do not expose the headset to extreme temperature conditions. The best store temperature range is from -10 to +60C, otherwise the life of the
- headset will be influenced. Do not dispose of the headset in a fire as it this may result in an explosion. Do not bring your headset into contact with sharp objects as this will cause
- scratched and damage. Do not attempt to disassemble the headset as it dose not contain serviceable components.
- Do not attempt to Disassemble the headset
- If you do not use the headset for long periods, be sure to store it in a dry place, free form extreme temperature conditions and dust



Product Warranty Card

Time same as any product manality commissing product and good care and		
Product name:	Model:	
Date of purchase:	Customer name:	
Contact:		

Product maintenance record

Date	Undesirable phenomenon	Solutions

Warranty Card

Product model :	Purchase date :
User name :	Contact number :
Changing or Refunding:	

- 1. warranty service is limited to the normal use of the effective warranty period, due to the quality of the product itself caused by non-human damage to the fault;
- since the purchase date within 30 days, if there is a performance fault (non-human damage), free return;
- the main product since the purchase date, within one year warranty; 4. more than the warranty period or not within the scope of warranty still need our company to repair, we accept the maintenance fee as

Note: when you tear or lose the warranty card, you will lose the chance of warranty, and we have the final right to interpret the data

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- · Increase the separation between the equipment and receiver.
- · Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- · Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.