

# MS100 User manual (ver 1.2)

# FRONT

# BACK



KODAK

# KODAK MEMO SHOT ERA

## MS100 MS100W MS100Y

User Guide	Guide de l'utilisateur	Käyttöohjeet	Podręcznik użytkownika	Benutzerhandbuch	ユーザーガイド
guía del usuario	Uživatelská příručka	사용자 설명서	Naudotojo gidas	Användarguide	用戶指南
Guida dell'utente	Uživatelská příručka	Käyttöohjeet	Lietotāja rokasgrāmata	Brugervejledning	

[www.kodakphotoprinter.com](http://www.kodakphotoprinter.com)

Available on the  
App Store

ANDROID APP ON  
Google play

This section provides information on how to download the Kodak Memo app. On the left, there is a QR code and a link to the app page. On the right, the text "KODAK MEMO" is displayed next to a magnifying glass icon. Below this, there are two app store logos: the Apple App Store and the Google Play Store. The Apple App Store logo includes the text "Available on the App Store". The Google Play Store logo includes the text "ANDROID APP ON Google play".

**ISED Statement**

The diagram illustrates the process of inserting a memory card into the camera in three steps:

- Step 1:** The memory card cover is shown open, revealing the internal slot. A yellow arrow points down to the cover.
- Step 2:** A hand is shown holding the camera, and a yellow arrow points to the memory card slot on the side of the camera body. A memory card is shown being inserted into the slot.
- Step 3:** The memory card cover is shown closed, with a yellow arrow pointing to the cover. A memory card is shown being ejected from the slot.

The diagram shows two scenarios for creating a document from a photo. The left scenario shows a photo being added to a document titled 'KODAK MINI SHOT ERA'. The right scenario shows a photo being added to a document titled 'TXT'. The steps are numbered 1 through 3, indicating the sequence of actions: 1. Tap the 'Photos' icon. 2. Tap the photo to be added. 3. Tap the 'Done' button.

Diagram illustrating the correct way to insert a photo into the camera's photo slot. The left side shows an incorrect insertion (photo not fully seated) with a red prohibition sign. The right side shows the correct insertion (photo fully seated) with a red prohibition sign over the photo slot.

Two safety warning icons are shown. The first icon, labeled '- 4', shows a hand using a screwdriver to open the device, with a red prohibition sign over it. The second icon, labeled '- 5', shows a hand holding a USB-C cable connected to the device, with a red prohibition sign over it and a lightning bolt symbol indicating a risk of electric shock.



<https://support.kodakphotoprinter.com>

Customer Support	Служба поддержки	Obsługa klienta
Atención al cliente	Klantenservice	客户支持
Servizio Clienti	Suporte ao cliente	客戶支持
Kundendienst	Vevőszolgálat	Müşteri desteği
Service client	Kundsupport	顧客サポート
Zákaznická podpora	고객지원	

## **ISED Statement**

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

L'appareil a été évalué pour répondre aux exigences générales d'exposition aux RF. L'appareil peut être utilisé dans des conditions d'exposition portable sans restriction.

## LIMITED ONE YEAR WARRANTY ON KONODAK PHOTO PRINTER AND CARTRIDGE

Product	Duration of limited warranty
KODAK Instant Camera and Printer	Year
Refill Cartridge of KODAK Instant Camera and Printer	Year

### Limitation of warranty and liability

To the extent allowed by local law, neither Prinics nor its third-party suppliers makes any other warranty or condition of any kind, whether express, implied, statutory or implied warranties or conditions of merchantability, satisfactory quality and fitness for a particular purpose. We disclaim all other warranties, express, implied, statutory or otherwise, including without limitation, the warranties of merchantability for a particular purpose. Some states do not allow disclaimers of implied warranties, so this disclaimer may not apply to you. To the extent such warranties cannot be disclaimed under the laws of your jurisdiction, we limit the duration and remedies of such warranties to the duration of this express limited warranty.

Our responsibility for defective goods is limited to repair/replacement or refund as described below in this warranty statement.

Prinics Co., Ltd. ("We") may use this warranty. We extend this limited warranty only to the customer who originally purchased the product ("You"). It does not extend to any subsequent owner or other transferee of the product.

This limited warranty does not cover any damage due to: (a) transportation; (b) storage; (c) improper use; (d) failure to follow the product instructions or to perform any preventive maintenance; (e) modifications; (f) unauthorized repair; (g) normal wear and tear; or (h) external caused such as accidents, abuse, or other actions or events beyond our reasonable control.


### Extent of limited warranty

This Limited warranty applies to above mentioned products. We warrant that above products specified will be free from defects in materials and workmanship for the duration specified above. KODAK Instant Camera Period begins on the date of product. If we receive during the applicable warranty period, notice of a defect in any product which is covered by the warranty, we shall either repair or replace the product at our option. We shall have no obligation to repair and replace until the customer returns the defective product to us.

To obtain warranty service, you must contact us by email at [support@kodakphotoprinter.com](mailto:support@kodakphotoprinter.com) for supports during the warranty period to obtain a defective merchandise authorization ("DMA") number. Please note that customer is responsible for shipping charges for service request. No warranty service will be provided without a DMA number

[www.kodakphotoprinter.com](http://www.kodakphotoprinter.com)

Made in Korea  
©Prinics Co., LTD.



The Kodak trademark, logo and trade dress are used under license from Kodak.

# Any questions?

In case you need any assistance,  
please send an email to  
[support@kodakphotoprinter.com](mailto:support@kodakphotoprinter.com).

The Kodak trademark,  
logo and trade dress are used under license from Kodak.  
[www.kodakphotoprinter.com](http://www.kodakphotoprinter.com)


## FCC (Federal Communications Commission)

**FC** This device complies with part 15 of the FCC Rules.  
**CE** Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) This device must accept any interference received,  
including interference that may cause undesired operation.

**Caution:** Any changes or modifications to the equipment not expressly  
approved by the party responsible for compliance could void user's  
authority to operate the equipment.

This appliance and its antenna must not be co-located or operation in conjunction  
with any other antenna or transmitter.

The device has been evaluated to meet general RF exposure requirement.  
The device can be used in portable exposure condition without restriction.

The Kodak logo, consisting of a red square with a yellow stylized 'K' inside, and the word 'KODAK' in yellow capital letters to the right of the 'K'.