

Remark	Description	Editor	Date

A

A

B

B

HNK Router App User Guide

1. Download the HNK Router App and connect to the wireless network to get started with Smart Wi-Fi.

2. Please select "Smart Wi-Fi" as the connection type.

3. Set the Wi-Fi name and password for the network.

4. Please confirm your network settings and finish setting up.

Note: Set up the router with the web browser before using the APP to manage your Wi-Fi network.

Manage the Dual-band feature on the HNK Router App

1. Login to the HNK Router App to start managing your network.

2. Tap "Open" in the network list of your network.

3. Tap "Basic Configuration" in the network list.

4. An option will be shown under "Basic Setting".

5. Select "Wi-Fi Advanced Setting" to start manage the dual band feature of your router.

More Features

In addition to some of the settings described above, there are more features including QoS, DNS, Parental, Port Mapping, Smart Home, etc. For more instructions, please refer to the website: <http://hkn.com>.

E. Hardware

FAQ

1.0 Why can't I log in to the web of the router?

A: Step 1: Please confirm that your device connects to the HNK RAX1810 router.

Step 2: Please confirm your IP address is "192.168.0.1".

Step 3: Please confirm both the user name and password is "admin".

2.0 How can I reset the router?

A: Method 1: When the power is on, using the router's "Reset" pin-hole to disconnect to restore the factory settings.

Method 2: Please log in to the management page (IP address is "192.168.0.1") and click the "Management System Administrator" button. Then click on "Restore Factory" button to restore the factory settings.

3.0 How can I change my admin password?

A: Please log in to the management page (IP address is "192.168.0.1") and click the "Management System Admin" in the interface, you can change the admin password.

4.0 How to change my network name and password?

A: Please log in to the management page (IP address is "192.168.0.1") and click the "Settings" sub-function" in the interface, you can change your network name and password.

FAQ

3.0 How can I select my connection type?

A: Please log in to the management page (IP address is "192.168.0.1") and click the "Settings" sub-function" in the interface, you can choose your connection type.

Quick Installation Guide
RAX1810 Smart Wi-Fi Router

封面

此资料为内部文件, 仅供内部使用, 未经许可, 不得复制或传播。
如有任何疑问, 请洽: 400-888-8888

1. Set up the new router for internet access

Step 1: Check the IP address.
Launch a web browser from a computer or mobile device that is connected to the network.

2. Enter "192.168.0.1" to open a high window.

3. In the Password field, type the password to log into the management interface. The default user password is admin.

Note: The password you entered in this step is not the Wi-Fi password. It is the password for the router's management interface. If you cannot log into the web of the router, refer to the Q1 in FAQ.

2. Open the configuration wizard page

If this is the first time using the router, the page will automatically jump to the configuration wizard page. If the configuration wizard page does not show up, you can click the "Settings/Router" for your router setup.

Step 3: Configure your internet connection
Please select your internet connection type.

3. Set your device admin password

By default, your new device does not have a password configured for administrator access to the Web-based configuration utility. To secure your new device, please create a password before boot.

4. Check out the setting summary and finish initial setting

A setting summary will show up to you for checking. If everything is okay, click on "Next" to finish the initial setting steps.

Guest Network

1. Please log in to the management page. The IP address is "192.168.0.1".

2. Click "Settings" > "Wireless" > "Guest Zone" is the guest network settings page.

3. Configure the settings for your guest, including time limit, internet resources, and Wi-Fi settings.

4. Click on the "Save" button to save your configuration settings. Then you can separate your network into two parts.

Dual Band Settings

1. Please log in to the management page. The IP address is "192.168.0.1".

2. Click "Settings" > "Wireless" for the wireless settings page.

3. Click "Dual Band Control" button. Then choose on the dual band settings.

4. Configure the router 2.4G or 5G Wi-Fi SSID and password.

5. If you want more settings of the dual band, click on "Advanced Set Up"

Then the advanced settings interface will show up.

FCC Radiation Exposure Statement:

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

FCC Warning
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient the antenna.
- Increase the separation between the equipment and receiver.
- Move the equipment or receiver to a different location from that which the receiver is connected.
- Consult the manufacturer for more information.
- Contact the manufacturer for more information.
NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Scan to download the HNK Router App or get it on App Store or Google Play.

封底

C

C

NOTES(技术要求):

- 成品尺寸: 200*145mm, 展开尺寸: 1000*145, 公差±2mm.
- 材质: 105g亚粉纸
- 印刷要求: 四色印刷
- 装订要求: 风琴折, 封面封底在外
- 原材料及后处理工艺均能满足ROHS2.0, HF及WEEE的要求.

DIM		TOL±					CUSTOMER:		深圳市迈腾电子有限公司 SHENZHEN MTN ELECTRONICS CO.,LTD www.mtncn.com	
RANGE		C1	C2	C3	C4		HNK			
0~6	0.1	0.1	0.1	0.15	0.2	TITLE: MANUAL	MODEL: MTO-WR1810AX	PART NO.:		
6~30	0.2	0.3	0.4	0.5	0.5					
30~80	0.25	0.5	0.9	1.2	1.2	UNIT: S mm	VER: A0	DRAW	丁慧明	DATE:2022-04-22
80~180	0.3	0.8	1.2	1.5	1.5	MAT' L /	SCALE 1:1	CHECK	郭立平	
180~315	0.5	1.3	1.8	3	3	FINISH /	SHEET 1/1	APPD	N/A	
315~500	0.7	1.5	2.5	4	4					
500~800	0.9	1.8	3	5	5					
ANG.TOL±		0°~30°/0.1°	30°~60°/0.3°	60°~90°/0.5°						