


4" Smart Slim Panel Light

D8AX4309WWCR

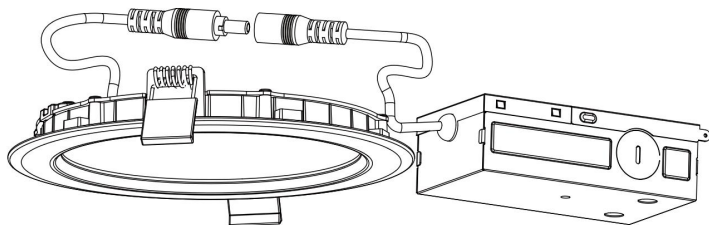

PLEASE READ THESE INSTRUCTIONS CAREFULLY AND RETAIN THEM FOR FUTURE REFERENCE.

The Slim Panel including a LED Lamp , a Warning Label and an installation instruction . Please check these items when unpacking.

WARNING: Failure to install the wire fixture or install replacement ballast in accordance with the National Electrical Codes (NEC), all applicable Federal, State and Local electrical codes, as well as specific U.L. safety standards for the intended working environment (location/application), may cause serious personal injury death and/or property damage.

IMPORTANT NOTE: The safeguards and instructions appearing in this page, are not meant to cover all possible conditions and situations that may occur. It may be understood that common sense, cautions and care are factors which cannot be built into any product. The person(s) installing, operating and responsible for the light fixture, must execute these factors.

THE PRODUCT MUST BE INSTALLED BY PERSONNEL FAMILIAR WITH THE STRUCTURE AND OPERATION AND ASSOCIATED HAZARDS ACCORDING TO THE APPLICABLE INSTALLATION SPECIFICATIONS.

WARNINGS

WARNING - Risk of fire or electrical shock. LED Slim Panel installation requires knowledge of luminaires electrical systems. If not qualified, do not attempt installation. Contact a qualified electrician.

WARNING - Risk of fire or electric shock. Do not alter, relocate or remove wiring, junction box, power supply or any other electrical components.

WARNING - Suitable for dry or damp location.


WARNING - To prevent electrical shock, please wear rubber shoes and work gloves when installing the slim panel.

WARNING - 5 Years' Warranty is limited to the repair or replacement of defective lamps identified by manufacturer. Damages caused by abuse, misuse are not covered in Warranty.

Installation Steps:

STEP1:

Turn off the power before installation. Remove the existing bulb and if necessary remove the existing trim. Open the hole on the mounting surface according to the size of fixture.

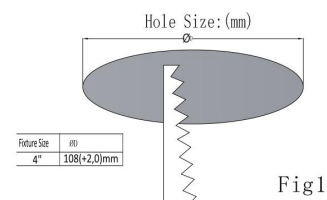

STEP2:

Open the junction box, connect the power cable, as shown in Fig 2.

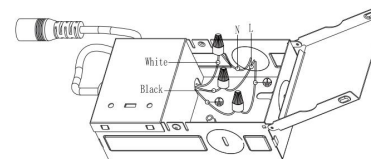


Fig 2

STEP3:

Connect the fixture with the power cable after fixing the junction box, as shown in Fig 3.


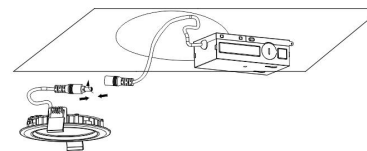


Fig 3


STEP4:

Install the fixture to the ceiling surface, as shown in Fig4.

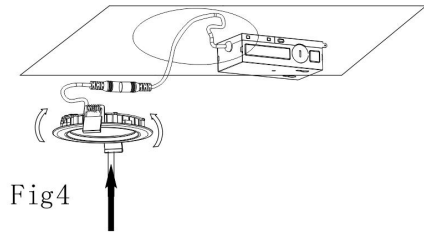

STEP5:

Turn on the power after installation to check if the fixture can work well, as shown in Fig5.

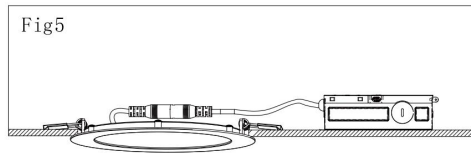

Download App

This product can be intelligently controlled via the Home Linking app, scanning QR codes or downloading mobile clients in the app store.



Google Play



APP Store

Add Device

1. Open the app, log in or register for an account to enter the home page.
2. Click [+] in the upper right corner and select [Add] to enter the adding process.
3. If adding failed, please reset the device and add again. Power on and off 5 times continuously. Reset will be successful when downlight flashing.

Device Parameters

Product Name: Smart Slim Panel Light
Model: D8AX4309WWCR
D8AX43(Device is added for the application)
for the application
Power: 9W
CCT: (2700K-5000K)+RGB
Brightness Range: 0%—100%
Voltage: 100-277V 50/60Hz
CRI: >90
Beam Angle: 100°
Color: White
Communication Method: Bluetooth Mesh

Disclaimer

Thank you for purchasing our product! By using this product, you hereby signify that you have read the Disclaimers and all warnings carefully and that you understand and agree to abide by the terms and conditions herein. The user should observe safe and lawful practices including, but not limited to, those set forth in this document. Our company therefore holds no liability for damages caused by force majeure, used by a third party, incorrect use, non-compliance with this user manual or intentional misconduct on the part of the user.

Except for the scope prohibited by the applicable laws, the company is not responsible for any incidental, indirect, special or consequential damages, including but not limited to the loss of profits, income or data due to the violation of explicit or implied warranties or conditions mentioned in this user manual.

Information in this user manual is for informational purposes only. It is subject to change without prior notice, due to the manufacturer's continuous development program. This document supersedes and replaces all information supplied prior to the publication hereof.

Seller: Shenzhen Kakawin Enterprise Co., Ltd.

Address: 302, 3/F, No. 2 Factory, 16 Kangzheng Rd, Danzhotou
Industrial Zone, Nanwan Str, Longgang, Shenzhen,
Guangdong, China.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.